



# OttLite B22FS Wireless Charging LED Lamp Instruction Manual

[Home](#) » [OttLite](#) » OttLite B22FS Wireless Charging LED Lamp Instruction Manual 



Wireless Charging LED Lamp with Colour Changing Base

CS2QCOOZ-UK

CS2QCG5Z

1649270


Model : B22FS



## Contents

- [1 B22FS Wireless Charging LED Lamp](#)
- [2 PRODUCT REGISTRATION FORM](#)
- [3 BATTERY REPLACEMENT](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)

## B22FS Wireless Charging LED Lamp

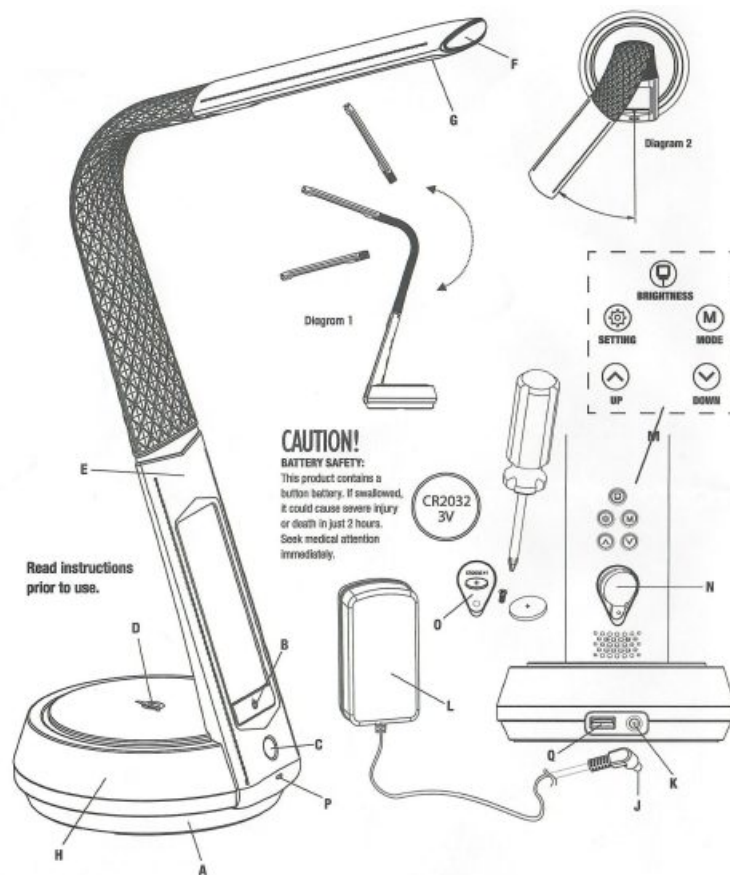

**CONGRATULATIONS!** You've purchased the finest in natural lighting technology with your new OttLite® product.

## PRODUCT REGISTRATION FORM

Please complete the enclosed Product Registration Form and return it today by mail, or register online by going to: [OttLite.com/warranty](http://OttLite.com/warranty)

**WARNING:** To prevent electric shock, make sure the lamp is not plugged in until all steps are complete.

**NOTE:** THIS UNIT IS FULLY ASSEMBLED

Remove lamp from packing, placing lamp body base (A) flat on a steady surface.

Connect power adapter input (J) into connector (K) in the rear-bottom of the lamp.

Plug the power adapter (L) into a standard household 230V outlet. Note: Only use with the supplied power adapter to avoid damage or fire.

Power switch (B) is a "touch" switch that controls ON/OFF power, the LED brightness settings and the colour mode function of the lamp.

To power the main light, slightly touch the switch (B) to achieve the following:

- Turn lamp "ON" to 1st brightness setting; touch the switch "once";
- for 2nd brightness setting; touch the switch "two-times";
- for 3rd brightness setting; touch the switch "three-times";
- to turn lamp "OFF"; touch the switch "four-times".

This lamp provides three colour modes. To adjust lighting colour mode slightly "press and hold" switch (B) for three seconds to switch light colour temperature mode; 5000°K, 2700°K, 4000°K.

Touch button (C) to turn on the colour changing base. When desired colour is shown, touch button (C) again briefly to maintain that colour, otherwise colours will shift continuously. Touch and hold button (C) to turn off the colour changing base.

To reposition the light, hold the lamp base (A) steady and grasp either lamp body (E) or shade (F) depending on needed adjustment.

Refer to Diagram 1 and 2 for lamp maximum adjustment range. NOTE: DO NOT FORCE the shade outside the allowable adjustment range as excessive adjustment may cause damage.

#### WIRELESS CHARGING INSTRUCTIONS:

Wireless charging requires a Qi-certified device. To determine if your device is Qi-certified, please visit the Wireless Power Consortium website.






To wirelessly charge a device, perform the following:

- Place the device, which supports Qi wireless charging standard, face up on the middle of the Qi wireless charging icon (D).
- When the device is centered on the Qi wireless charging area (D), a solid RED light (P) will come on noting charging mode active. NOTE: if RED light is blinking this indicates the device is not charging. Your device should show charging is taking place.
- Check charge level on your device periodically to determine when device is fully charged.

**NOTE:** Product DOES NOT provide any indication of when device is fully charged.

**CAUTION!** Device may become warm during charging. This is normal and part of the process. Charging times vary by device.

**REFER TO THE FOLLOWING ICON LEGEND FOR CONTROL PANEL (M), AS IT PERTAINS TO THE INSTRUCTIONS FOR VARIOUS SETTING FUNCTIONS BELOW.**

	"SETTING BUTTON" — to set time and calendar; in alarm mode, push to turn off alarm.
	"MODE BUTTON" – push to set alarm and snooze
	"UP BUTTON" — In setting mode, push to increase.
	"DOWN BUTTON" – In setting mode, push to decrease.
	"DISPLAY KEY" — Push display key for suitable brightness.

#### CALENDAR AND CLOCK SETTING:

**NOTE:** Control Panel (M) to set Calendar and Clock is located behind lamp body (E).

- Under normal mode, press "SETTING BUTTON" to enter setting mode, press "SETTING BUTTON" again for next setting. The sequence of setting is: HOUR — MINUTE — YEAR — DAY – MONTH.
- Press "SETTING BUTTON" to quit setting, or it will automatically quit to normal mode if idle for 60 seconds.
- Under normal mode, press "UP BUTTON" to switch between "12h" and "24h" display

#### ALARM & SNOOZE FUNCTION SETTING:

- Under normal mode, press "MODE BUTTON" to enter alarm mode.
- Under alarm mode, press "SETTING BUTTON" to enter alarm setting, press "SETTING BUTTON" again for next setting, the sequence of setting is: HOUR — MINUTE — SNOOZE — MUSIC and then exit.

**NOTE:** There are 8-music tones to select.

- Press “UP BUTTON” and “DOWN BUTTON” to adjust alarm time sequence.

Under alarm mode, press “UP BUTTON” and “DOWN BUTTON” to turn ON/OFF alarm and snooze function. “MUSIC NOTE” icon will light up on the display to indicate alarm is set. “Zz” will appear on the display to indicate snooze is activated.

Snooze can be set from 1 to 60 minutes.

- When alarm time reached, alarm will ring for 1-minute, then snooze and ring again. Press “SETTING BUTTON” to turn OFF alarm or touch “UP BUTTON” and “DOWN BUTTON” to activate snooze. NOTE: Snooze defaults to 60-minutes, if loss of power occurs.

## **TEMPERATURE SWITCH SETTING:**

- In normal mode, touch “DOWN BUTTON” to switch between °F and °C display.

## **CLOCK DISPLAY BRIGHTNESS:**

- Press the “DISPLAY KEY” located above the “SETTING BUTTON” and “MODE BUTTON” to change the clock display brightness level.

## **SAFETY WARNING : TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS**

Turn lamp off and WAIT UNTIL LAMP HEAD (F) IS COOL before handling.

The LED panel (G) might get hot after several hours of continuous use DO NOT place your hands directly on LED light panel.

Never use with an extension cord unless the plug can be fully inserted into the receptacles in the extension cord.

Do not alter the plug.

The lamp head included with this unit cannot be replaced by the consumer.

INDOOR USE ONLY.

**NOTE:** The important safety instructions appearing in this instruction sheet are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care must be used with any electrical product.

## **BATTERY REPLACEMENT**

- This lamp uses a CR2032 battery. For battery replacement see diagram. Battery compartment (N) is located behind lamp body (E).
- To remove/install button cell battery: use a screwdriver to remove battery compartment door (O). Button cell battery is to be installed with the “+” or flat side facing upward.

**BATTERY DISPOSAL:** Battery disposal should be in compliance with local regulations pertaining to the disposal of hazardous materials. DO NOT INCINERATE.

## **SAFETY WARNING :**

- **CAUTION:** DO NOT INGEST BATTERY; CHEMICAL BURN HAZARD!
- This lamp contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just two hours and can lead to death.

- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

**NOTE:** Coin/button cell batteries are small, single cell devices having a diameter greater than their height.

**CAUTION!** IF THE EXTERNAL FLEXIBLE CABLE OR CORD OF THIS LUMINAIRE IS DAMAGED, IT SHALL BE EXCLUSIVELY REPLACED BY THE MANUFACTURER OR ITS SERVICE AGENT OR A SIMILAR QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.

## Documents / Resources



[OttLite B22FS Wireless Charging LED Lamp](#) [pdf] Instruction Manual  
B22FS Wireless Charging LED Lamp, B22FS, Wireless Charging LED Lamp, Charging LED Lamp, LED Lamp, Lamp

## References

- [User Manual](#)

### Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.