



OUELLET INS598 High End Baseboard Heater Instructions

[Home](#) » [OUELLET](#) » OUELLET INS598 High End Baseboard Heater Instructions 

Contents

- [1 OUELLET INS598 High End Baseboard Heater](#)
- [2 Product Usage Instructions](#)
- [3 INSTRUCTIONS](#)
- [4 IMPORTANT INSTRUCTIONS](#)
- [5 INSTALLATION INSTRUCTIONS](#)
- [6 OPERATING INSTRUCTIONS](#)
- [7 MAINTENANCE INSTRUCTIONS](#)
- [8 WARRANTY](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



OUELLET INS598 High End Baseboard Heater



Product Specifications:

- Product: High-End Baseboard Heater
- Material: Copper branch circuit conductors
- Recommended Use: Indoor

- Power Source: Electrical
- Installation: Wall-mounted
- Safety Feature: Not compatible with ground fault circuit interrupter (GFCI)

Product Usage Instructions

Installation:

1. Cut a hole in the box along the hash lines and remove wire holder from the junction box.
2. Locate the locking device at the bottom center of the heater and withdraw the front cover by rotating it counter-clockwise.
3. Make electrical connections following local and national codes, ensuring to include the ground wire.
4. Install the relay or thermostat by removing the front cover and the junction box cover.
5. Check wire connections at the junction box.
6. Fasten the baseboard to the wall using wood screws, tightening and releasing each screw by 1/2 turn.
7. Replace all covers before energizing the heater.

Important Safety Instructions:

1. Read all instructions carefully before installing or using the heater.
2. Avoid using the heater in areas with flammable materials or liquids.
3. Avoid direct skin contact with hot surfaces and keep combustible materials at least 3 inches away from the heater.
4. Ensure air intakes and exhaust remain unobstructed to prevent fire hazards.
5. Avoid inserting foreign objects into ventilation openings to prevent electric shock or fire.
6. Disconnect power at the main panel before any maintenance work on the heater.
7. Do not use the heater outdoors and follow all instructions provided in the manual.

Caution:

Keep electrical cords, drapes, and other furnishings away from the heater to prevent high-temperature accidents. Avoid storing flammable materials near the heater to reduce fire risks.

Frequently Asked Questions (FAQ):

• **Q: Can this heater be used in bathrooms?**

A: Yes, the heater can be used in bathrooms, but ensure that switches and controls are placed out of reach from bath or shower areas.

• **Q: What should I do if the heater stops working?**

A: Check for any loose wire connections or tripped circuits. If issues persist, contact a qualified electrician for further assistance.

• **Q: Is it safe to operate the heater overnight?**

A: It is recommended not to leave the heater unattended for extended periods, especially overnight. Ensure proper ventilation and follow safety guidelines provided in the manual.

INSTRUCTIONS

High-End Baseboard Heater

WARNING

When using electrical appliances, basic precautions should always be taken to reduce the risk of fire, electrical shock and injury, including the following.

Read carefully these instructions before installation, operation of the heater. Failure to adhere to the instructions could result in fire, electric shock, serious personal injury, and death or property damage. Review frequently for continuing safe operation and instruction of future users, if necessary.

IMPORTANT INSTRUCTIONS

1. Read all instructions before installing or using this heater. A heater has hot and arcing or sparking parts inside.
2. Do not use in areas where gasoline, paint or flammable liquids are used or stored.
3. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, like furniture, pillows, bedding, papers, clothes, and curtains at least 3 in. (76 mm) from the front of the heater. To prevent a possible fire, do not block air intakes and/or exhaust in any way whatsoever.
4. Do not use on soft surfaces, like a bed, where openings may become blocked.
5. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
6. To avoid possible electrical shock, disconnect all power at the main panel prior to wiring, cleaning, or servicing.
7. Do not use outdoors.
8. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury.
9. The heater has been designed and certified for ambient heating only. The maximum ambient operating temperature is 30 °C (86 °F).
10. The heater is not designed for use in a humid environment where condensation may form on the device.
11. The thermostat should not be considered an infallible device in cases where maintaining a temperature is considered critical. Examples: Hazardous material storage, computer server room, etc. In these particular cases, it is imperative to add a monitoring system to avoid the consequences of a thermostat failure.
12. If the product is damaged or has missing parts (e.g., dents, damaged or missing element fins), stop using the device immediately and replace it.

SAVE THESE INSTRUCTIONS

INSTALLATION INSTRUCTIONS

1. Cut a hole in the box along the hash lines. Remove wire holder (or knock-out) of the appropriate junction box.
2. Locate the locking device at the bottom center of the heater. Withdraw the front cover by rotating counter-clockwise the locking device with help of a tool through air inlet.
3. Make connections according to local and national codes and replace wire holder. (Do not forget ground wire.)
4. Install the relay or thermostat by removing the front cover and the junction box cover.
5. Check wire connection at the other junction box.
6. Fasten the baseboard to the wall using wood screws, tighten then release 1/2 turn.
7. Replace all covers before energizing.

IMPORTANT:

- Use only with copper branch circuit conductors.
- For bathroom use, the heater must be installed so that switches and other controls cannot be touched by anyone in the bath or shower.
- This product is not recommended with the ground fault circuit interrupter (GFCI). The humidity in the air can generate a leakage current higher than the limit of the GFCI which will cause the product to stop.
- Do not install heater against combustible low-density cellulose fiberboard surfaces.
- Do not install this heater below and electrical convenience receptacle.
- For bathroom use, the heater must be installed so that switches and other controls cannot be touched by anyone in the bath or shower.
- For maximum satisfaction an air flow of 3 in. (76.2 mm) clearance is recommended.
- Also allow 1 in. (25.4 mm) clearance on top and bottom of drapes when drapes cover wall.

CAUTION:

- High temperature, keep electrical cords, drapes and other furnishings away from the heater. Keep combustible materials, like furniture, pillows, bedding, papers, clothes, and curtains at least 3 in. (76 mm) from the front of the heater. To reduce the risk of fire, do not store or use gasoline or other flammable vapors and liquids in the vicinity of the heater.
- In addition to ensuring that the clearance distances set out above are respected, ensure that the framing materials, insulation, and finishing which are likely to be in contact with or close to the device can withstand temperatures of at least 90 °C (194 °F).

OPTIONS:

- TRIAC: Caution, for line voltage, use supply wires suitable for 90 ° C (194 °F).
- All heating equipment and options must be installed in accordance with local and national codes.
- Refer to the instruction supplied with the option.

INTERCONNECTION:

- The connection boxes and the wiring channel are approved for interconnection of baseboard heaters and components which are on the same heating branch circuit.
- The heater junction box volume without options is 46 in.³ (760 cm³).

OPERATING INSTRUCTIONS

1. The heater must be properly installed before it is used.
2. Turn the power on at the circuit breaker panel.
3. Built-in thermostat (optional): to set thermostat at the desired temperature, follow these steps:
 - Set thermostat at maximum temperature (turn clockwise).
 - When the desired temperature is reached, turn the thermostat counter-clockwise slowly until you hear a "click".

- The thermostat will keep this room temperature.
4. Built-in thermostat with control knob, the setting can be done with the supplied knob, located on the front cover.
 5. Built-in tamperproof thermostat: the setting can be done through the louvers on top cover with a small slotted screwdriver.

MAINTENANCE INSTRUCTIONS


- Once a year or at the need, remove the front panel and use a vacuum cleaner to remove the dust accumulation inside the heater and through openings of the front panel.
- Before cleaning, make sure the power has been turned off at the circuit breaker panel.
- Wait until the housing and heating element cool before performing maintenance.
- Remove the front panel.

CAUTION: Fins on the element are sharp – Do not touch.

- Replace all covers before energizing.
- Any other servicing should be performed by a qualified service personnel.

WARRANTY

Please refer to the product sheet on the manufacturer's website.

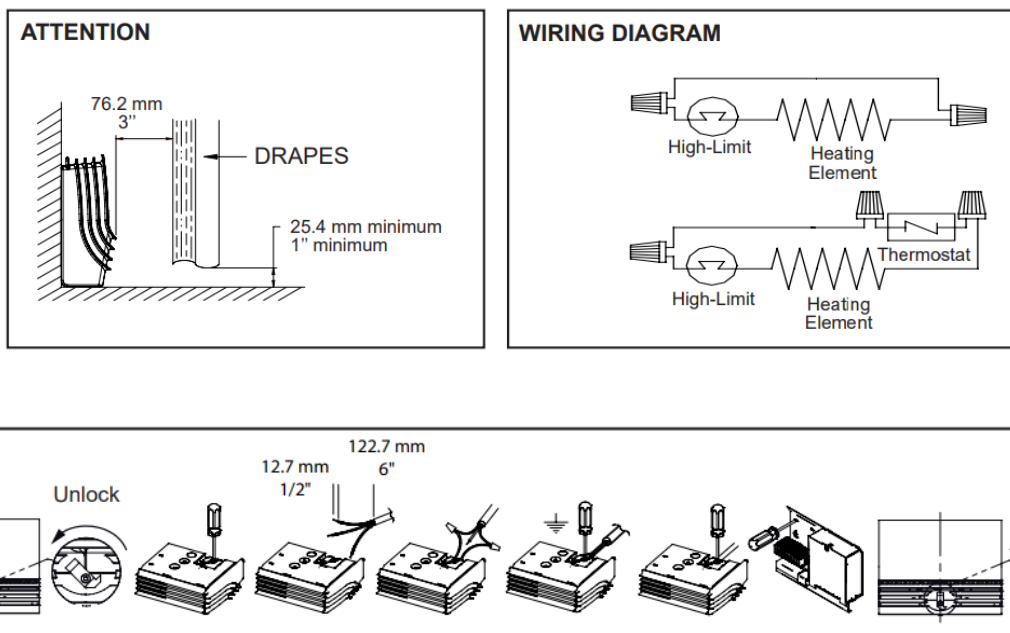

INS598-201205-03

Documents / Resources



[QUELLET INS598 High End Baseboard Heater](#) [pdf] Instructions

INS598 High End Baseboard Heater, INS598, High End Baseboard Heater, End Baseboard Heater, Baseboard Heater, Heater

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.