



## **Contents** [ [hide](#) ]

- [1 OURSTONE FC70 Dash Camera](#)
- [2 PRODUCT INFORMATION](#)
- [3 Package Contents](#)
- [4 Appearance](#)
- [5 Key and function](#)
- [6 Buttons and Functions](#)
- [7 Playback Interface](#)
- [8 Recording Mode](#)
- [9 APP and WiFi Function](#)
- [10 Application Homepage](#)
- [11 How to Play Using a Computer](#)
- [12 Installation](#)
- [13 FCC](#)
- [14 FAQs](#)
- [15 Documents / Resources](#)
  - [15.1 References](#)

# OURSTONE

## OURSTONE FC70 Dash Camera

 


## PRODUCT INFORMATION


### Notice

Please read this manual carefully before operation and keep it properly for future reference. If you encounter any issues during operation, this manual will provide assistance. Improper installation will void the manufacturer's warranty. This installation guide does not apply to all types of vehicles and serves only as a general system installation guide. If you are unsure about installing the device yourself, please consult an experienced technician. Be sure to read and understand local laws and regulations regarding cameras and their use in vehicles. Laws may vary by state. Do not obstruct your view of the road or interfere with the proper deployment of airbags in the event of an accident. When not in use, disconnect the vehicle adapter from both the 12/24V DC power socket and the device itself. Use only a soft, dry cloth to clean the device. For stubborn stains, dilute a neutral detergent in a 1:5 or 1:6 ratio and apply it to a soft cloth for cleaning. Please note that chemicals such as alcohol, thinners, and benzene may damage the device's coating or surface. Avoid touching the lens to prevent damage. The recorded videos from this device are for personal use only. Do not adjust the device controls while driving, as this may distract you and compromise driving safety.

## Package Contents

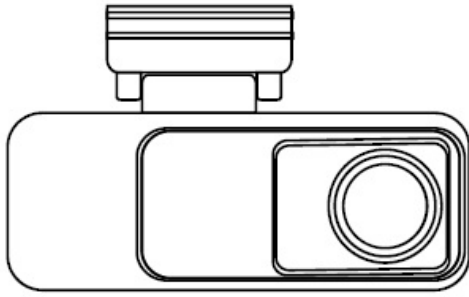

4K Dash Cam

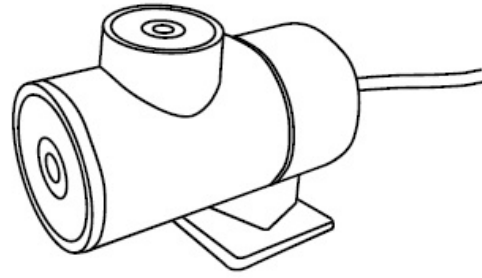 


1080P Rear Camera



Power Supply Cable with Car Charger



 Rear Cam Cable




Electrostatic  
Sticker\*2



Tool




 Cable Clips\*5

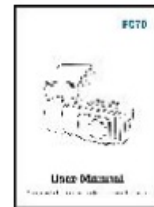

User Manual

## Appearance

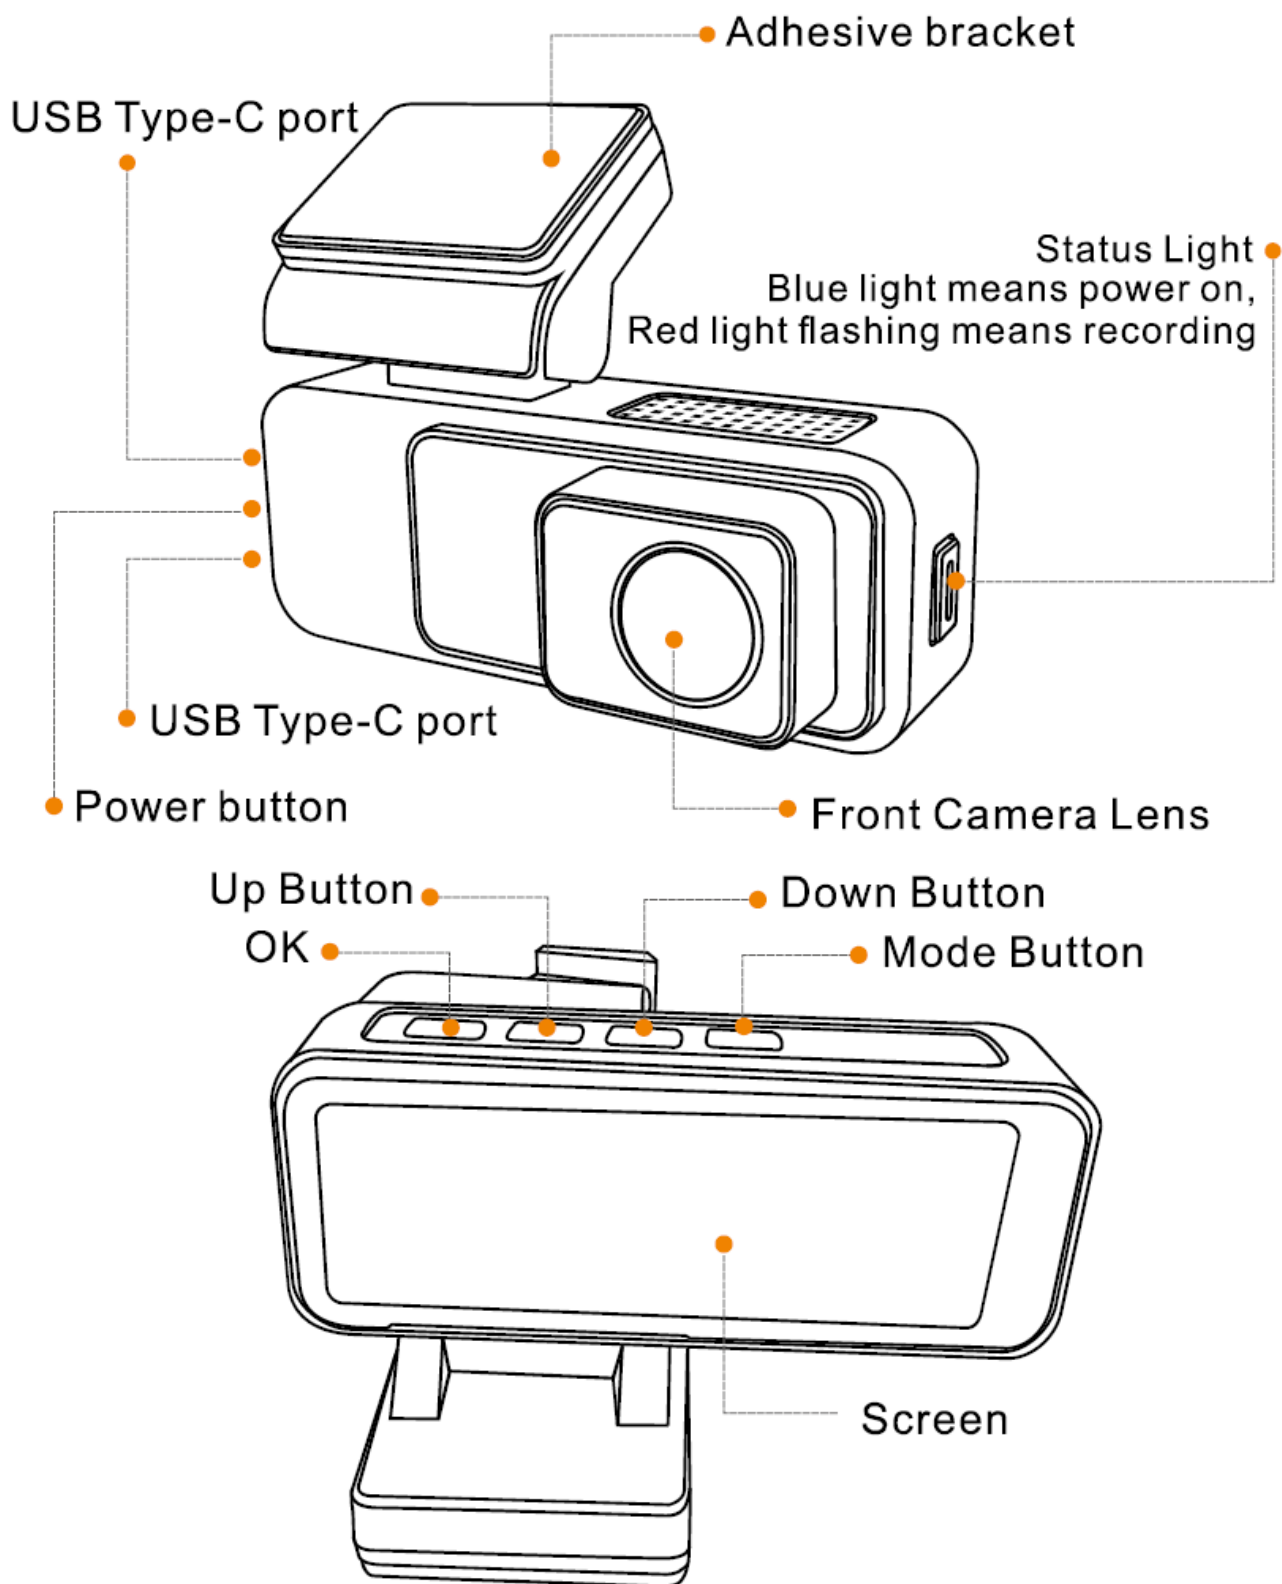 

## Key and function

### • Power Button

1. Press and hold for 3 seconds to power on/off.
2. Short press to turn the screen on/off.

### • Menu Button

1. Short press to enter system settings.

2. Press and hold for 3 seconds to access the file

- **Up Button**

1. Short press to switch between front and rear cameras.
2. Press and hold for 3 seconds to enable/disable Wi-Fi.

 
- **Down Button**

1. Press and hold to fine-tune the camera image up/down.
2. Short press to enable/disable voice recording.

- **OK Button**


1. Short press to start/stop recording.
2. User Interface Overview

## Buttons and Functions

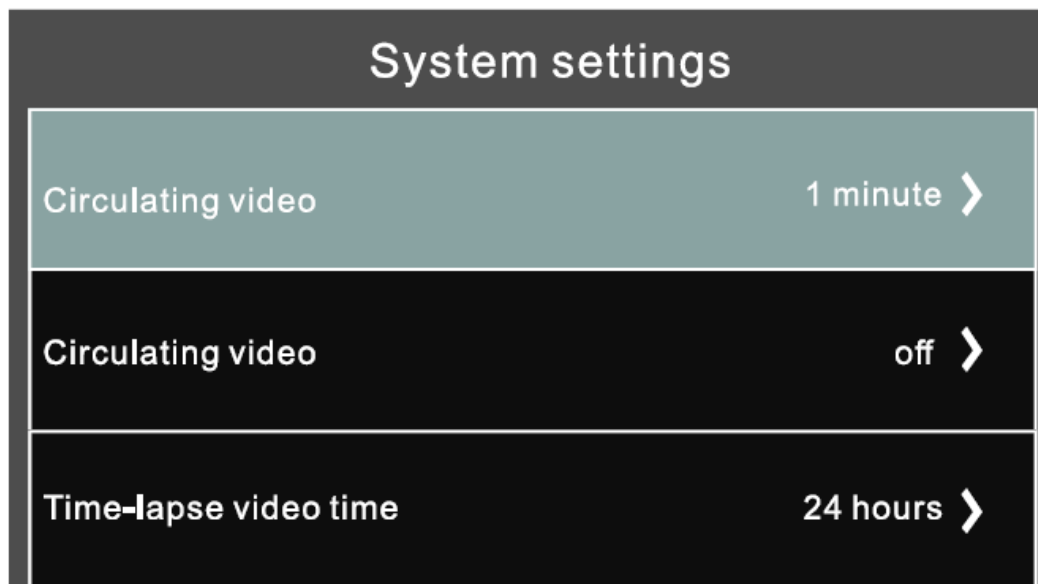

Management and front/rear camera video playback.

## Recording

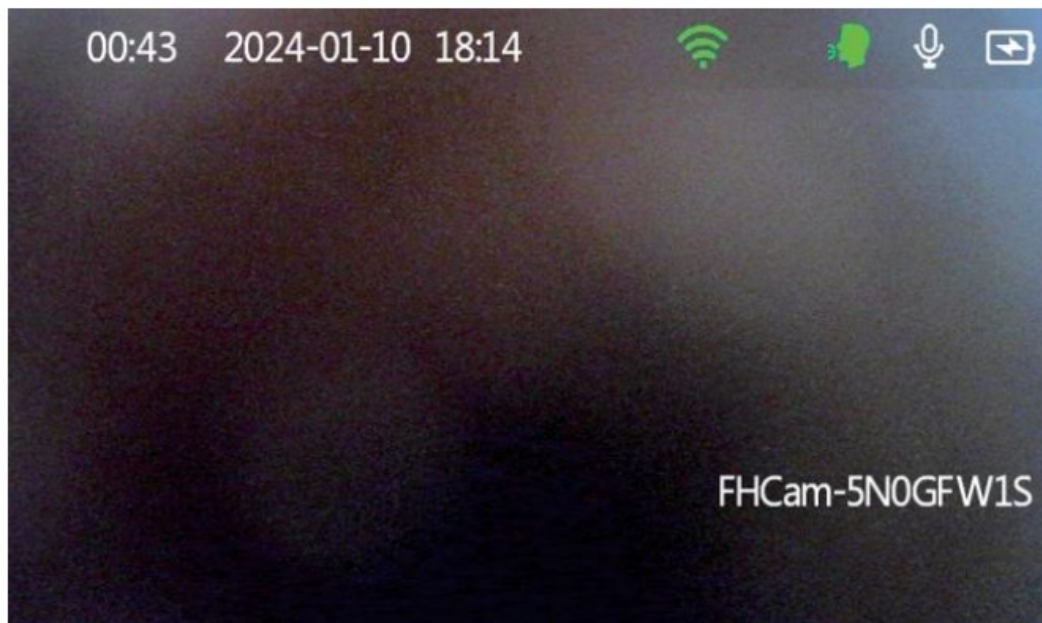 

- Loop Recording: Off, 1 minute, 2 minutes, 3 minutes.
- Time-lapse Monitoring: Off, 1 second, 2 seconds, 3 seconds.
- Time-lapse Recording Duration: Off, 12 hours, 24 hours, 48 hours.
- Recording Audio: Off, On.
- Collision Sensitivity: Off, Low, Medium, High.
- Parking Mode: Off, Low, Medium, High.
- Time Watermark: Off, On.
- Rear Mirror Image: Off, Preview Mirror, Recording Mirror, All Mirror.
- License Plate Number: Off, On.
- Screen Sleep: Off, 10 seconds, 30 seconds, 60 seconds.
- Button Sound: On, Off.
- Speaker Volume: Off, Low, Medium, High.
- Power On/Off Sound: On, Off.
- Language: Simplified Chinese, Traditional Chinese, and multiple languages.
- Time Settings: System time settings.
- Voice Recognition: Off, On. (Voice commands include: Turn on screen, Turn off screen, Take a photo, Start recording, Stop recording, Start front recording, Start rear recording, View all, Lock video, Turn on hotspot, Turn off hotspot.)
- Smartphone Connectivity: Off, On.
- Disk Format: Confirm, Cancel.
  - **Note:** Formatting will delete all files on the storage card (including protected files).
  - Once formatted, files cannot be recovered. Please back up important files before

proceeding.

- Restore Factory Settings: Confirm, Cancel.
  - Selecting “Confirm” will restore system default values.
- About: Version information.


## Playback Interface







 
File management			
Contents	Video	Video-locked	Photo
Before		20250312_1475_f.ts	 
Back		20250312_1476_f.ts	 
		20250312_1477_f.ts	 

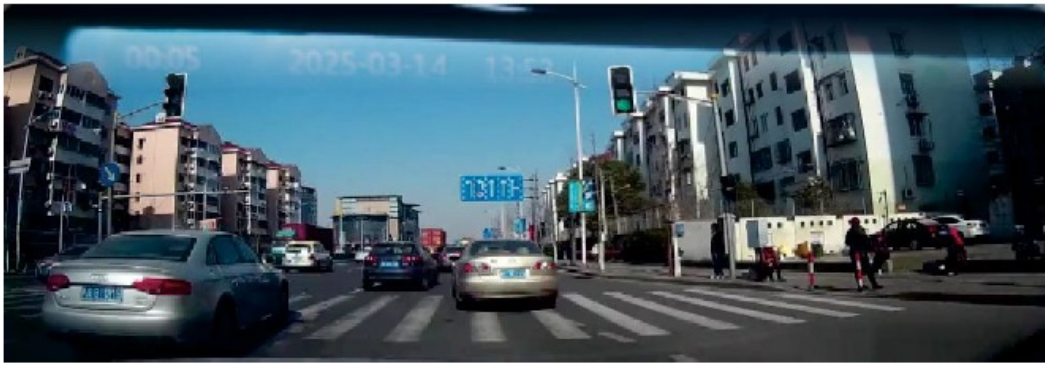1. Press and hold the Menu button for 3 seconds to enter playback mode.
2. Press the Up or Down button to select the recorded video files from the front or rear camera, then press the OK button to enter the recording folder.
3. Press the OK button to watch the recorded video.
4. Press the Menu button to exit, then use the Up or Down button to select Video – Lock or Photo options.
5. Select the recording folder and press and hold the Menu button to delete the current file or lock the current file.

## Recording Mode





	Display Voice Recording Status	
	Enter Menu	
	Power On	
	Blue LED Flashing: Recording Video / No Blue LED: Not Recording Video	
	Loop Recording	1/3/5 Minutes
	Wi-Fi	On/Off
	Version	Software Version

## APP and WiFi Function

### APP QR Code

- Turn on the dash cam's Wi-Fi, and the screen will display the Wi-Fi name (SSID) and password.
- Open the app > Follow the steps to go to the Wi-Fi connection interface> Find the dash cam's Wi-Fi > Enter the password to connect (the default password is 12345678).
- After successfully connecting to Wi-Fi,
- return to the app to proceed with the operation.

 




## View/Download/Delete/Share Videos

1. Tap the icon on the main interface to view video and image files.
2. Press and hold a video file to select it, then choose to download or delete.
3. Return to the app's home page, go to Album> Open and watch/share the video.

## Application Homepage

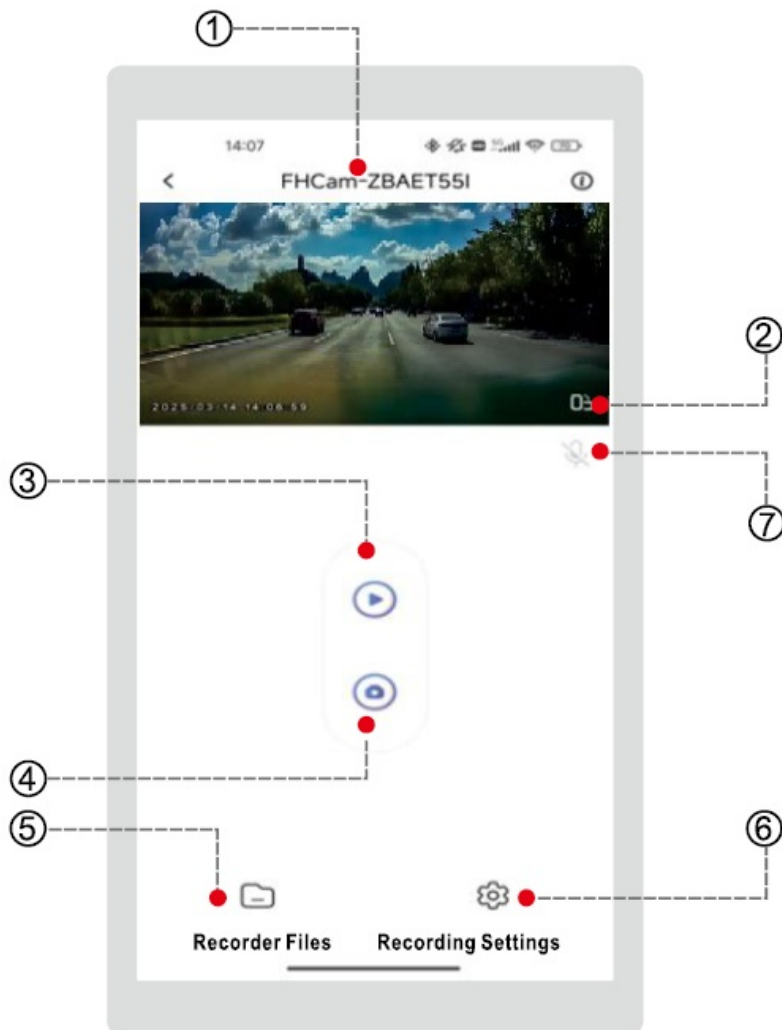

1. Local Wi-Fi Name

2. Toggle Landscape/Portrait Mode
3. Pause/Start Recording
4. Take Photo
5. Recorder Files
6. Recorder Settings
7. Turn On/Off Audio Recording

## How to Play Using a Computer

- Custom Playback Mode:
- In Settings> Video Playback Mode



You can choose different playback modes and adjust playback speed, among other features.

1. Video Playback Window (Front)
2. Video Playback Window (Rear)
3. Playback Control Panel
4. Playlist

### Notes:

- If the video files for the front and rear sections are recorded and loaded simultaneously, they can be played separately in a split-screen format.
- When you find the desired video file, press and hold the left mouse button and drag the file to the video playback window to play.

 
## Installation

## Warning

- Please ensure all cameras and wires are properly connected before turning on the dashcam screen, otherwise, the cameras will not function correctly. Follow the instructions below for the first time installation of the dashcam.
- Scan the QR code on the right to watch the installation tutorial video.

## Insert the Memory Card

- Insert the storage card into the dashcam, ensuring the correct orientation with the gold contact points facing the dashcam screen.
- Push the storage card into the slot until you hear a “click” sound, indicating it is properly inserted.

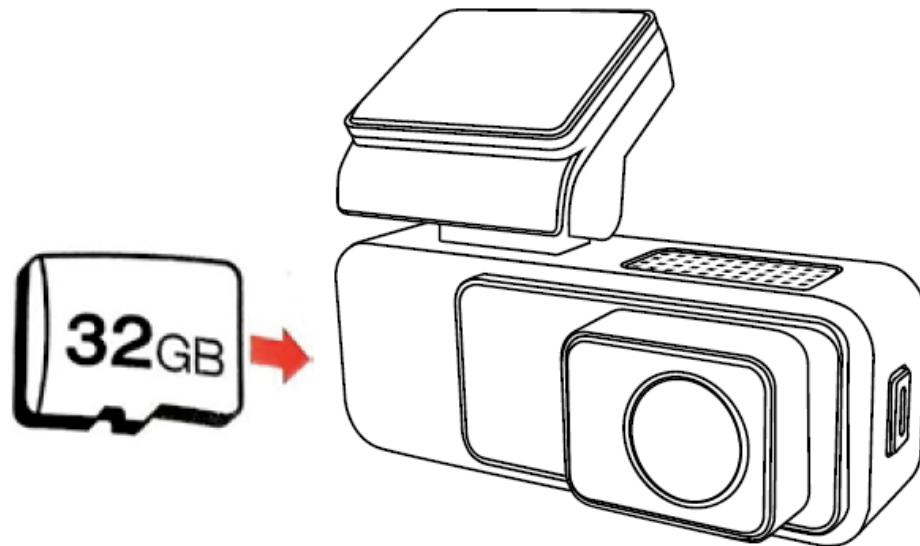


## Install the front camera.

1. Please perform a desktop test before officially installing the dashcam to ensure all devices are working properly.
2. Find a suitable location on the windshield and clean the pre-installation area with a cloth.
3. Adjust the angle to record video with a better view.

## Install the rear camera:


1. Use a cloth to clean the area on the rear windshield where the rear camera will be installed.

 2. Peel off the static sticker and transfer it to the desired location.
3. Remove any air bubbles from the static sticker.
4. Peel off the adhesive backing of the rear camera and attach it to the static sticker.

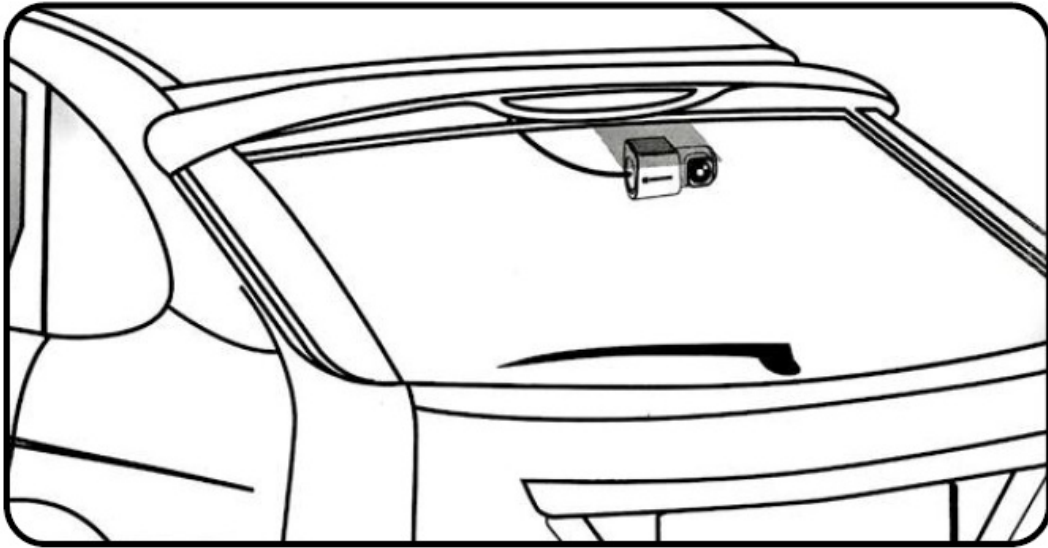


#### **Vehicle Cable Layout:**

 1. Connect the car charger to the cigarette lighter socket.
2. Connect the other end of the car charger to the dashcam.
3. Use a pry tool to route the power cable along the windshield and roof, then hide it under the A-pillar to avoid obstructing the driver's view and causing hazards.

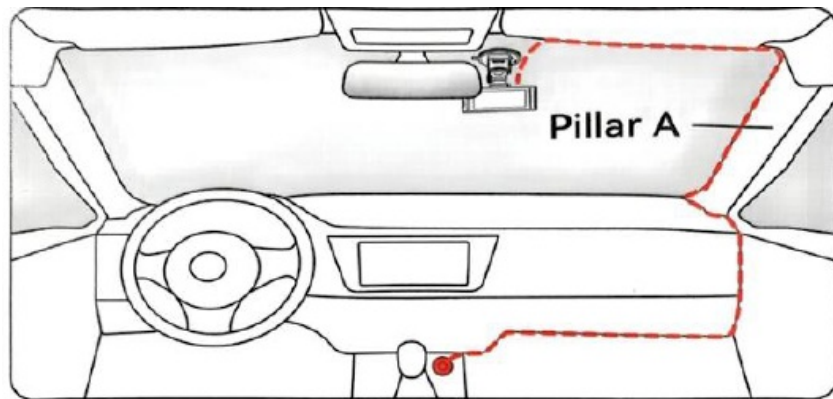

 4. Connect the rear camera cable interface to the rear camera cable.
5. Hide the rear camera cable in the gap between the windshield and the roof, between the body and the roof on the passenger side, and between the rear seat and the roof.

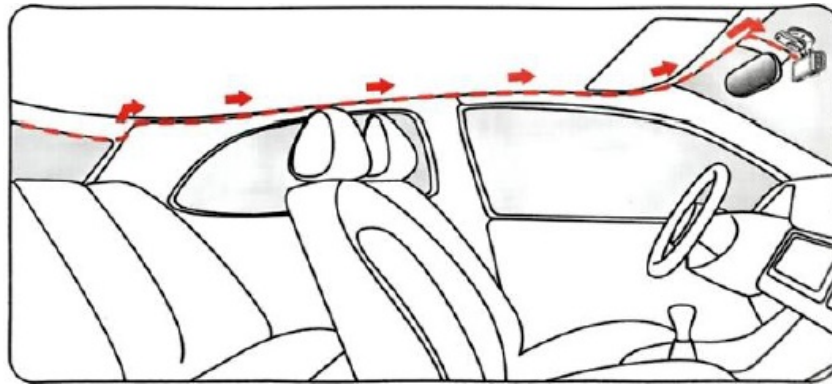

- **How to turn off the dashcam's sound effects?**

- Go to Settings> Tap Sound Effects> Turn off.
- When the sound effects are turned off, the power-on and off sounds will also be disabled.
- Why does my dashcam occasionally show “Card Error” or “Please

- **Format SD Card”?**

- Please follow these steps to check:
- Go to Settings> Format Reminder, and check if the regular format reminder is enabled.
- Format the SD card.
- Perform a factory reset and restart the dashcam.
- Update the firmware.

- **Device keeps restarting/cannot start?**

- Make sure you are using the included charger/cable.
- Remove the SD card, camera cable, and car charger, then reinstall them to check if the issue is caused by the accessories.
- Reset the device using the button on the bottom of the dashcam.
- If the problem persists, connect the dashcam to a computer using a USB cable. If the device starts, the issue might be with the car charger cable. If it still doesn't start after connection, the problem might be with the dashcam itself.
- Go to the official website to update the firmware.
- If the issue is not resolved, contact customer service for a replacement.

- **Why does the screen show “Mass Storage”?**

- “Mass Storage” appears when the dashcam enters transfer mode due to using a USB cable with data transfer capabilities. In this mode, only data transfer is available, and other functions do not work. For optimal performance, use the original car charger or a USB cable that does not support data transfer mode.

- **Why can't I connect to Wi-Fi?**

- Check the working range of the Wi-Fi, which is approximately 15 feet.
- Verify the Wi-Fi SSID and password, or check if other devices are connected to the Wi-Fi.
- Turn off mobile data, security software, and VPN on your phone.
- If the issue persists, contact customer support for assistance.

## **FCC**

### **FCC Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled

environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## FAQs


- **Q: What should I do if the device causes interference?**
  - A: If interference occurs, try reorienting the antenna or increasing the distance between devices. Contact a professional if issues persist.
- **Q: Can I modify the device for better performance?**
  - A: No, any modifications not approved may void your authorisation to operate the equipment. Consult the manufacturer for advice.


## Documents / Resources

	<a href="#">OURSTONE FC70 Dash Camera [pdf]</a> User Manual FC70, FC70 Dash Camera, Dash Camera, Camera
---	--

## References

- [User Manual](#)

 camera, Dash Camera, FC70, FC70 Dash Camera,

 OURSTONE OURSTONE

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name



Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.