



# OUTWATER DGL-RF-CAB-BK Invisible RFID Function Concealed Digital Lock Instruction Manual

[Home](#) » [OUTWATER](#) » OUTWATER DGL-RF-CAB-BK Invisible RFID Function Concealed Digital Lock Instruction Manual

## Contents [ [hide](#) ]

- [1 DGL-RF-CAB-BK Invisible RFID Function Concealed Digital Lock](#)
  - [1.1 INSTALLATION INSTRUCTIONS DGL-RF-CAB-BK](#)
- [2 Documents / Resources](#)
  - [2.1 References](#)
- [3 Related Posts](#)

 
 
 
 
## DGL-RF-CAB-BK Invisible RFID Function Concealed Digital Lock



EST. 1972 24 River Road • Bogota, NJ 07603 | Phone: 1.800.631.8375 |

[www.outwater.com](http://www.outwater.com)

## INSTALLATION INSTRUCTIONS DGL-RF-CAB-BK

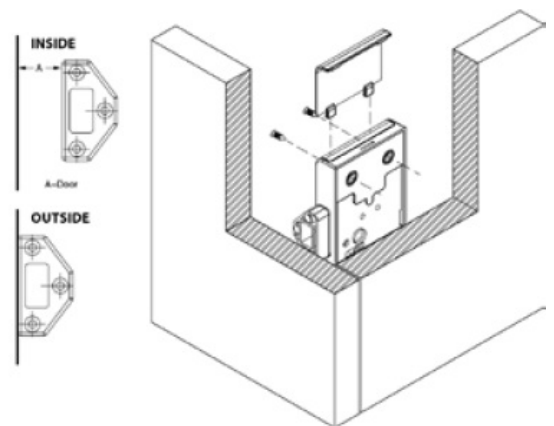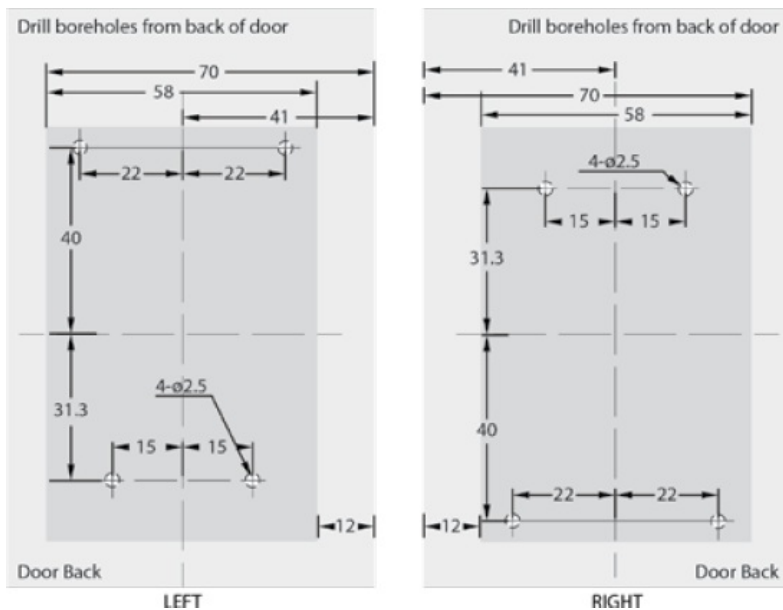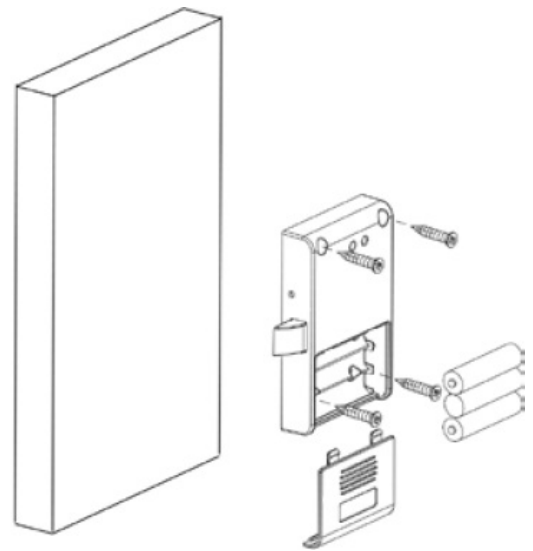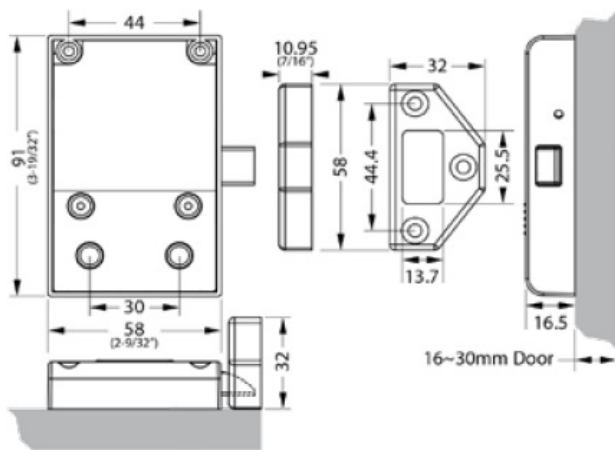

#### **MASTER USER:**

- Press B for 5 seconds
- Lock will flash blue light
- Tap management card against lock
- Lock will flash blue light again
- Management card is set

#### **USER CARD or SERVICE CARD:**

- Tap management card to lock
- Lock will flash light
- While flashing, tap user card to lock
- Light will flash light again
- User card is set (Can set multiple user cards at once)

 
#### **DELETING USER CARD or SERVICE CARD:**

- Place management card to the lock
- A blue light will flash with a beep sound, indicating lock is open
- Place a user card to the lock
- Light will flash with a beep sound
- User card is deleted when light goes off

**A long beep sound with a flashing red light indicates a low battery.**

Outwater Industries, Inc. assumes no liability for improper installation.

Documents / Resources
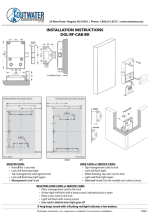
|   |  |
|---|--|
|  | <p><a href="#">OUTWATER DGL-RF-CAB-BK Invisible RFID Function Concealed Digital Lock</a> [pdf] Instruction Manual</p> <p>DGL-RF-CAB-BK Invisible RFID Function Concealed Digital Lock, DGL-RF-CAB-BK, Invisible RFID Function Concealed Digital Lock, Concealed Digital Lock</p> |
|---|--|

References

-  [Outwater Industries](#)