



OUTWATER LED-RGB36-MIN LED Controller Instruction Manual

Home » OUTWATER » OUTWATER LED-RGB36-MIN LED Controller Instruction Manual





OPERATING INSTRUCTIONS FOR LED-RGB36-MIN

Contents

- 1 Specifications:
- 2 Control Method:
- 3 Panel Specification and Connecting
- **Drawing**
- 4 Warnings:
- **5 Documents / Resources**
 - **5.1 References**
- **6 Related Posts**

Specifications:

Working Temperature: - 20-60°C

Product Size: L 62 x W 35 x H 23mm Net Weight 50g

Output: Three CMOS drain - open output

Max Load Current: 2A each color Supply Voltage: DC12~24V

Package Size: L 105 x W 65 x H 55mm

Gross Weight: 70g


Connecting Mode: Common anode

Control Method:

Use the RF remote to control the LED controller. The remote has 24 buttons, the functions of each are displayed in the table below.

Brightness + Speed Up	Brightness – Speed Down	OFF	ON
Static Red	Static Green	Static Blue	Static White
Static Orange	Static Pea Green	Static Dark Blue	7 Color Jumpy
Static Dark Yellow	Static Cyan	Static Brown	All Fade Out & Fade In
Static Yellow	Static Light Blue	Static Pink	7 Color Fade Change
Static Straw Yellow	Static Sky Blue	Static Purple	3 Base Color

Panel Specification and Connecting Drawing

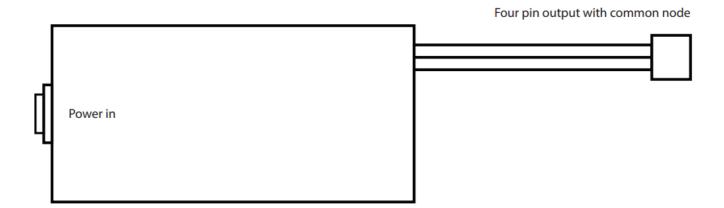

Warnings:

- 1. Supply voltage of this product is DC12V~24V. Never connect AC220V.
- 2. Never connect two wires directly in case of a short circuit.
- 3. Lead wire should be connected correctly matching the common node.
- 4. The warranty of this product is one year. During this period we guarantee replacement or repairing with no charge but exclude the artificial situation of damaged or overload working.

Web: www.outwater.com Phone: 1-800-631-8375

Documents / Resources



References

• **(1)** Outwater Industries

Manuals+,