



 
 
OVERMAX Multipic 2.5 LED Projector User Manual

[Home](#) » [OVERMAX](#) » OVERMAX Multipic 2.5 LED Projector User Manual 


OVERMAX
You • unlimited

User Manual




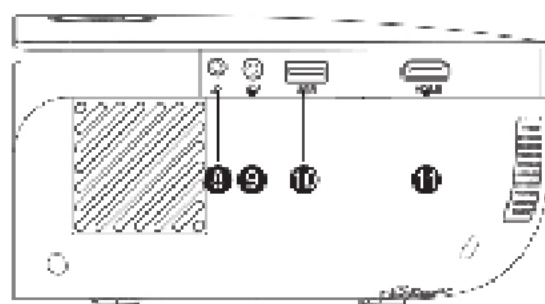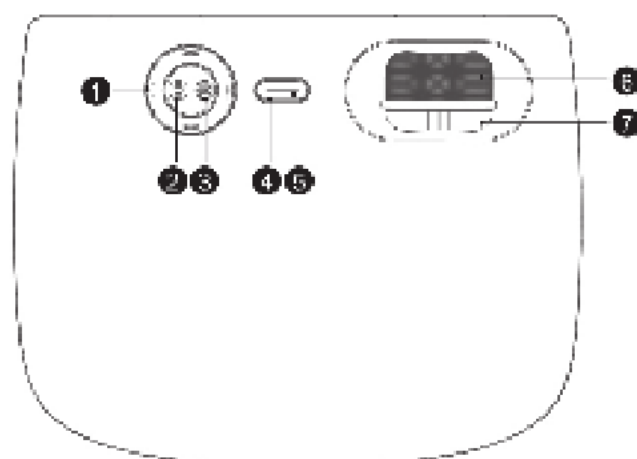

2

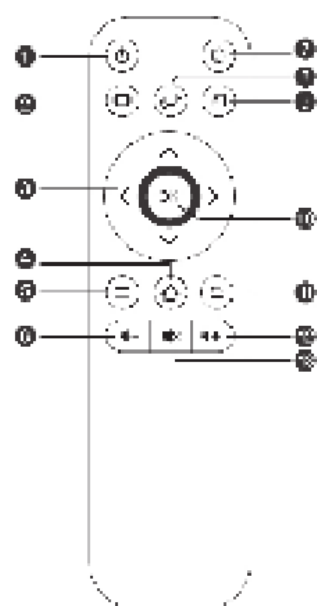 

3

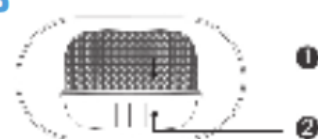 

4



X



X



✓

Picture Mode	Standard
Contrast	50
Brightness	50
Color	50
Tint	50
Sharpness	50
Focus	0
Color Temperature	Medium
Noise Reduction	Middle

The screenshot shows the Windows 10 Start menu. On the left is the Start button with the Windows logo. The main area contains several app tiles: File Explorer, Settings, Photos, Microsoft Edge, and a group of tiles for OneDrive, Mail, and Photos. The tiles are arranged in a grid-like fashion.

- 1 Introduction
- 2 How to install
- 3 How to use the device
- 4 Documents / Resources
 - 4.1 References
- 5 Related Posts

Dear customer!

Thanks to the use of high-quality materials and modern solutions, we provide you with a product perfect for everyday use. We are convinced that the product will satisfy your requirements as it has been manufactured with utmost care. Before you use the product, please read this operating manual carefully. Should you have any remarks or questions concerning the product, please do not hesitate to contact us:

Important:

Before you start using the projector, please read and then follow the guidelines presented in this operating manual. Wrong use of the device may lead to electric shock and raise fire risk. When using and maintaining the

projector, please adhere to the instructions below.

Note:

How to install

- To assure a better quality of image, use the projector in rooms with drawn curtains or in dark rooms.
- Be careful while using the projector. Dropping or failure may lead to, damage to parts or may cause the picture to be blurred and improperly displayed.
- Keep the device away from inflammable items.

How to switch on

- Be careful when using the power cable, do not excessively bend the cable; damage to the power cable may lead to electric shock or fire.

How to clean

- Before you start cleaning the device, unplug the power cable.
- Clean the housing with a wet cloth on a regular basis.
- To clean the projector lens, use a glasses tissue or soft fabric to avoid scratching.
- Regularly clean air holes and projector loudspeakers with a soft brush, otherwise ventilation may get blocked.

High temperature

- When the projector is on, make sure air holes of the device are not covered.
- This is why you should not place it on soft surfaces or cover with materials.
- Do not look into the lens while it is operating.

Additional information

- Do not place any liquids or heavy items on the projector.
- Do not disassemble the projector on your own.
- Do not keep the projector in humid and wet places – electric shock risk.
- It is advisable to turn the projector off after 6 hours of continuous operation.
- The product is intended for indoor use only.

To assure stability of heat dissipation, before you activate the projector, please adjust its height in the lower part with the use of a base adjustment knob. The product complies with the requirements of EU directives.



Pursuant to the Directive 2012/19/EU, this product is subject to selective collection. The product must not be disposed of along with domestic waste as it may pose a threat to the environment and human health. The worn-out product must be handed over to the electrics and electronics recycling center.

Description of projector parts (fig. 1)

1. Direction keys 2. Exit key 3. OK key 4. On/off switch 5. Power indicator 6. Image sharpness knob	7. Image shape adjustment knob 8. Audio output 3.5 mm 9. AV input 10. USB port 11. HDMI port
--	--

Remote control (fig. 2)

1. On/off key 2. Display proportions select key 3. Direction keys 4. Homepage 5. Menu 6. Volume down 7. Settings	8. Rotate screen 9. Select source 10. Confirm 11. Return key 12. Volume up 13. Mute
--	--

How to install

Standard settings

See the table below to adjust the size of picture and projector distance.

Ratio	16:9
Picture size (inches)	Distance (m)
50	2.
70	217
100	310
120	4.

- When installing, place the projector on a stable surface or suspend it under the ceiling. Do not cover or block air holes.
- If the distance between the projector and screen is lower than the minimum or is too large, the picture may be blurred.

How to use the device

Switching on and off

- When the projector is connected to the source of power, it switches into standby mode. The control light glows in red.
- To switch the projector on or off, press the on/off key at the top of the housing or press on/off key on the remote control. The projector is ready for operation when the control light turns blue.

Sharpness adjustment (fig. 3 and 4)

- Place the projector in a way that the lens is perpendicular to the wall or screen the image is to be displayed on.
- To correct the sharpness of the image, rotate the sharpness knob on the top panel (1) until the picture gets clear.
- If the image is not displayed perpendicularly, it will be distorted.

Picture shape adjustment

Distorted pictures in the shape of a trapezoid can be corrected with the use of a picture shape adjustment knob (2).

X – wrong shape

✓ - correct shape

Note! The projector features a vertical trapezoid correction only. There is no horizontal correction. Make sure the projector is positioned on a horizontal surface in relation to the picture.

Menu settings (fig. 5)

When you press the left/right key on the remote control or projector, the submenu will be displayed in the main interface, select the desired mode, and press „OK” to confirm.

Options to choose:

- PICTURE: picture mode, contrast, brightness, color, tint, sharpness, color temperature, noise reduction.
- SOUND: volume mode, bass.
- OTHER OPTIONS: language, ratio, projection mode, restore factory settings, update software, version.

Select source (fig. 6)

Step 1: Switch the projector on. The main interface will be displayed.

Step 2: Select a source from the list displayed, e.g. HDMI or AV, and confirm with the „OK” key.

Note! When there is no signal, press the source key on the remote control to choose the homepage or another source.

Multimedia support (fig. 7)

Step 1: Connect a USB cable to the projector.

Step 2: Select the file to be played in the main interface.

Supported formats

Video formats: MP4/MKV/MOV/WMV/RMVB/RM/AVI/FLV/TRP/VOB/3GP/ DIVX/TP/TS/MPG/M2TS/F4V/DAT

Audio formats: MP3/AAC/FLAC/WAV/WMA/M4A

Image formats: BMP/JPG/PNG/JPEG




File formats: TXT

Note: this device does not support sound coded in Dolby due to copyright protection.

The pictures are for reference only. The real design of the product may differ from the pictures presented.



Documents / Resources

<div> <div>Multipic 2.5</div> <div> Instrukcja obsługi / User Manual / Bedienungsanleitung / Manuale d'uso / Manuel de l'utilisateur / El manual de usuario / Gebruiksaanwijzing / Trouwboek supportcenter / Verenigde vertalingen / Kartrendőltírási útmutató </div>  <div>OVERMAX light technology</div> </div>	<p>OVERMAX Multipic 2.5 LED Projector [pdf] User Manual</p> <p>Multipic 2.5, LED Projector, Multipic 2.5 LED Projector</p>
<div> <div>Multipic 2.5</div> <div> Instrukcja obsługi / User Manual / Bedienungsanleitung / Manuale d'uso / Manuel de l'utilisateur / El manual de usuario / Gebruiksaanwijzing / Trouwboek supportcenter / Verenigde vertalingen / Kartrendőltírási útmutató </div>  <div>OVERMAX light technology</div> </div>	<p>OVERMAX Multipic 2.5 LED Projector [pdf] User Manual</p> <p>Multipic 2.5, LED Projector, Multipic 2.5 LED Projector, Projector</p>
<div> <div>Multipic 2.5</div> <div> Instrukcja obsługi / User Manual / Bedienungsanleitung / Manuale d'uso / Manuel de l'utilisateur / El manual de usuario / Gebruiksaanwijzing / Trouwboek supportcenter / Verenigde vertalingen / Kartrendőltírási útmutató </div>  <div>OVERMAX light technology</div> </div>	<p>OVERMAX Multipic 2.5 LED Projector [pdf] User Manual</p> <p>Multipic 2.5 LED Projector, Multipic 2.5, LED Projector, Projector</p>

References

- [Overmax - You unlimited - Shop Overmax - You unlimited](#)