



OVERMAX Multipic 3.6 Projector LED User Manual

[Home](#) » [OVERMAX](#) » OVERMAX Multipic 3.6 Projector LED User Manual 

OVERMAX
You • unlimited
Multipic 3.6 Projector LED
User Manual




Contents


- [1 Multipic 3.6 Projector LED](#)
- [2 Introduction](#)
- [3 Appearance](#)
- [4 Installation](#)
- [5 Device operation](#)
- [6 Cleaning](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Multipic 3.6 Projector LED

 
3

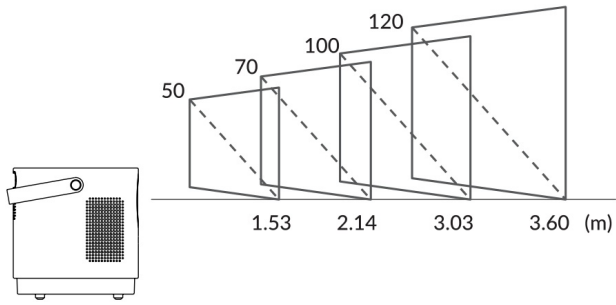

5

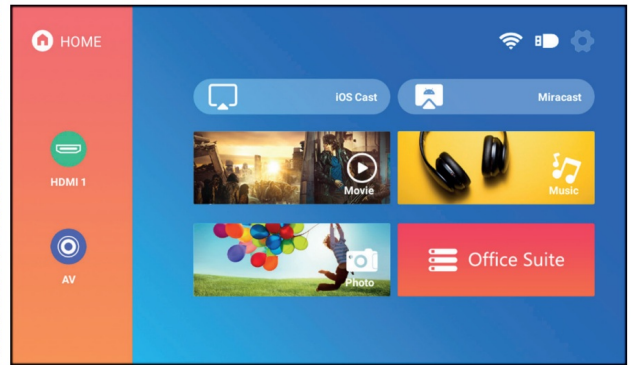 

4

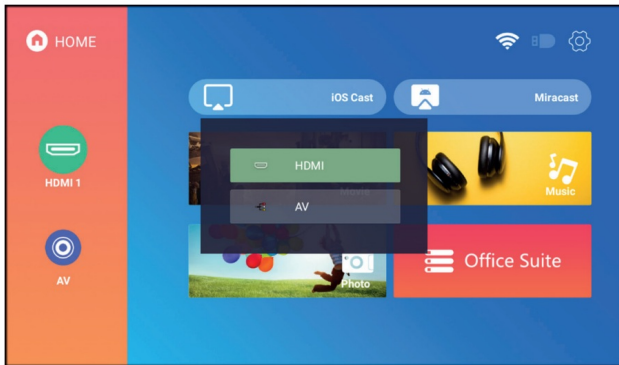 


6




7



 
8

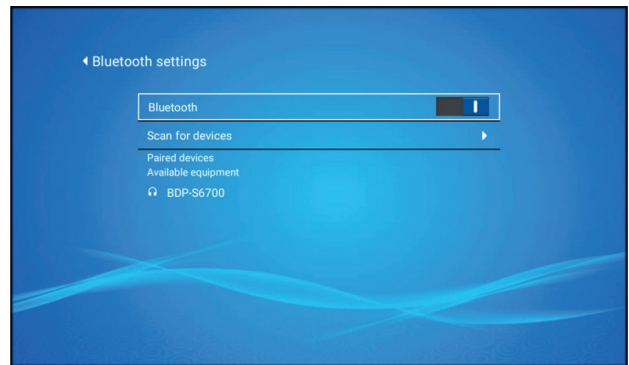


9

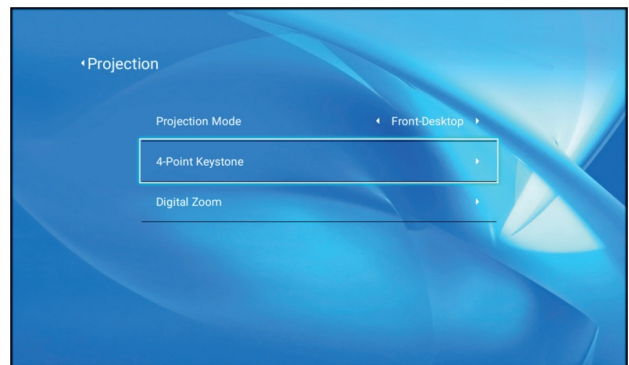 


10

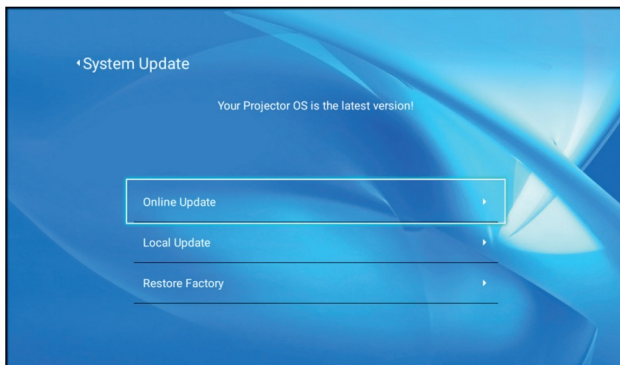 



11

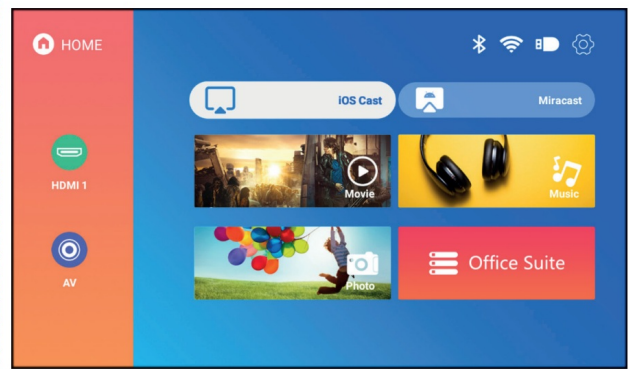 

12

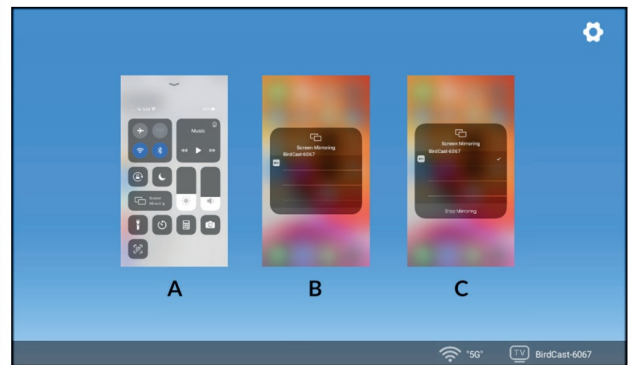 

13

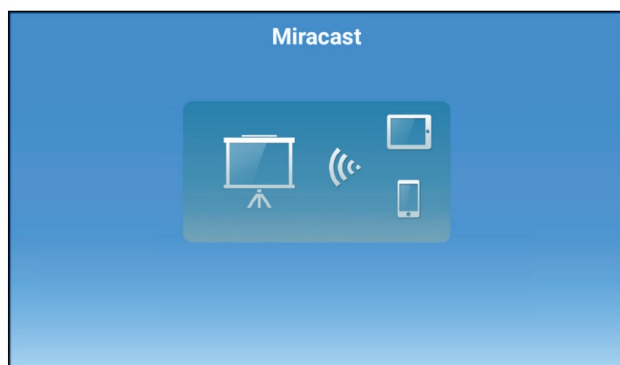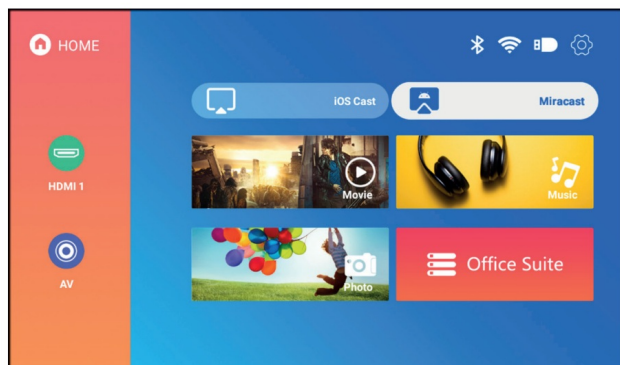  

Introduction

Dear customer!

Thank you for placing trust in us and choosing Overmax.

Thanks to the use of high-quality materials and modern solutions, we provide you with a product perfect for everyday use. We are convinced that the product will satisfy your requirements as it has been manufactured with utmost care. Before you use the product, please read this operating manual carefully.

Should you have any remarks or questions concerning the product, please do not hesitate to contact us:

pomoctechniczna@overmax.pl

Important information

Before using the projector, please read and then follow the instructions in this guide. Improper operation of the device can lead to electric shock and increase the risk of fire. Follow these instructions when using and maintaining your projector.

Note


Installation and use

- For better image quality, use the projector in rooms with drawn curtains or in dark rooms.
- Use the projector carefully. Dropping or malfunctioning may damage parts or cause image blurring and incorrect display.
- Do not disassemble the device yourself – risk of electric shock.
- Protect the device from moisture and keep it away from water or other liquids.
- When the projector is switched on, make sure that the ventilation holes of the device are not obstructed. Do not place it on soft surfaces or cover it with materials.
- Use only the supplied cables.
- Be careful when using the power cord, avoid excessively bending the cord; damage to the power cord can cause electric shock or fire.
- Do not look into the lens while the device is running.
- It is recommended to switch off the appliance after 6 hours of uninterrupted operation.
- Disconnect the power cord after switching off the power.
- It is recommended to use the original packaging for transporting the device.
- When the projector is switched on, make sure that the ventilation holes of the device are not obstructed. For this reason, it should not be placed on soft surfaces or covered with materials.
- Do not look into the lens while it is working.
- Do not place heavy objects on the projector.



The product complies with the requirements of European Union directives. In accordance with Directive 2012/19/EU, this product is subject to separate collection. The product should not be disposed of with municipal waste as it may pose a risk to the environment and human health. Return the used product to the recycling centre for electrical and electronic equipment.

Appearance

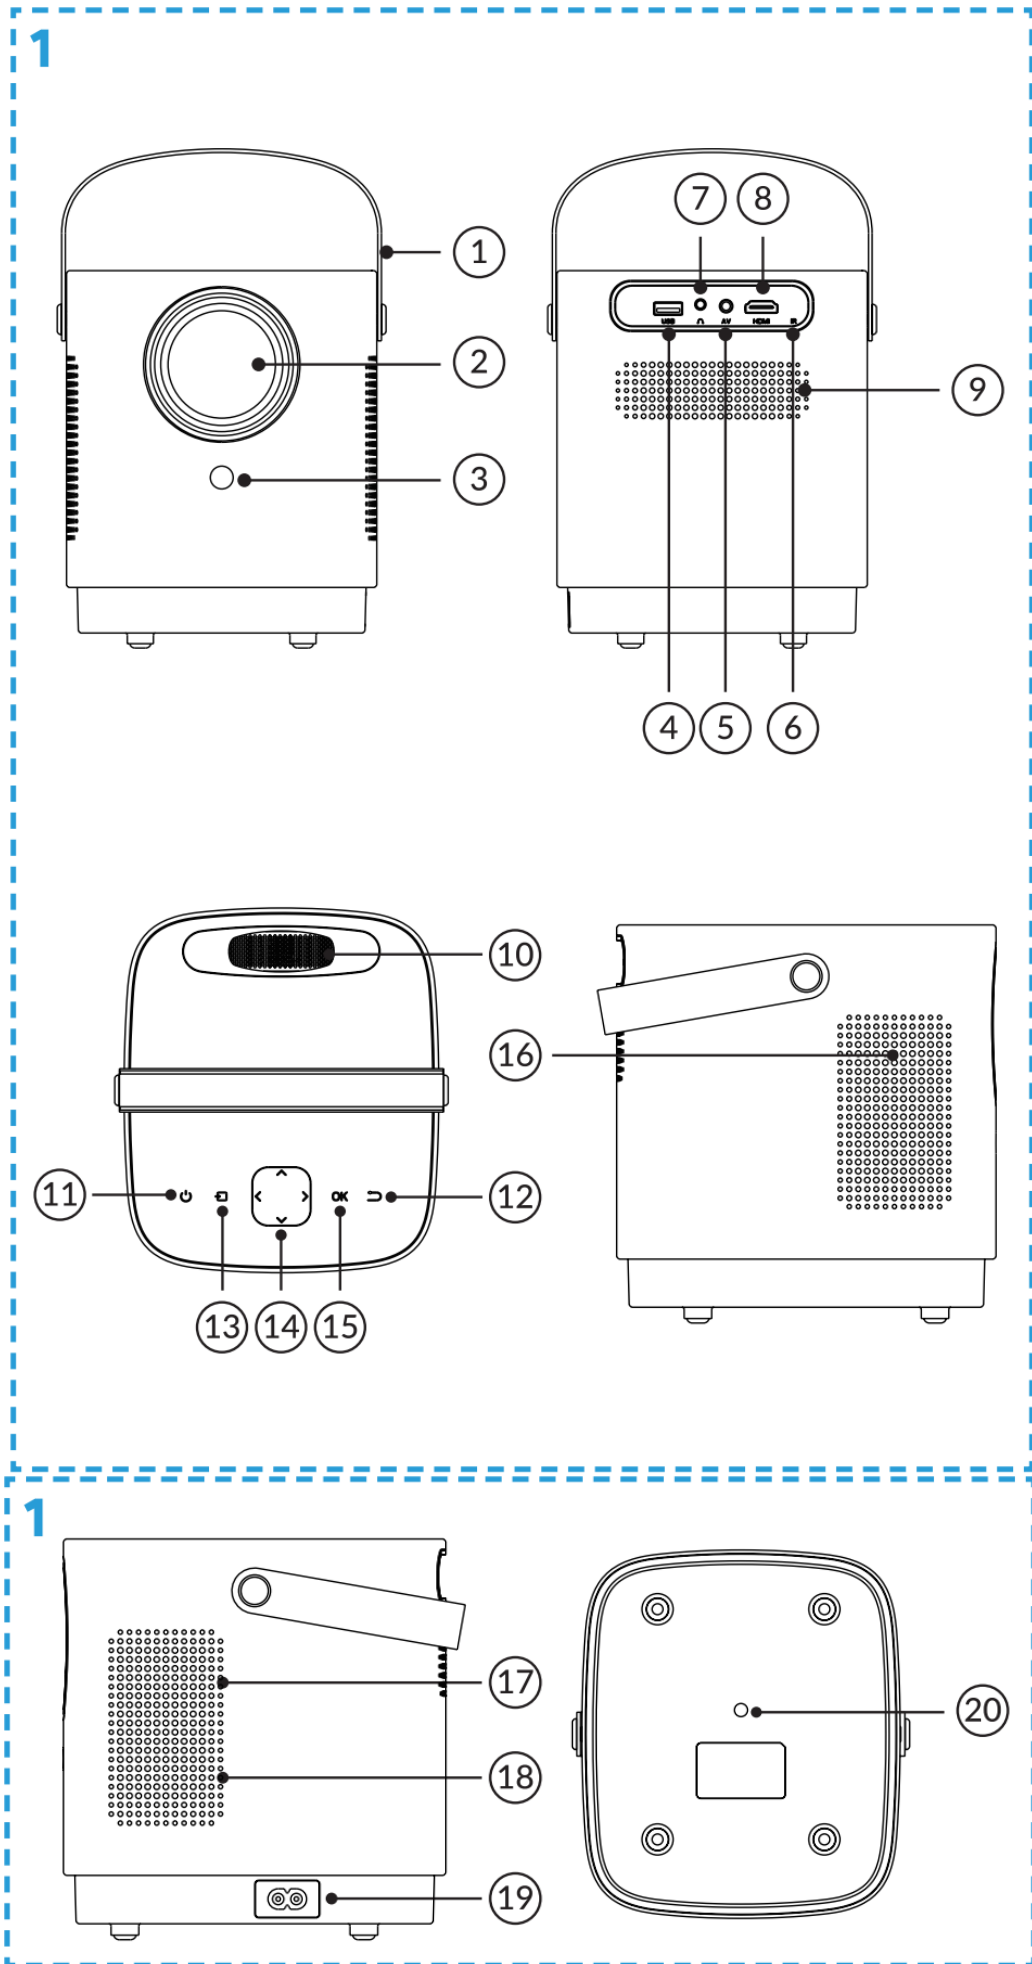

2. Lens
3. IR signal receiver (remote control signal)

 
Back panel

4. USB port
5. AV port
6. IR signal receiver
7. Mini – Jack (3.5 mm audio output)
8. HDMI port
9. Fan

Top panel

10. Focus adjuster
11. On/off switch
12. Back
13. Input source selection
14. Direction buttons
15. Confirmation button
16. Speaker1
17. Speaker2
18. Fan
19. Power outlet
20. Stand socket (not supplied)

Remote control

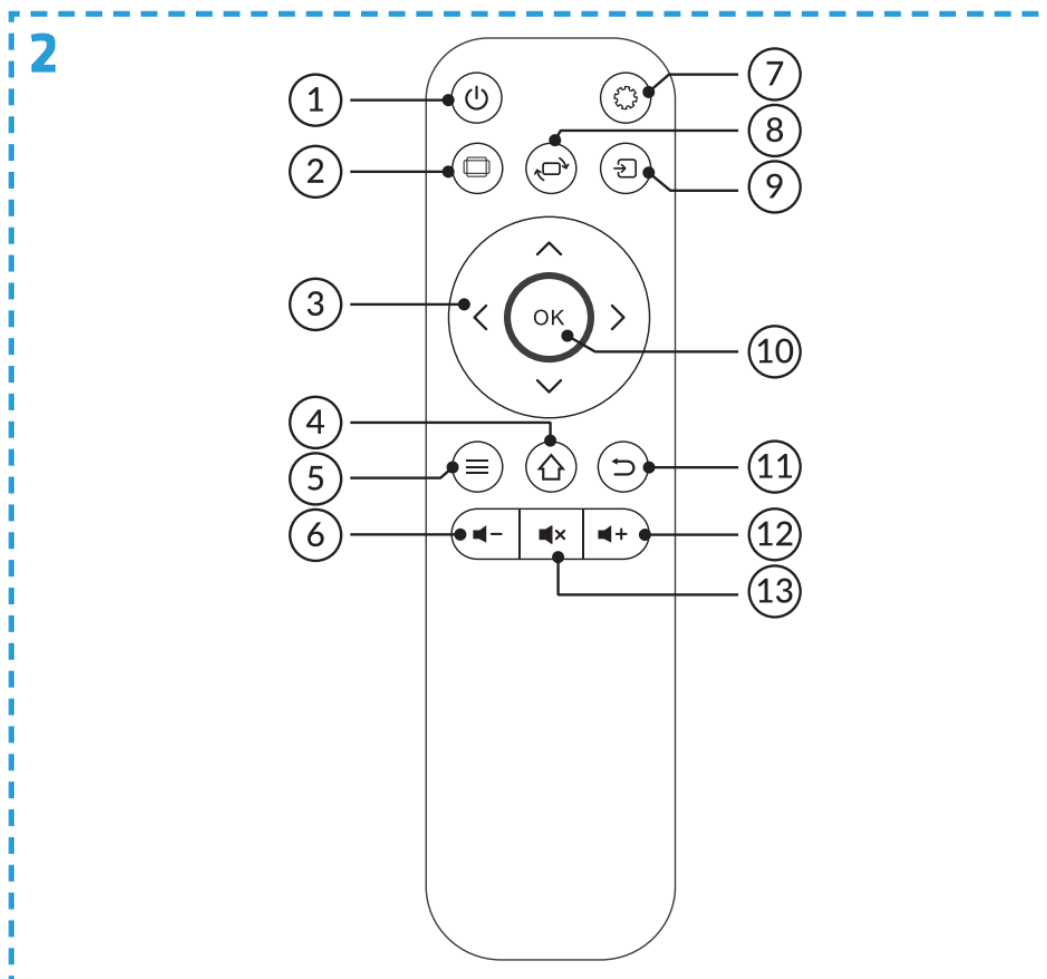

1. On/Off button 2. Display aspect ratio selection button 3. Direction buttons 4. Home page 5. Video and audio settings 6. Reduce audio volume	7. Projector settings 8. Projection screen rotation 9. Source selection 10. Confirmation 11. Back button 12. Volume increase 13. Mute
---	---

Supported formats

File formats: XLSX/DOCX/PPTX/TXT

Video formats: MP4/3GP/AVI/FLV/M2TS/MKV/TS/VOB/DAT/MPG

Audio formats: MP3/OGG/AAC/M4A/FLAC/WAV

Installation

Standard settings

Refer to the table below to adjust the image size and projector distance (fig. 3).

Proportion ratio	16:09
Image size (inches)	Projection distance
50	1,53
70	2,14
100	3,03
120	3,60
150	4,50

- During installation, place the projector on a stable surface or set it on a stand. Do not cover or block ventilation holes.
- If the distance between the projector and the screen is less than the minimum distance or is much greater, the image may be blurred.

Device operation

Switching on and off

- When the projector is connected to the power source, it enters standby mode. The indicator light will turn red.
- To turn the projector on or off, press the on/off switch on the top of the cabinet or the on/off button on the remote control. The projector is ready for operation when the light turns blue.

Focus adjustment

- Place the projector so that the lens remains perpendicular to the wall or screen on which the image is to be projected.
- To improve the focus of the projected image, turn the focus knob on the top panel until the image comes into

focus.

- If the image is not displayed perpendicularly, it will be distorted.

Signal source settings

Switch on the projector, and then select your preferred signal source in the main interface (fig. 4).

Wi-Fi network connection

In the main interface, select Settings (fig. 5) and then Network Settings (A, fig. 6). Search for the Wi-Fi network you want to connect to, enter your password, and confirm (fig. 7).

Bluetooth connectivity

In the main interface, select Settings and then Bluetooth Settings (B, fig. 6). Find an available device to connect to (fig. 8).

Projection settings

- In the main interface, select Settings and then Projection settings (C, fig. 6).
- Depending on the installation method and projector setting, select one of the available picture settings (fig. 9).

System settings

1. In the main interface, select Settings, then System updates or Other settings (D,E, fig. 6).
2. In Settings you can change the language, restore factory settings and perform a local or online update (fig. 10).

Multimedia

Insert the external drive into the USB port of the projector. In the main interface, select a category: Film, Music, Photo or Office and then the file you want to view (fig. 5).

iOS Cast

1. From the main interface, select iOS Cast (fig. 11).
2. Connect the projector and your mobile phone to the same Wi-Fi network, or connect your iOS device to the projector's wireless access point (AP).
3. On your iOS device, open the phone's interface, then select "Clone screen" (A, fig. 12). When the device searches for the projector (B, fig. 12), select the device with which you want to connect (C, fig. 12).

Miracast

1. From the main interface, select Miracast (fig. 13).
2. Connect the projector and mobile phone to the same Wi-Fi network.
3. Open the screen cloning application of your choice or select this function on your phone and connect to the device (fig. 13).

Cleaning

- Unplug the power cord before cleaning the device.
- Clean the housing regularly with a damp cloth.
- To clean the projector lens, use an eyeglass tissue or soft cloth to avoid scratches.
- Regularly clean the ventilation holes and speakers of the projector with a soft brush, otherwise the ventilation may become blocked. Clean the dust filter regularly.

The photos are for reference only, the actual look of the products may differ from the ones shown in the pictures.

OVERMAX


You • unlimited

www.overmax.eu

Documents / Resources

Multipic 3.6

Instrukcija uzbudlj / User Manual /
Bedienungsanleitung / Manuale d'uso /
Manuel de l'utilisateur / Manual de utilizator /
Handleiding / The official support pages /
Vedettesje vedettes / Manuale di istruzioni



OVERMAX

PL
EN
DE
IT
FR
ES
NL
UK
LT
HR

[OVERMAX Multipic 3.6 Projector LED](#) [pdf] User Manual

Multipic 3.6 Projector LED, Multipic 3.6, Projector LED, Projector, LED

References

- [Overmax - You unlimited - Shop Overmax - You unlimited](#)

[Manuals+](#)