


OVERMAX Screen 100 Semi Automatic Screen User Manual

Home » OVERMAX » OVERMAX Screen 100 Semi Automatic Screen User Manual

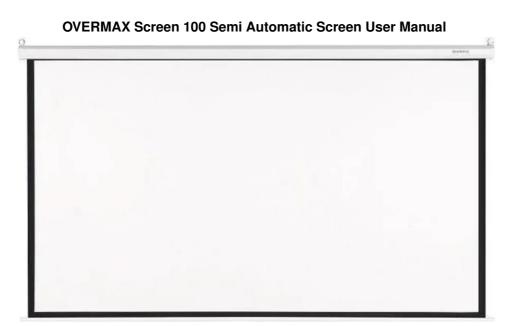

Contents

- 1 Introduction
- 2 Description (fig. 1)
- 3 How to assemble and use
- 4 How to clean and maintain
- **5 Documents / Resources**

Introduction

Dear customer!

Thank you for placing trust in us and choosing Overmax. Thanks to the use of high-quality materials and modern solutions, we provide you with a product perfect for everyday use. We are convinced that the product will meet your requirements as it has been manufactured with utmost care. Before you use the product, please read this


operating manual carefully. Should you have any remarks or questions concerning the product, please do not hesitate to contact us: pomoctechniczna@overmax.pl

Important

Please read this manual before you start using the product to see its functions and use them in accordance with intended use.

- 1. The screen must not be folded. Do not touch the screen surface with your fingers or hard items. Make sure the screen does not contact liquids.
- 2. Use the device away from sources of heat, high temperatures, direct sunlight, sources of ignition and naked flame.


Description (fig. 1)

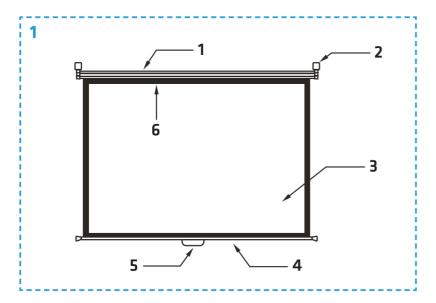

- 1. Case
- 2. Hook bracket
- 3. Screen
- 4. Lower slat of the screen
- 5. Handle
- 6. Black frame


How to assemble and use

- Be careful when taking the screen out of the box. Make sure the screen and accessories are in a good condition.
- To mount the screen on the wall, fasten brackets on screws. A suitable installation of the screen on the wall is presented in the fig. 2.

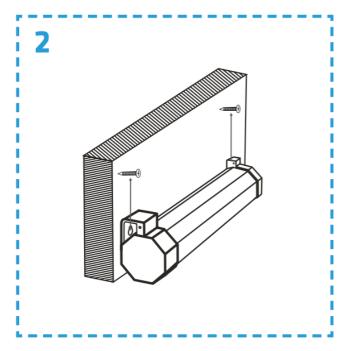

Fix the screws tightly and carefully to make sure they can bear a load of 25 kg.

• To mount the screen on the ceiling, hook the brackets, A suitable installation of the screen on the ceiling is presented in the fig. 3.

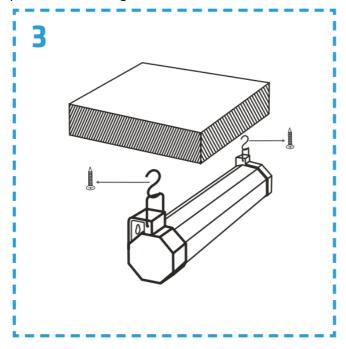

- · Install the case horizontally.
- Take the screen out manually, be careful and gentle. Pull the screen upwards or downwards, never towards yourself. Stop taking it out when the black frame gets visible.
- Install moving parts 25 cm above the floor.
- The unrolled screen must hang freely and must not touch the floor.
- After use, the screen should be slightly pulled downwards, then rolled up and put into the case.

How to clean and maintain

- · Clean the screen with a soft cloth.
- Do not use cleaning agents.
- Do not use water to clean the screen.

- Wipe the case with a wet cloth.
- When you finish using, hide the screen to avoid dirt.

The pictures are for reference only. The real design of the products may differ from the pictures presented.



Documents / Resources



OVERMAX Screen 100 Semi Automatic Screen [pdf] User Manual

Screen 100, Screen 100 Semi Automatic Screen, Semi Automatic Screen, Automatic Screen, Screen

Manuals+,