

# Overview Titan Servotorg Integrated Servo Motor User Guide

Home » Overview » Overview Titan Servotorq Integrated Servo Motor User Guide 1





## Titan™ Servotorg™ Integrated Servo Motor Item No. OVU00212 & OVU00213

Thank you for purchasing Overview's Titan Servotorg Intelligent Servo Motor.

To quickly get up and running with your Titan motor, please refer to the Technical Manual, the I2C Protocol Guide and Application Notes located at: <a href="http://www.overview.co.uk/technical-support/">http://www.overview.co.uk/technical-support/</a>

Please observe the following precautions when handling and operating the Titan motor:



- The Titan motor uses semiconductors that can be damaged by electrostatic discharge (ESD). The motor must be handled and stored in an ESD-safe environment.
- The Titan motor supply voltage is 12V DC, using up to 600mA. Do not hot-plug the power supply.
- I<sup>2</sup>C interface voltage is 3.3V and requires pull-ups to this voltage. It is not tolerant of

higher voltages, e.g. 5V.

### Contents

- 1 Reference Information:
- 2 Documents /
- Resources
- **3 Related Posts**

#### **Reference Information:**

When initially powered up, the Titan motor will perform an initialization routine as detailed in the Technical Manual.

During this routine, the unit will rotate and temporarily draw the max-rated current.

Titan motor pinout reference (please see the Technical Manual for further details):

While there are 3 connectors on the Titan motor that allow for power and I<sup>2</sup>C connections, J5 is the most convenient to use for initial testing and is detailed here.

- Connector type: JST S8B-SM4A-TF 8-way (JST SH series).
- Mating housing part: <a href="https://uk.rs-online.com/web/p/pcb-connectorhousings/3116546/">https://uk.rs-online.com/web/p/pcb-connectorhousings/3116546/</a>
- Pre-crimped leads: <a href="https://uk.rs-online.cm/web/p/products/3116675/">https://uk.rs-online.cm/web/p/products/3116675/</a>

J5 Connectors	
Pin	Signal
1	Vin 12V DC
2	12C SDA
3	12C SCL
4	PASS THROUGH 3
5	PASS THROUGH 4
6	PASS THROUGH 2
7	PASS THROUGH 1
8	GND

Overview Titan Servotorq Integrated Servo Motor

Overview Limited
Overview House Kingsway Business Park Forsyth Road Woking GU21 5SA United Kingdom
www.overview.co.uk
© Overview Ltd 2020
OVZ20018 Rev 1

#### **Documents / Resources**



Overview Titan Servotorq Integrated Servo Motor [pdf] User Guide Overview, OVU00212, OVU00213, Titan, Servotorq, Integrated, Servo Motor

Manuals+,