



Contents [[hide](#)]


- [1 OXAA DASHOX Bluetooth Speaker](#)
- [2 Button](#)
- [3 Key Operating Instructions](#)
- [4 Specifications](#)
- [5 Frequently Asked Questions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

OXAA

OXAA DASHOX Bluetooth Speaker



Button

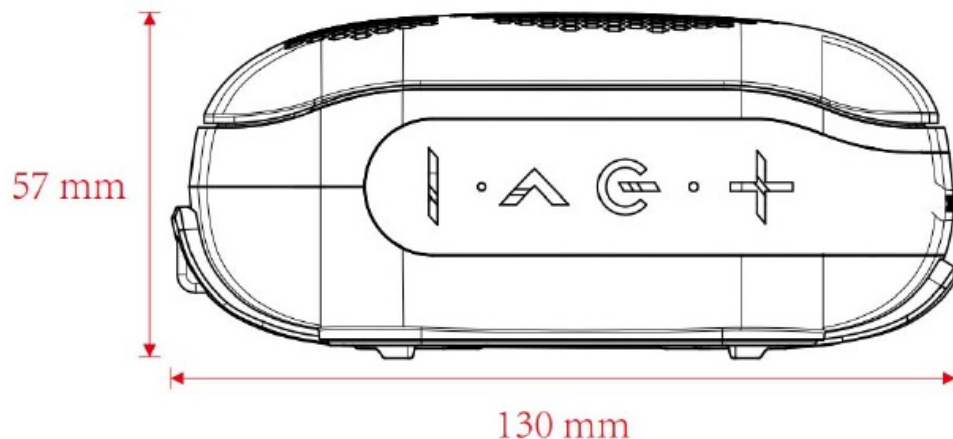

Key Operating Instructions

1. Power key

Short Press the button for Power on / off. Long press the button for 8 seconds to force restart. (Restart should remove all previous paired devices)

2. + key:

Short Press to increase volume

Long press will continue increasing volume

3. – key:

Short Press to decrease volume

Long press will continue decreasing volume

4. Pause key:

Click once to play/pause music.

Double press to enter/exit TWS mode

Long press for next song.

When a call came:

Short press to answer/end the call, long press to refuse incoming call.

Specifications

Description	Specs
Function:	TWS,BT, USB, AUX

Chip-set	JL6965
Bluetooth version	5.4
Bluetooth protocol	HSP / HFP / A2DP /AVRCP
Bluetooth distance/TWS	≥10M
Battery Voltage/Capacity	3.7V/2000mAh
Material:	ABS+Fabric
Power:	10W
Charging time:	3-4hours
Frequency response:	20HZ-20KHZ
Driver size:	52mm
Play time:	5hours 100% volume, 29hours at 70% volume
Size:	130*54*97mm
Charging port	Type C

Warning:

This device complies with Part 15 of the FCC Rules and contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital

device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Frequently Asked Questions


- **Q: What should I do if my speaker is not pairing with my Bluetooth device?**

A: Make sure the speaker is in pairing mode, check if Bluetooth is enabled on your device, and ensure you are within the Bluetooth range of the speaker. Try resetting the speaker and your device's Bluetooth settings.

- **Q: How can I check the battery level of the speaker?**

A: Some speakers have battery level indicators such as LED lights or mobile app notifications. Refer to the user manual for specific instructions on checking the battery level of your speaker.

Documents / Resources

	<p>OXAA DASHOX Bluetooth Speaker [pdf] User Manual</p> <p>2BNYA-DASHOX, 2BNYADASHOX, DASHOX Bluetooth Speaker, DASHOX, Bluetooth Speaker, Speaker</p>
---	---

References

- [User Manual](#)

OXAA 2BNYA-DASHOX, 2BNYADASHOX, Bluetooth Speaker, DASHOX, DASHOX Bluetooth Speaker, OXAA, speaker

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.