



Oxygen RKD3799BT Portable Bluetooth AM/FM Radio Instruction Manual

[Home](#) » [Oxygen](#) » Oxygen RKD3799BT Portable Bluetooth AM/FM Radio Instruction Manual

oxygen

DEFENSE/RKD-3799BT
Portable Stereo CD Boombox with
AM/FM/BLUETOOTH Radio and Cassette
Player/Recorder




Please read this Instruction Manual carefully before using the unit and retain it for future reference.

Contents [[hide](#)]

- [1 WARNING](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 COMPLIANCE WITH FCC REGULATIONS](#)
- [4 CAUTION](#)
- [5 PROTECT YOUR FURNITURE](#)
- [6 LOCATION OF CONTROLS](#)
- [7 POWER SOURCE](#)
- [8 RADIO OPERATION](#)
- [9 CD OPERATION](#)
- [10 AUX OPERATION](#)
- [11 BLUETOOTH OPERATION](#)
- [12 TAPE OPERATION](#)
- [13 CARE AND MAINTENANCE](#)
- [14 TROUBLESHOOTING](#)
- [15 SPECIFICATION](#)
- [16 Documents / Resources](#)
- [17 Related Posts](#)

WARNING

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

<div></div> <p>The lightning flash with the arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>
---	--

The Caution Marking is located at the back enclosure of the apparatus.
The Rating plate is located at the back enclosure of the apparatus.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload the wall outlet. Use only power source as indicated.
17. Use replacement parts as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
19. Power Sources – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
20. Object and Liquid Entry – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
21. Damage Requiring Service – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal

 
operation.

e) If the product has been dropped or damaged in any way, and

f) When the product exhibits a distinct change in performance – this indicates a need for service.


22. The mains plug is used as a disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
23. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
24. Minimum distances of 10 cm around the apparatus for sufficient ventilation.
25. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
26. No naked flame sources, such as lighted candles, should be placed on the apparatus.
27. The use of apparatus in moderate climates.
28. Attention should be drawn to the environmental aspects of battery disposal.
29. -CAUTION: Risk of explosion if the battery is replaced by an incorrect type.
30. -High or low extreme temperatures that a battery cannot be subjected to during use, storage, or transportation and low air pressure at high altitude.
31. -Replacement of a battery with an incorrect type that can defeat a safeguard.
32. -Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
33. – Leaving the battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas. A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user-accessible parts.

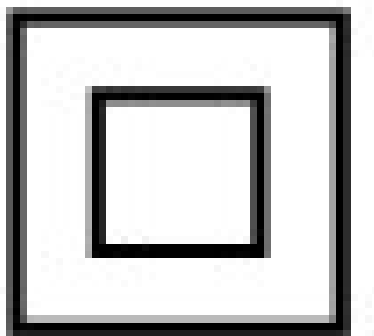

CAUTION:

 TO PREVENT ELECTRIC SHOCK, MATCH THE WIDE BLADE OF THE PLUG TO THE WIDE SLOT. FULLY INSERT THE PLUG INTO THE MAIN POWER SOCKET.

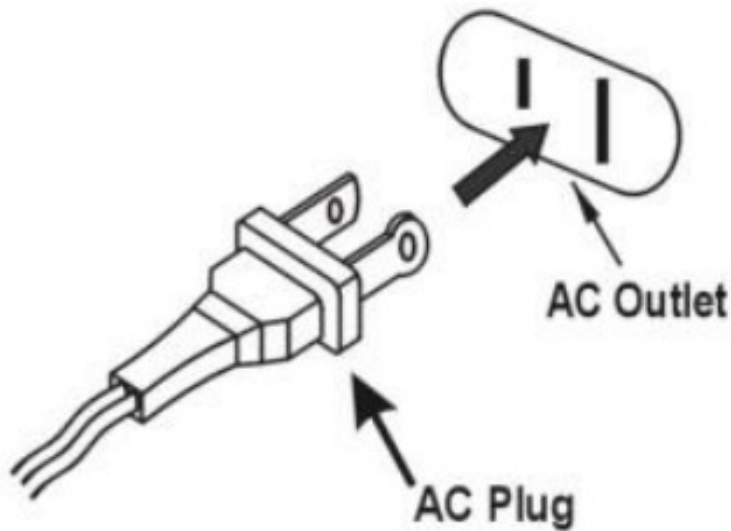

SAVE THESE INSTRUCTIONS

COMPLIANCE WITH FCC REGULATIONS

FCC ID: 2ACM4RKD3799BT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

 
- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

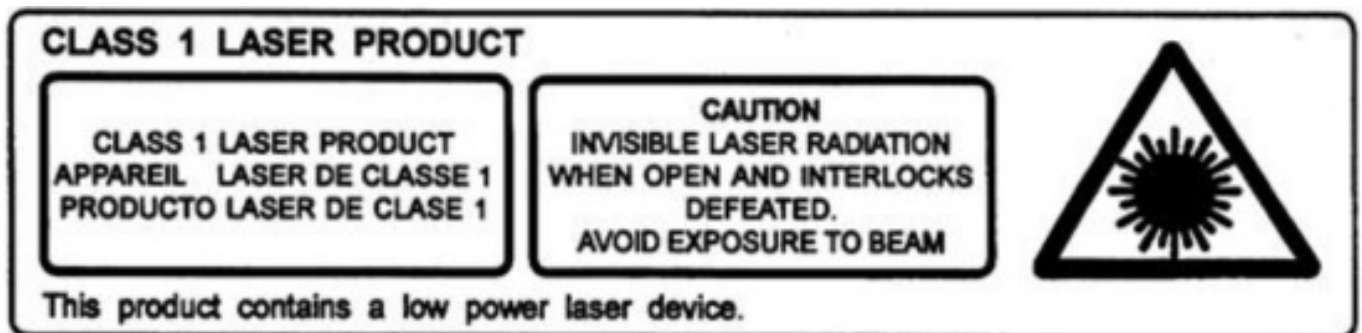

Follow the advice below for safe operations.

ON PROTECTION AGAINST LASER ENERGY EXPOSURE

 
- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the CD door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

 
 
Should any trouble occur, remove the power source and refer servicing to qualified personnel.







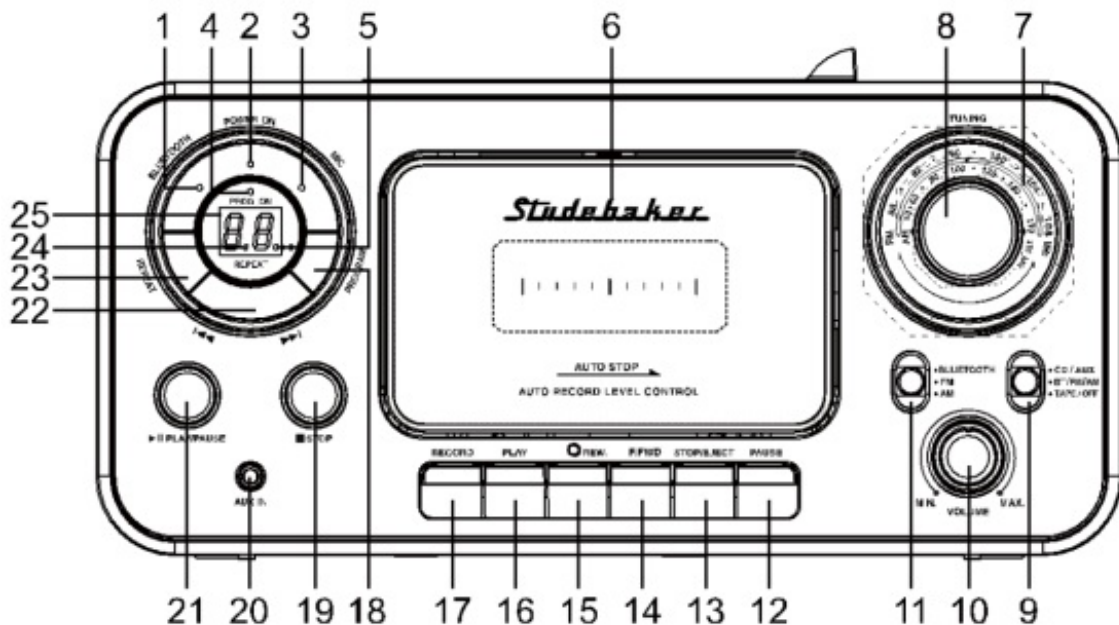

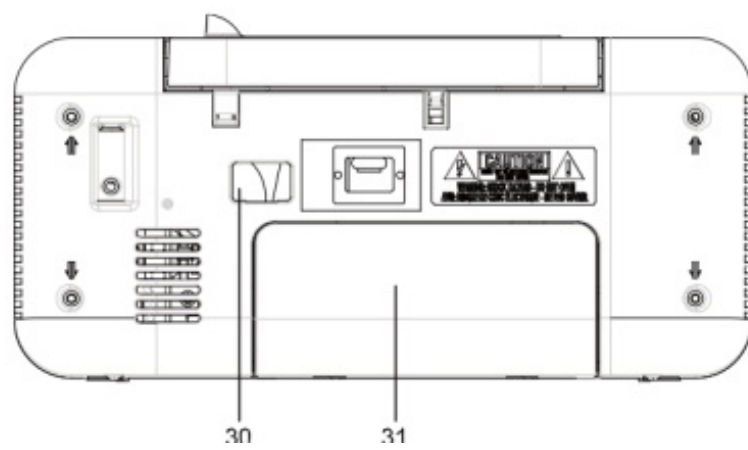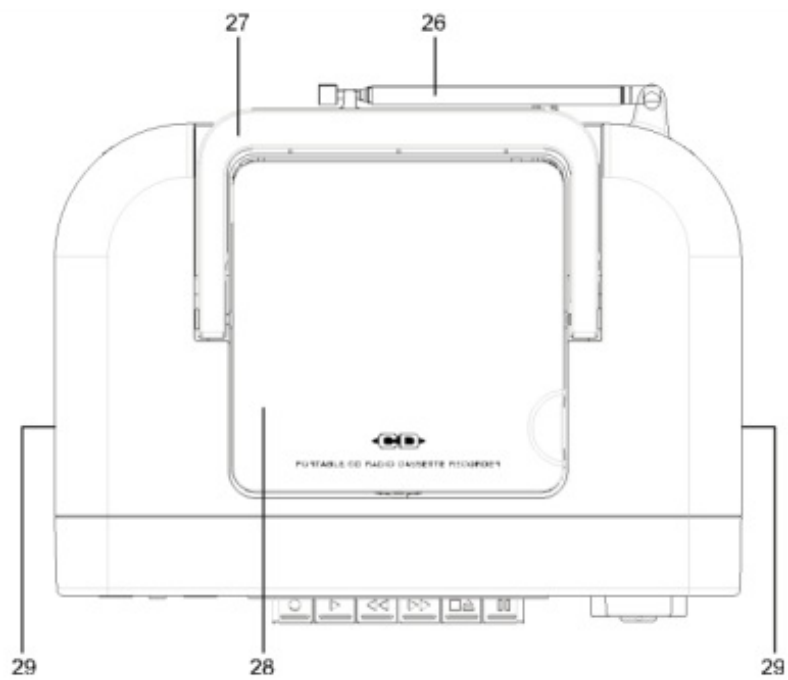



PROTECT YOUR FURNITURE

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil-based furniture polishes, wood preservatives, or cleaning sprays may cause the 'feet' to soften and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

LOCATION OF CONTROLS





1	BLUETOOTH INDICATOR	17	RECORD  BUTTON
2	POWER ON INDICATOR	18	PROGRAM BUTTON
3	MICROPHONE	19	 STOP BUTTON
4	PROGRAM INDICATOR	20	AUX IN JACK
5	 PLAY/PAUSE INDICATOR	21	 PLAY/PAUSE BUTTC
6	CASSETTE HOLDER	22	SKIP  /  BUTTON
7	DIAL POINTER	23	REPEAT BUTTON
8	TUNING KNOB	24	REPEAT INDICATOR
9	FUNCTION SELECTOR	25	LED DISPLAY
10	VOLUME CONTROL	26	FM TELESCOPIC ANTEN
11	BT/BAND SELECTOR	27	CARRYING HANDLE
12	PAUSE  BUTTON	28	CD COMPARTMENT
13	STOP/ EJECT   BUTTON	29	SPEAKERS
14	F.FWD  BUTTON	30	AC SOCKET
15	REW  BUTTON	31	BATTERY COMPARTMEN
16	PLAY  BUTTON		

POWER SOURCE

The RKD3799BT operates using standard AC 120V~ 60Hz household power or 6 x “C” size (UM-2) batteries (Not included).

BATTERY OPERATION

NOTES:

Disconnect the AC power cord.

For best performance and longer operating time, we recommend the use of alkaline batteries.

1. Remove the Battery Door on the bottom/back of the unit.
2. Following the polarity diagram shown in the BATTERY COMPARTMENT (#31) to insert 6 X ‘C’ size (UM-2) batteries and close the door.

BATTERY WARNING

1. Be sure that the batteries are installed correctly. The wrong polarity may damage the unit.
2. Use only the size and type of batteries specified.
3. Only use good quality/name-brand batteries.
4. Do not mix old and new batteries.

5. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
6. If the unit is not to be used for an extended period of time, remove the batteries. Old or leaking batteries can cause damage to the unit and may void the warranty.
7. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions).
8. Do not dispose of batteries in fire, batteries may leak or explode.

AC POWER CONNECTION

1. Insert one end of the power cord to the AC SOCKET (#30) at the back of the SB2135BT.
2. Connect the power cord to the AC power source.
3. When the unit is operated from an AC power source, the internal battery source will automatically be disconnected

RADIO OPERATION

1. Turn on the radio by setting the FUNCTION SELECTOR (#9) to BT/FM/AM position.
2. Use the BT/BAND SELECTOR (#11) to choose the AM or FM band.
3. Use the TUNING KNOB (#8) to tune to your desired radio station.
4. Adjust the VOLUME CONTROL (#10) to obtain the desired sound level.
5. To turn off the radio, set the FUNCTION SELECTOR (#9) to the TAPE/OFF position.

TIPS FOR BEST RECEPTION



AM – The AM antenna is located inside the cabinet of the unit. If AM reception is weak, change the position of the unit until the internal antenna picks up the strongest signal.

FM – To insure maximum FM tuner reception, fully extend the FM telescopic antenna and rotate it for the best FM radio reception.



CD OPERATION

PLEASE READ THIS IMPORTANT INFORMATION:


CD mechanisms used in devices like this are designed to fully read all commercial CDs. They will also read self-compiled CD-R/CD-RW discs but it may take up to 10 seconds for playback to start. If playback does not start, it is likely due to the quality of the CD-R/RW disc and/or the compatibility of the CD compilation software. The manufacturer is not responsible for the playback quality of CD-R/RW discs. Do not attach a label or seal to either side of the CD-R/RW disc. It may cause a malfunction.

1. Turn on the unit by setting the FUNCTION SELECTOR (#9) to CD/AUX position, the POWER ON INDICATOR (#2) will light up.
2. Open the CD door and insert your CD (label up) into the CD COMPARTMENT (#28). Then close the CD door, the total number of tracks will show on display.
3. Press  PLAY/PAUSE BUTTON #21 to start playback. The current track number will show on display. The  PLAY/PAUSE INDICATOR (#5) will light up.

PLAY/PAUSE

To temporarily stop playing, press  PLAY/PAUSE BUTTON (#21). The  PLAY/PAUSE INDICATOR #5 will flash. To resume play, press this button again.

STOP

Press the  STOP BUTTON #19 when playback CD, the disc will cease to play. (Total number of tracks will show on LED DISPLAY (#25)).



SKIP AND SEARCH

You can choose to play your favorite track directly by taping the SKIP BUTTONS (#22) repeatedly. The LED DISPLAY (#25) will indicate the correct track number selected. To locate a particular section within a track, press and hold the SKIP BUTTONS (#22) until the section is found.

REPEAT

To repeat a particular track currently playing, press the REPEAT BUTTON #23 once. The REPEAT INDICATOR (#24) will flash. To repeat all tracks, press the REPEAT BUTTON #23 twice. The REPEAT INDICATOR (#24) will light up and stay lit. To cancel the repeat function, press REPEAT BUTTON #23 again. The REPEAT INDICATOR (#24) will turn off.

PROGRAM

1. In stop mode, press PROGRAM BUTTON (#18). "01" will flash on the LED DISPLAY (#25).
2. Press SKIP BUTTONS (#22) to select a desired track and press PROGRAM BUTTON (#18) to confirm. The PROGRAM INDICATOR (#4) will flash in the course of programming.
3. Repeat the above steps to program up to 20 tracks.
4. Press  PLAY/PAUSE BUTTON (#21) to start program playback. The PROGRAM INDICATOR (#4) will light up and stay lit.
5. To cancel the program playback, press  STOP BUTTON (#19) twice. The PROGRAM INDICATOR (#4) will turn off.

Notes:

If you encounter a CD playback problem, either of the following ways may help.

1. Turn off the unit. Disconnect the AC power cord from AC SOCKET and reconnect it again.
2. Clean your CD disc.

AUX OPERATION

This unit provides an AUX-IN JACK (#20) for connecting external audio devices like MP3 players, CD players, smartphones, and iPods (except iPod shuffle 3rd generation) to listen to your external source through the speakers of this system.

1. You need an audio cable (not included) with one 3.5 mm stereo plug on each end of the cable.
2. Plug one end of the cable into the AUX IN JACK (#20) located on the left-hand side of the unit and the other end of the cable into the Line-out Jack or Headphone Jack of your external audio device.
3. Turn on the external audio device.
4. Turn on the unit by setting the FUNCTION SELECTOR (#9) to CD/AUX position.
5. The volume level can now be controlled through the VOLUME CONTROL (#10) of the unit. Operate all other

functions on the auxiliary device as usual.

6. Set the FUNCTION SELECTOR (#9) to the TAPE/OFF position to turn off the unit.

Notes:

- If you connected the Line-out jack of your external device then you only need to adjust the volume control of this system. If you connected the Headphone Jack of your external device then you may need to adjust both the volume control of your external device and the volume control of this system to find the most desirable volume setting.
- Remove the audio cable from AUX IN JACK (#20) when you finish listening. Don't forget to switch off the power on your external device as well.




BLUETOOTH OPERATION

- Before operating the Bluetooth function, make sure your mobile phone supports Bluetooth function.
- For a different model of mobile phone, Bluetooth emissive power has some differences. It is recommended that the distance between the mobile phone and the unit is within 10 meters.
- Don't put any metal object or any obstacle between the path of the mobile phone and the unit.


Manual Pairing

1. Turn on the unit by setting the FUNCTION SELECTOR (#9) to BT/FM/AM position, then use the BT/BAND SELECTOR (#11) to choose the BLUETOOTH mode, the BLUETOOTH INDICATOR (#1) will flash rapidly.
2. Turn on the Bluetooth function of your mobile phone. (Please refer to the instruction manual of your mobile phone on how to operate Bluetooth.)
3. Select the item of searching the Bluetooth device and enter it. Your mobile phone starts to search for Bluetooth devices within range (10 meters). Select this radio "SB2135BT" and confirm it.

Note:










- Enter 0000 for the password if necessary and confirm it
 - If you have made Bluetooth connectivity before, a list of the previous search results is displayed. Select "RKD3799BT" and confirm.
4. When pairing is successful, you can hear the pairing sound, and the Bluetooth logo will stop blinking.
 5. During playback, press  PLAY/PAUSE BUTTON (#21) to pause playback, press again to resume.
 6. During playback, press SKIP  BUTTONS (#22) to skip tracks.
 7. To disconnect the Bluetooth connection, press and hold the  PLAY/PAUSE BUTTON (#21) until the BLUETOOTH INDICATOR (#1) flashes.

Reconnect To The Bluetooth Audio Source Device









If your Bluetooth audio source device has already been paired with SB2135BT but accidentally disconnected, long-press  PLAY/PAUSE BUTTON (#21) to do connection again.

TAPE OPERATION








Playing a tape

1. Set the FUNCTION SELECTOR (#9) to the TAPE/OFF position.
2. Press STOP/ EJECT  BUTTON (#13) to open the CASSETTE HOLDER (#6).
3. Insert a tape and close the CASSETTE HOLDER (#6).
4. Press PLAY  BUTTON (#10) to start playback.
5. Adjust the VOLUME CONTROL (#16) to obtain the desired sound level.
6. To pause playback, press  PAUSE BUTTON (#12). Press the PAUSE  BUTTON (#12) again to resume playback.
7. To stop playback, press STOP/ EJECT  BUTTON (#13).
8. To search backward or forward, press REW.  BUTTON or F.FWD  BUTTON (#15 or #14) and press PLAY  BUTTON (#16) or STOP/ EJECT  BUTTON (#13) at the point you want to stop.

Recording from radio/ auxiliary source

1. Set the FUNCTION SELECTOR (#9) to the TAPE/OFF position.
2. Press STOP/EJECT  BUTTON (#13) to open the CASSETTE HOLDER (#6).
3. Insert a tape and close the CASSETTE HOLDER (#6).
4. Select the desired sound source with the FUNCTION SELECTOR (#9). In radio mode, tune to your desired radio station. In AUX mode, start playback from your auxiliary source.
5. Press RECORD  BUTTON (#17). PLAY  BUTTON (#16) is depressed automatically.
6. To pause recording, press PAUSE  BUTTON (#12). Press the PAUSE  BUTTON (#12) again to resume recording.
7. To stop recording, press STOP/EJECT  BUTTON (#13).
8. To listen to your recording, set the FUNCTION SELECTOR (#9) to the TAPE /OFF position. Press REW.  BUTTON (#15) to rewind the tape to search your recording, then press PLAY  BUTTON (#16) to listen.

Recording from the built-in microphone

 
1. Set the FUNCTION SELECTOR (#9) to the TAPE/OFF position.
2. Press STOP/EJECT  BUTTON (#13) to open the CASSETTE HOLDER (#6).
3. Insert a tape and close the CASSETTE HOLDER (#6).
4. Press RECORD  BUTTON (#17). PLAY  BUTTON (#16) is depressed automatically.
5. To pause recording, press PAUSE  BUTTON (#12). Press the button again to resume recording.
6. To stop recording, press STOP/EJECT  BUTTON (#13).
7. To listen to your recording, press REW.  button (#15) to rewind the tape to search your recording, then press PLAY  BUTTON (#16) to listen.

Note: The Built-in MICROPHONE (#3) is located on the front of the unit. Place the recorder near the sound

source to be recorded.

CARE AND MAINTENANCE

1. Do not subject the unit to excessive force, shock, dust, or extreme temperature.
2. Do not tamper with the internal components of the unit.
3. Clean your unit with a dry cloth. Solvent or detergent should never be used.
4. Avoid leaving your unit in direct sunlight or in hot, humid, or dusty places.
5. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
6. If drop-outs or interruptions occur in the music during CD play, or if the CD fails to play at all, its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth

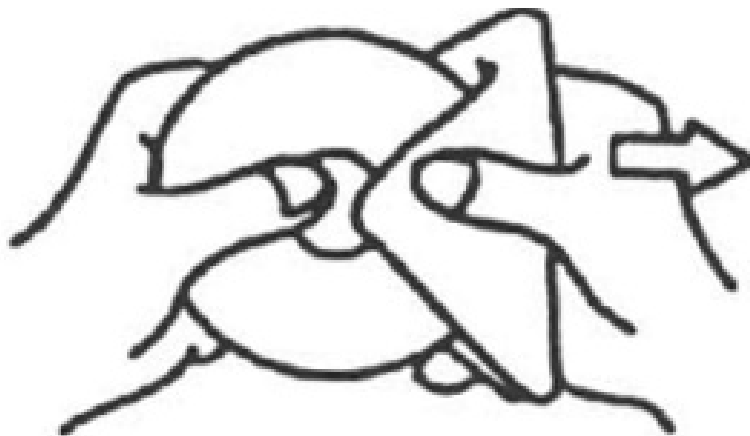

ABOUT CASSETTE TAPES

Whenever you record on a cassette any previously recorded material is erased as the new material is recorded. To prevent you from accidentally erasing material that you wish to save, blank cassettes are equipped with erasing prevention tabs for each side of the tape. If the erase prevention tab for side A is removed, you cannot accidentally record on side A. The Record ● key cannot be depressed if the erase prevention tab on the cassette has been removed. To prevent accidental erasing on side A of a cassette use a small screwdriver or similar tool to break off the erase prevention tab for side A. This prevents the record key from form-locking.



If later you do wish to record on side A of the cassette, cover the tab opening with a piece of cellophane tape. This will allow the Record ● to function again.

CASSETTE CARE

Two common causes of trouble experienced when using cassettes are:

1. Tape Jamming – Leading to uneven speed in playback, and
2. Tape Tangling – Where the tape wraps itself around it's parts of the mechanism.

To reduce the likelihood of these problems occurring, the following precautions should be observed:

- Check that there are no loose layers of tape visible through the cassette center window (see Fig. 1). Take up any loose layers, using a pencil or hexagonal barreled ballpoint pen, before inserting the cassette into the machine (see Fig.2)

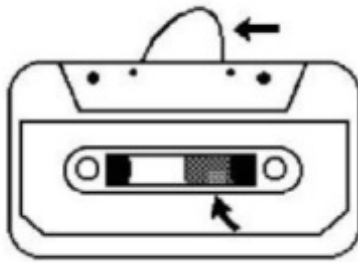 


Fig.1

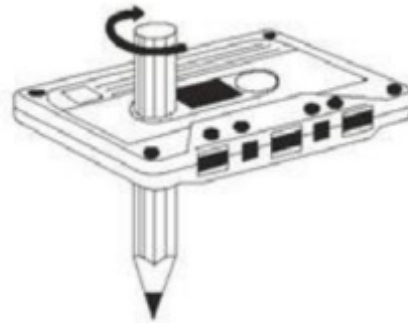 




Fig. 2

 
- If the cassette feels tight while performing the operation shown (see Fig.2), the tape may be jamming due to ridges formed in the winding of the tape (visible through the center window). These may be removed, in most cases, by the fast winding of the cassette from one end to the other and back again.
- Use only well-known brands of tape. Avoid the use of C-120 cassettes.

Furthermore, do not expose cassettes to direct sunlight, dust or oil, and do not touch the tape surfaces.

HEAD CLEANING

The tape heads, pinch roller and capstan require periodic cleaning. This removes particles of the metal oxide coating that wear off the tape and accumulate on these parts and impair performance. Switch off the power, press

the STOP/EJECT  BUTTON (#13) to open the cassette door, and press the PLAY  BUTTON (#16). Clean the tape heads, pinch roller and capstan with a soft cloth or cotton pad dampened in isopropyl alcohol or special tape head cleaner.

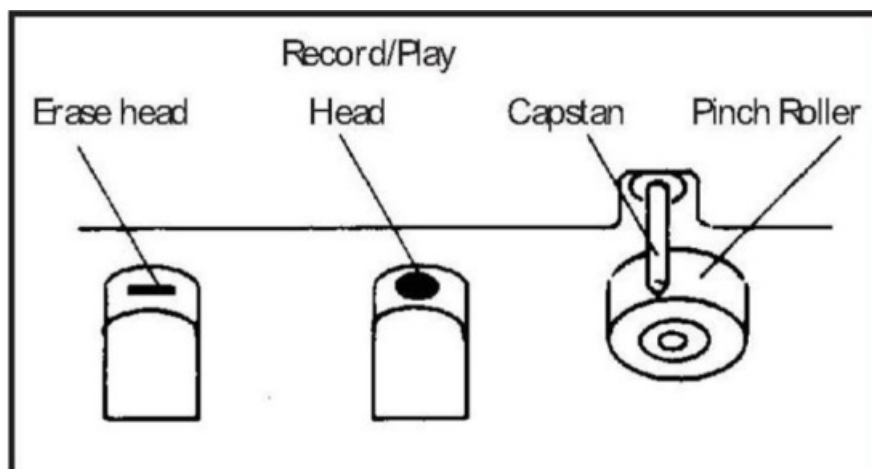

1. Avoid operating your unit under direct sunlight or in hot, humid, or dusty places.
2. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

3. For better Display clarity, avoid operating the unit under direct sunlight or in strong room illumination.
4. Unplug the unit from the electrical power outlet immediately in case of malfunction.

TROUBLESHOOTING

If you experience difficulties in the use of this music system, please check the followings.

Symptom	Possible Cause	Solution
Noise or sound	Station not tuned properly for AM or	Retune the AM or FM broadcast
distorted on AM or FM broadcast.	FM. FM: Telescopic antenna is not extended. AM: The bar antenna is not positioned correctly.	station. Fully extend the FM telescopic antenna. Reposition the unit until the best reception is obtained.
AM or FM no sound.	Unit not set to AM or FM band. Volume at minimum.	Set the band selector to AM or FM position. Increase Volume.
The CD player will not play.	Unit not in CD function mode. CD is installed incorrectly. If the CD is self-compiled, the media used may not be compatible with the player.	Select CD function mode. Insert CD with the label side up. Use better quality blank media and retest.
CD skips while Playing	The disc is dirty or scratched.	Wipe CD with a clean cloth or use another disc.
CD Intermittent sound	Dirty or defective disc. Dirty Pick-Up lens. The player is subject to excessive shock or vibration.	Clean or replace the defective disc. Use a CD-lens cleaning disc to clean the lens. Relocate the player away from shock or vibration.
Tape Playback muffled or fuzzy	Tape head dirty	Clean tape head using the head cleaning cassette
No sound on Bluetooth	The unit is not linked with the cell phone. – Speaker placement out of range. – Volume is set too low.	Go through the “Bluetooth Operations” process to link the speakers. – Relocate the speaker within Bluetooth operating range. – Rotate the volume knob to turn the sound level up.
Sound is distorted on Bluetooth	– Volume level is set too high. – Sound source is distorted.	– If the cell phone’s original sound source quality is poor, distortion and noise are easily noticed with high-power speakers. – If you are using an external sound source like the older generation of iPod, try reducing the output volume on the device itself.

SPECIFICATION

POWER SUPPLY AC 120V~ 60Hz, 14 W

DC 6 x1.5V type R14/ UM-2/ "C" size batteries (not included)

FREQUENCY RANGE FM 88 -108 MHz

AM 520 -1710 kHz

BLUETOOTH RF Output Power: 4 dBm

Bluetooth 2.402-2.48GHz

Working Distance: Up to 10 meters (32.8 feet) measured in open space (wall and structures

may affect a range of devices.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Spectra Merchandising Intl, Inc. is under license. Other trademarks and trade names are those of their respective owners.

Documents / Resources

