



# OZDEM Audio Video Intercom System Instruction Manual

[Home](#) » [OZDEM](#) » OZDEM Audio Video Intercom System Instruction Manual 

## OZDEM Audio Video Intercom System Instruction Manual



### Contents

- [1 OPERATION INSTRUCTIONS OZDEM AUDIO-VIDEO INTERCOM SYSTEM](#)
- [2 VISUAL MONITOR OPERATION](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)

## OPERATION INSTRUCTIONS OZDEM AUDIO-VIDEO INTERCOM SYSTEM

1. **TALK:** This button, when pressed allows you to talk to the other room stations. Keeping the button pressed,

Speak at a normal voice level and then release the button when you have finished speaking. Your voice will be heard through all the other room stations. The person in the other room can then talk back to you hands free (who ever calls, press the hold talk button and the other person replies hands free). When you have finished the conversation, press the cancel button.

2. **F.DOOR:** This button, when pressed allows you to talk to the front door station. When you release this button you will automatically be able to hear the person at the front door without them having to press any buttons, when you have finished the conversation press the cancel button. This button also turns on the front door camera if installed.
3. **MONITOR:** This button, when pressed and the green light is on, allows the other room stations to monitor any sounds in this room. No more than 3 monitor buttons should be on at any one time. When this button is on the front door push button, tone will not be heard in that room. When the system is in monitoring a slight hum may be heard out of the room stations due to electrical interference within the home. This cannot be avoided completely. To turn it off press the monitor button again and the green light goes off.
4. **UNLOCK:** This button, when pressed energizes the electric latch (if fitted) at the front door or gate allowing people to enter. When this button is released the latch is de-energised returning to its normal locked state.
5. **CANCEL:** This button allows you back to the normal condition after you have used the front door and talk button, when you finish if you do not cancel the conversation, system stays on front door or other rooms all the time. You have to press the cancel button back to normal condition. Pressing this button also activates privacy button, when the green and red button starts blinking this room station becomes private, press it again to get back to normal.


## VISUAL MONITOR OPERATION

If someone pressed the front door or gate button chime will be activated by the visual monitor station (and all the other room station). Monitor will be turned on automatically and you will see the picture, if you want to talk to the visitors follow instruction **number 2**. If the latch is connected to the system to open the door follow instruction **number 4**.

When you have finished the conversation press the cancel button back to normal position. If no one pressed the front door station button and you want to see outside of your door press the F.DOOR button and the picture will turn on, after 45 seconds the picture should turn off automatically or press the cancel button to turn it off.



## Documents / Resources

	<p><a href="#">OZDEM Audio Video Intercom System</a> [pdf] Instruction Manual Audio Video Intercom System, Video Intercom System, Intercom System</p>
---	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.