



OzSpy ASPYWATCH02 Watch Hidden Camera User Manual

[Home](#) » [Support](#) » OzSpy ASPYWATCH02 Watch Hidden Camera User Manual 

Contents

- [1 OzSpy ASPYWATCH02 Watch Hidden Camera](#)
- [2 General Operation](#)
- [3 Related Posts](#)

OzSpy ASPYWATCH02 Watch Hidden Camera



General Operation

Charging: Unscrew the USB Crown and insert the supplied USB cable then connect the other end to a DC 5V USB Power adapter. A blue LED will flash while the device is charging and turn solid blue once fully charged. Prior to first use please ignore the LED indicator and charge uninterrupted for a minimum of 4 hours. When the battery

is low, the blue and red light flash alternately for 5 seconds and automatically power off.

Time & Date Stamp: Insert the USB cable into the USB Crown and the other end into a USB port on a personal computer or laptop. A new removable disk will appear on the screen. Open the removable disk and the Time.txt file. Edit the date and time using the format in the image below, save and exit.



Setting the Watch Time: Pull out the Time Adjust Crown. Turn the crown to set the time. Push the crown back to the normal position once the time has been set.

Powering On/Off: Press the ON/OFF button for 5 seconds. A blue LED will illuminate. The Watch is now in standby mode. If the device has been left in standby mode for several minutes the device will automatically power off. To turn off hold the ON/OFF button for 5 seconds, any recordings will be saved, the red LED will flash 3 times and the device will power off.

Video Mode: From standby, Press the ON/OFF button once. The LED indicator will flash three times and then turn off. The Camera is now recording video. Press ON/OFF button twice quickly to stop the video recording. Repeat to start and stop additional recordings.

Photograph Mode: From Standby Mode (solid blue LED), Press the Photo button once, the LED will flash red, the photograph is saved and the device will return to standby mode. Press again to repeat.

Playback Recordings: Insert the USB cable into the USB Crown and the other end into a USB port on a personal computer or laptop. A new removable disk will appear on the screen. Open the removable disk and then select the Photo or Video Folder for the relevant recordings you wish to playback. If the recordings will not play correctly, please make sure your computers media player is up to date and the latest codec pack is installed.

Internal Memory: The internal memory must be formatted as FAT32. When the storage capacity is full, the blue and red LEDs will flash alternately for 5 seconds, automatically saves the current files and shut down. To continue recording move or delete the stored files using a computer.

Reset to Factory Defaults: Should the device become unstable please try resetting the device to Factory defaults. Press both the mode button and operation buttons at the same time.