



OzSpy MEQC3506 Compact Camera and Bug Detector User Manual

[Home](#) » [Support](#) » OzSpy MEQC3506 Compact Camera and Bug Detector User Manual 

Contents

- [1 OzSpy MEQC3506 Compact Camera and Bug Detector](#)
- [2 Product Main Function](#)
- [3 Specification](#)
- [4 Instruction](#)
- [5 For R/F detection](#)
- [6 DOWNLOAD](#)
- [7 Related Posts](#)

OzSpy MEQC3506 Compact Camera and Bug Detector



USER MANUAL

This compact detector that can easily detect hidden cameras, recording devices, and wireless transmitter. from a distance of as little as 0.1m or an impossible 10m from the device. It uses 6 pulsing LEDs to expose the lens of a spy camera, listening device etc.

Product Main Function

- Lens Detection Function
- Wireless R/F Detecting Function

Specification

- Laser detecting distance: 0.1 – 10m
- RF detecting distance: 0-10m
- RF range: 1.0MHz – 6500 MHz
- Power: 3V DC, 1.5V AAA x 2 (not included)
- Size: 8.5 x 5.6 x 2.0 cm

Instruction

For Camera Lens detection

1. Push down the battery cover and set the battery according to the instruction.

2. Press the red-laser switch. Then the red laser LED will turn on and flash.
3. Let the laser light forward to the area you want to search and use the watching-hole.
4. If there is any lens within the searching area you could find a reflecting red-point.
5. If you finish detecting please press the switch again.

Note:

Only when the watching hole is on the same level of the camera lens you could find the reflecting point.

For R/F detection

1. Extend the antenna out and then push the function key from "Off" to the function key.
When it detects any R/F frequency the signal light will lit up according to the strength of the signal. When the signal is stronger, the light will be brighter and that means you are closer to the signal source.
2. If you do not want to hear the buzzer sound, you can push the function key to mute mode. Then it will alarm only by vibration.

Notice

1. Please set the sensitivity to the highest level when you begin the R/F detecting. And then adjust it slowly to lower level so that you could reduce the searching area.
2. If the camera is not wireless you need to use the Red laser to detect the lens to find out the hidden camera.
3. Please remove the battery if you will not use for a long period of time.

DOWNLOAD

OzSpy MEQC3506 Compact Camera and Bug Detector User Manual – [[Download PDF](#)]
