

 
OzSpy PGDPVR03 KL-600 Mini Digital Video Recorder and JS-418C Mini Button CCD Camera User Manual

[Home](#) » [OzSpy](#) » OzSpy PGDPVR03 KL-600 Mini Digital Video Recorder and JS-418C Mini Button CCD Camera User Manual 

Contents

- 1 OzSpy PGDPVR03 KL-600 Mini Digital Video Recorder and JS-418C Mini Button CCD Camera
- 2 Operating Instructions
- 3 WARNING
- 4 Identifying the parts of the mini DVR
- 5 LCD screen indicators
- 6 Preparing the power supply
- 7 Battery life
- 8 Basic Operations
- 9 One Touch Record
- 10 Motion Detection recording
- 11 Cycle video (Storage full over write automatically)
- 12 Playback
- 13 Recording moving images from mini camera
- 14 Recording moving images from TV set and other video sources
- 15 Playing back media files on mini DVR (music,movie,photo)
- 16 Playing back moving images on PC (records,photo,audio)
- 17 Update media files (Music, Movie, Photo)
- 18 Delete recorded files
- 19 Setting the record
- 20 Setting the frames
- 21 Setting the motion detection
- 22 Setting the video time
- 23 Setting the LCD off time
- 24 Setting the vibrate
- 25 Setting the date time
- 26 Setting the format
- 27 Specifications
- 28 Accessories
- 29 DOWNLOAD
- 30 Related Posts

OzSpy PGDPVR03 KL-600 Mini Digital Video Recorder and JS-418C Mini Button CCD Camera

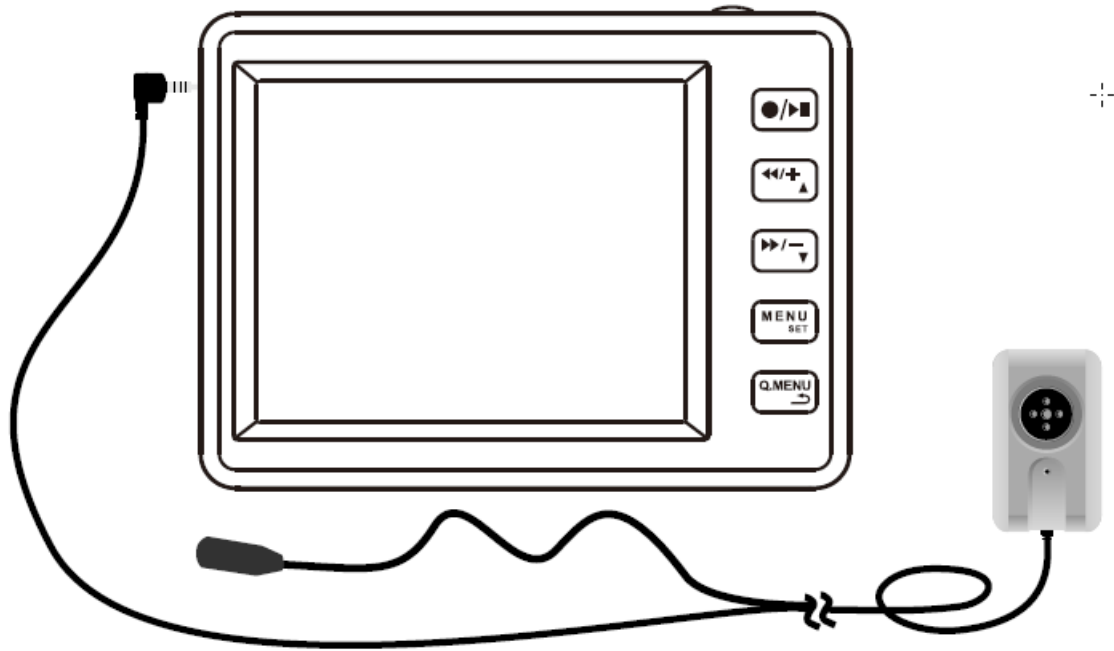

USER MANUAL

Operating Instructions

Before operating the unit, please read this manual thoroughly, and retain it for future reference.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Attention

The electromagnetic fields at the specific frequencies may influence the picture of the recorder. Be sure to read the following before using the recorder and the mini Camera.

Trial recording

Before you record one-time events, you may want to make a trial recording to make sure that the recorder and the camera are working correctly.

Notes on image data compatibility

Playback of moving images recorded with your recorder on other equipment and playback of moving images recorded or edited with other equipment on your recorder are not guaranteed.

Do not shake or strike the recorder

In addition to malfunctions and inability to record moving images, this may render the SD card unusable if image data breakdown, damage or loss may occur.

 
LCD screen and mini camera

Be careful when placing the camera near a window or outdoors. Exposing the LCD screen or the lens of camera to direct sunlight for long period may cause malfunctions.

Back up recommendation


To avoid the potential risk of data loss always copy data to a disk.

Identifying the parts of the mini DVR

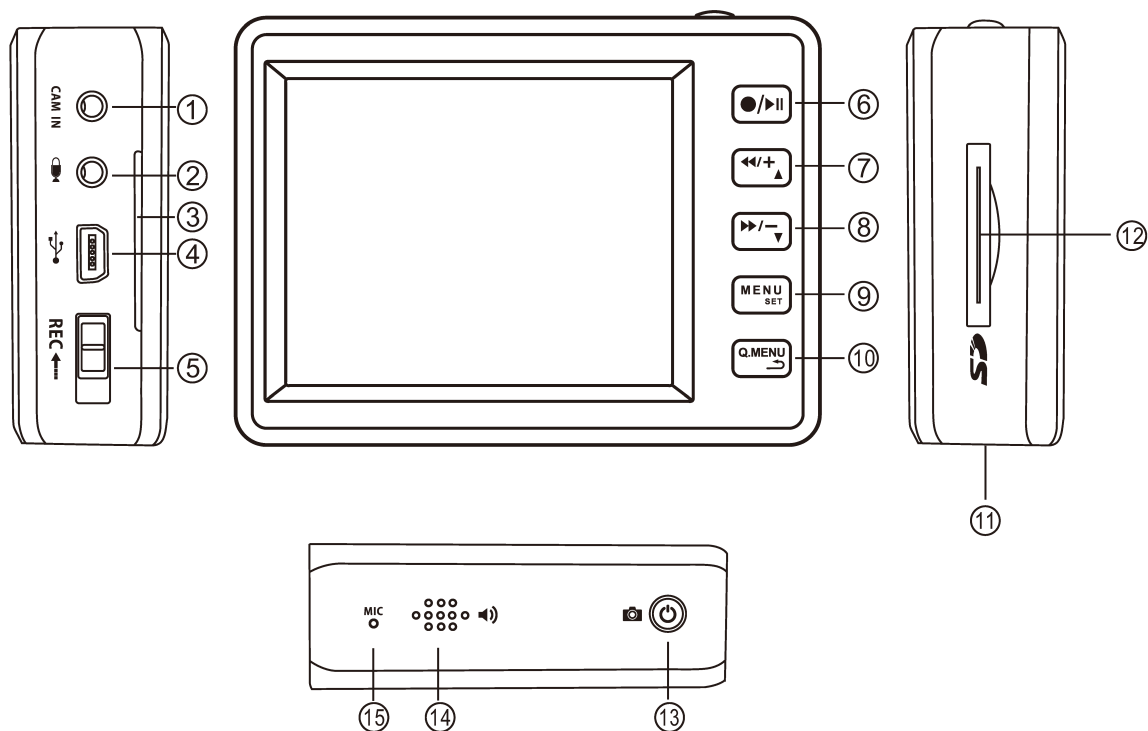

- | | |
|----------------------------------|-----------------------|
| ① Camera/AV in | ⑧ [FWD/Vol -] |
| ② Microphone in | ⑨ [MENU SET] Menu key |
| ③ LED indicator | ⑩ [Q.MENU] Return key |
| ④ AV OUT/USB/DC-in/Wired control | ⑪ Tripod thread |
| ⑤ REC/OFF switch button | ⑫ SD card slot |
| ⑥ [Play/OK] | ⑬ Power/photo |
| ⑦ [REV/Vol +] | ⑭ Speaker |
| | ⑮ Built-in microphone |

 Identifying the parts of the mini camera

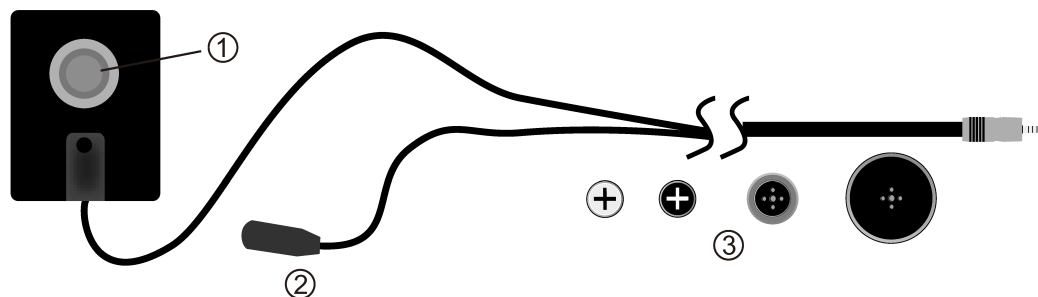

- ① Lens
- ② Microphone
- ③ Interchangeable buttons and screws

 
LCD screen indicators

Playback Mode



⑩

Recording Mode

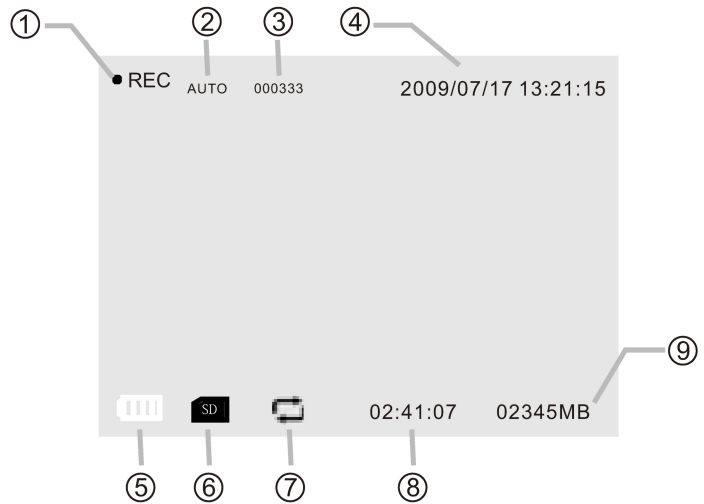

Playback Mode



⑪

Playback Mode



 
⑫

- ① Recording symbol
- ② Motion Activated symbol
- ③ No. of Frames indicator
- ④ Date/Time indicator
- ⑤ Battery indicator
- ⑥ SD card symbol
- ⑦ Cyclic Recording symbol

- ⑧ Remaining Time of Memory
- ⑨ Remaining Memory
- ⑩ Recorded Files(video)
- ⑪ Recorded Files(audio)
- ⑫ Recorded Files(photo)


Preparing the power supply

Your DVR can operate with mobile phone battery pack (KB-02 series)

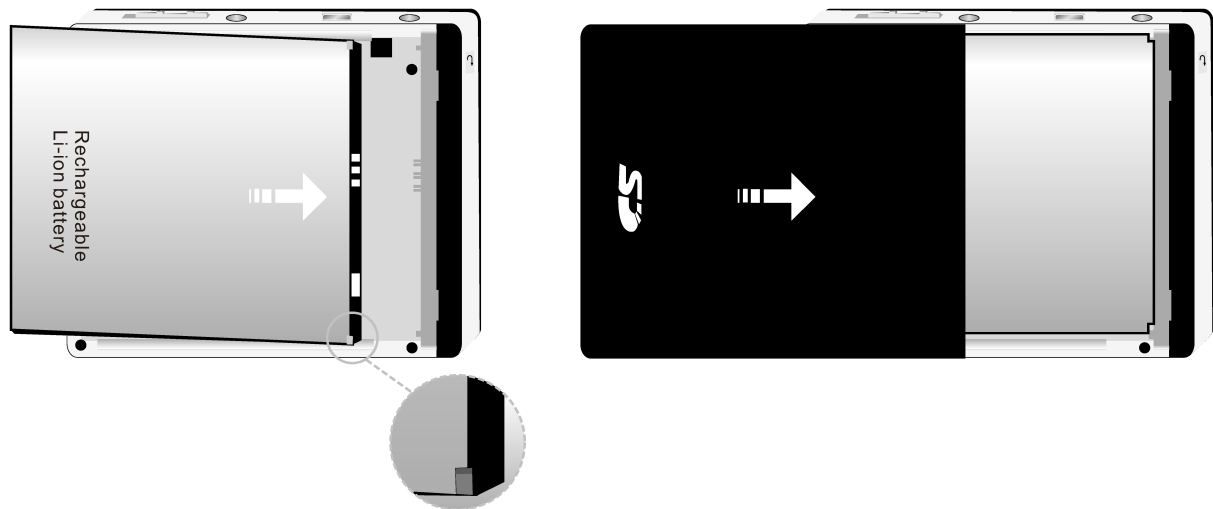

Installing the battery pack

Open the cover by slightly pushing and pull it back.

Insert the battery pack with the corner of "  " facing toward the battery compartment as illustrated.

Close the battery cover.

Charging the battery

Connect the AC power adapter with the USB port on your DVR. The charge lamp lights up when charging begins. When the charge lamp goes off normal charge is completed.

Charging time

| Battery pack capacity | Fully charging time(Approx.) |
|-----------------------|------------------------------|
| 1400 mAh | 240 mins |

Battery life


Movie mode recording

| Battery pack capacity | Continuous recording time(Approx.) |
|-----------------------|------------------------------------|
| 1400 mAh | 180mins. (fully charged battery) |

Movie mode playback

| Battery pack capacity | Continuous recording time(Approx.) |
|-----------------------|------------------------------------|
| 1400 mAh | 180mins. (fully charged battery) |

 Inserting the SD card

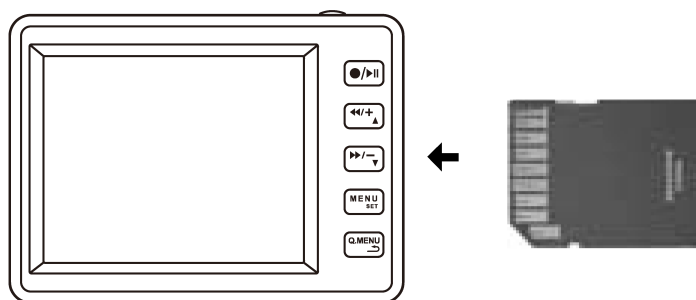

Insert SD card with the " " mark facing toward the SD slot as illustrated.


Recording time of memory capacity

| SD card capacity | 720 X 480 | 640 X 480 | 320 X 240 |
|------------------|------------------|-------------------|-------------------|
| 2GB | Approx. 55 mins | Approx. 65 mins | Approx. 130 mins |
| 4GB | Approx. 110 mins | Approx. 130 mins | Approx. 260 mins |
| 8GB | Approx. 220 mins | Approx. 260 mins | Approx. 520 mins |
| 16GB | Approx. 440 mins | Approx. 520 mins | Approx. 1040 mins |
| 32GB | Approx. 880 mins | Approx. 1040 mins | Approx. 2080 mins |


Basic Operations


One Touch Record

 Moving image is recorded in AVI(MPEG-4) format.

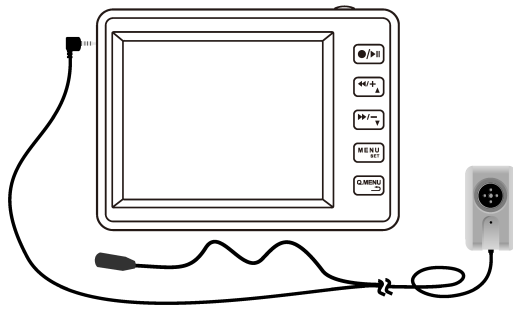


One Touch Record (Video & audio)

 a. When the main unit power off, connect the mini camera and slide the shortcut key [](upward),the LED indicator is red-flashing during recording, this moment it is a video & audio recording.(Red LED light)as illustrated.

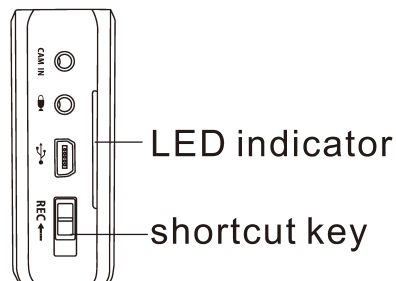

b. Slide the shortcut key[](downward), to save the video & audio recording.

One Touch Record (Audio)

a. When the main unit power off, do not connect the mini camera and slide the shortcut key[],the LED indicator is blue-flashing during recording, this moment it is a audio recording. (Blue LED light)as illustrated.

b. Slide the shortcut key[] (downward),to save the audio recording.

LED Indicator

Recording video: Red-flashing

Recording audio: Blue-flashing

 
Charging: Red

Stand by: Green


Motion Detection recording

Moving image is recorded in AVI(MPEG-4) format.


- a. When the main unit power off, connect the mini camera, press and hold the power button [⏻] for 2 seconds into a state of preview.
- b. Press the menu button [MENU], select " Setup " , press [●/▶] into the Setup menu.

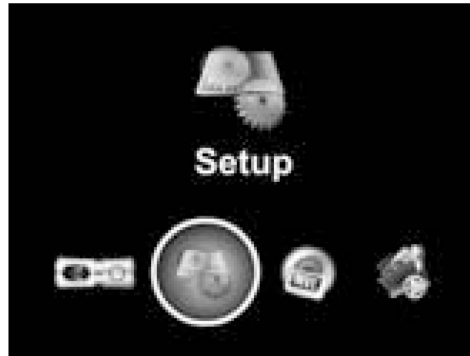

  - c. Press [◀/+▲] or [▶/-▼], and select "MOTION DETECTION"

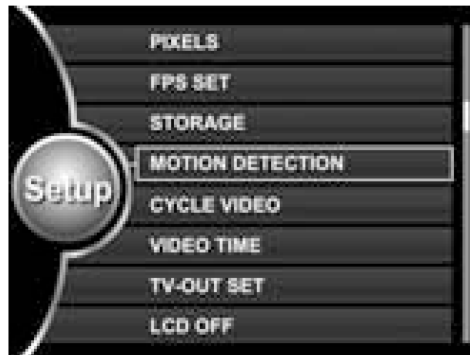

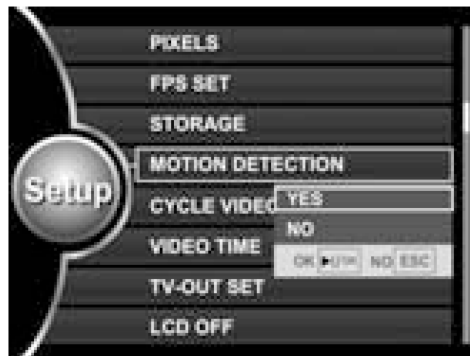


- d. Select "YES" and press [●/▶] to start the Motion Detection function. as illustrated



After setting, return to the state of preview, "press[●/▶] into the detection mode" shows on the bottom-left of the screen at the same time.

 
Cycle video (Storage full over write automatically)

Cycle video (Storage full over write automatically)


- When the main unit power off, connect the mini camera, press and hold the power button [] for 2 seconds into the state of preview.
- Press the menu button [], select " set up ", press [] into the set up menu.




- Press [] or [], and select "CYCLE VIDEO"

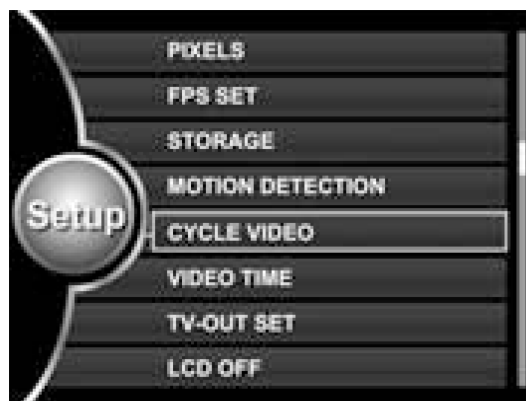

 
- Select "Open" and press [] to start the Cycle video function.

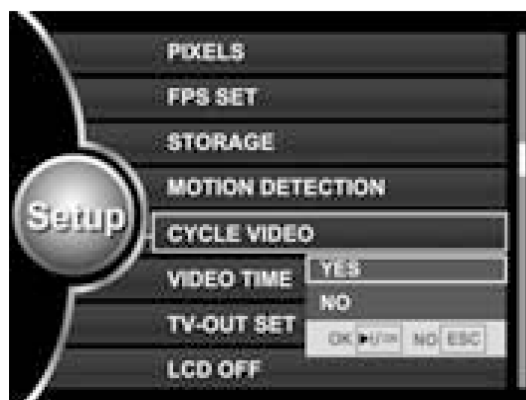


After setting, return to the state of preview, "[]" shows on the bottom-left of the screen at the same time.

Playback

 a. In the state of preview, press [^{MENU}_{SET}], select " Video ".

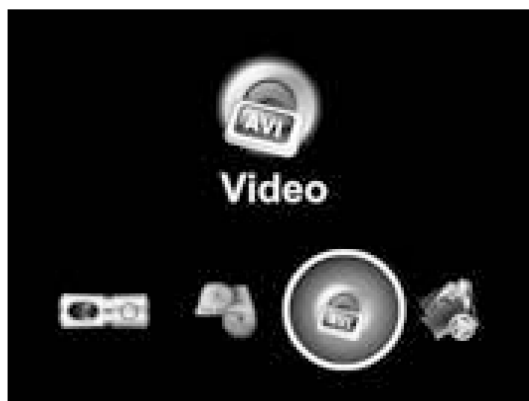


 b. Select " Record " or " Photo " or " Audio " , and press [●/▶].

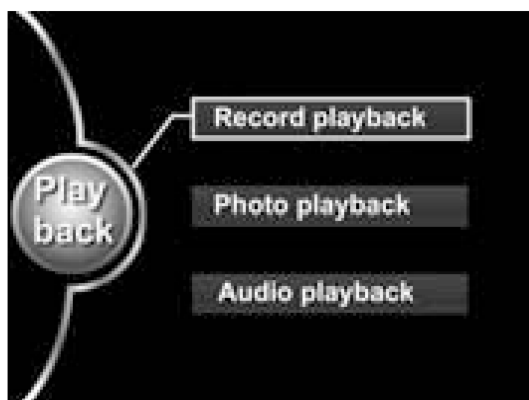

c. Enter " Record", select the desired video file with [◀+▲] or [▶/▼] key.

 d. Press [●/▶] key to play back the selected video file.

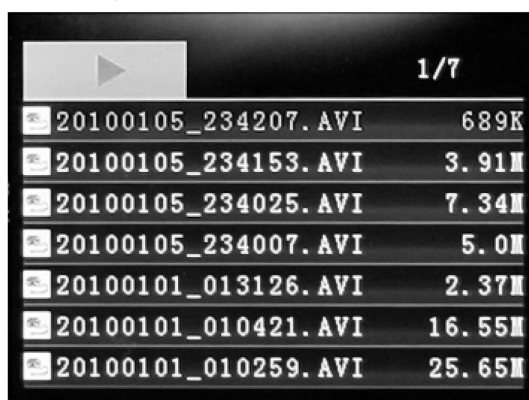


e. Press [●/▶] key to stop playing.


f. Press [^{Q.MENU}_→] key to return the recorded file list.

Enter "Photo", and "Audio" mode, the same operation as the above.

Recording moving images from mini camera

 a. Press and hold the power button [] for 2 seconds into the state of preview.

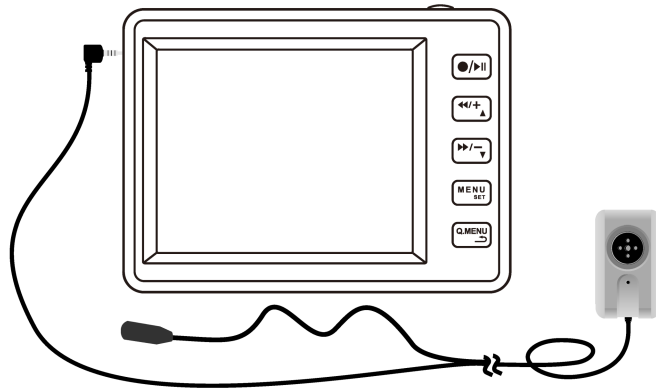

b. Press [] to start recording ,the LED indicator is flashing during recording,"Rec" shows on the left-up corner of the screen at the same time.

 


c. Press [] to stop and save recording, the red LED lamp is off.




Recording moving images from TV set and other video sources

a. When the main unit power off, connect the DVR with TV or other video sources via AV input cable.

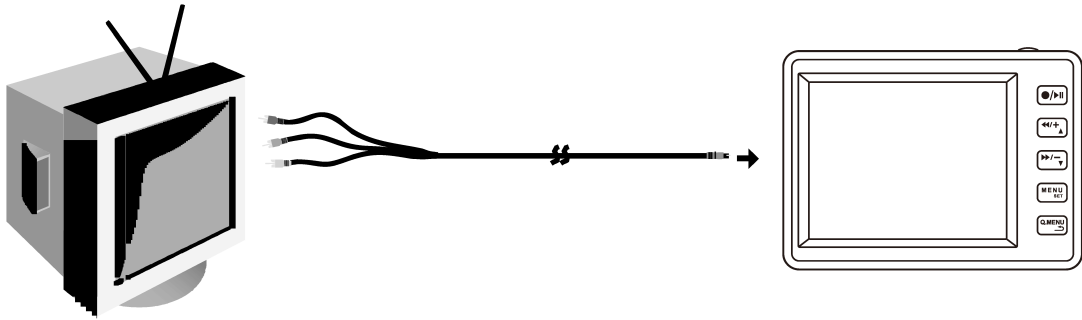


b. Press [] and hold for 2 seconds into the state of preview

c. Press [] to start recording, the LED lamp is red-flashing during recording, "Rec" shows on the left-up corner of the screen at the same time, as illustrated

Taking photos from mini camera

 a. In the state of preview, Shortly press [] as illustrated.

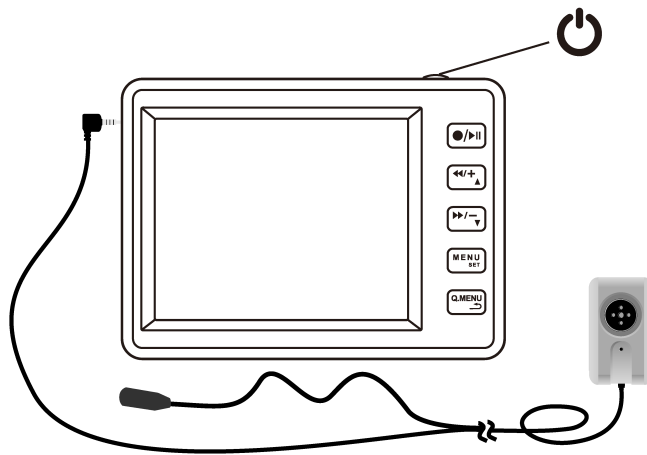


Playing back media files on mini DVR (music,movie,photo)

a. In the state of preview, press [^{MENU}_{SET}] to enter the Media mode.




 b. Enter "Photo", select the desired Photo files with [◀+▲] or [▶-▼] key.

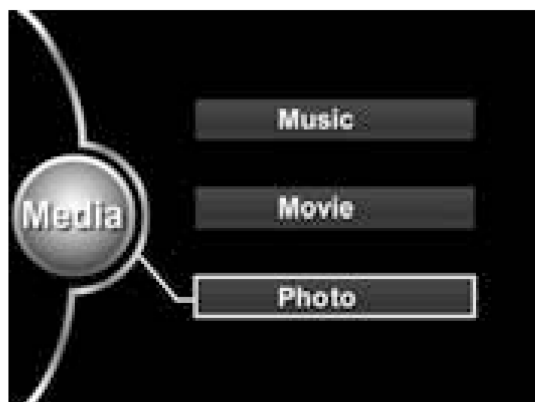

c. Press [●/▶] key to play back the selected photo file.

 d. Press [●/▶] key to stop playing.

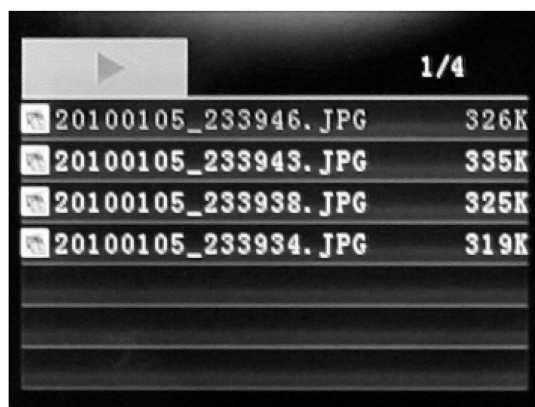


e. Press [^{Q.MENU}₃] key to return the recorded file list.

Enter "Music", and "Movie" mode, the same operation as the above.

Playing back moving images on PC (records,photo,audio)


a. Take out the SD card, connect it with the computer via the card reader.

 b. Connect the DVR with the computer via the USB cable, "PC Connection" shows on the screen as illustrated.

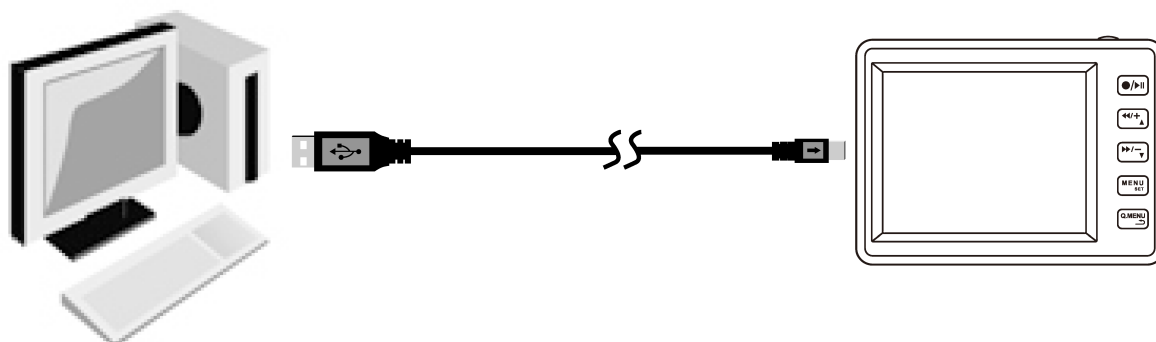


Playing back moving images on TV screen (records, photo, audio)

 a. IN the state of preview, connect the DVR with TV/monitor via AV output cable.

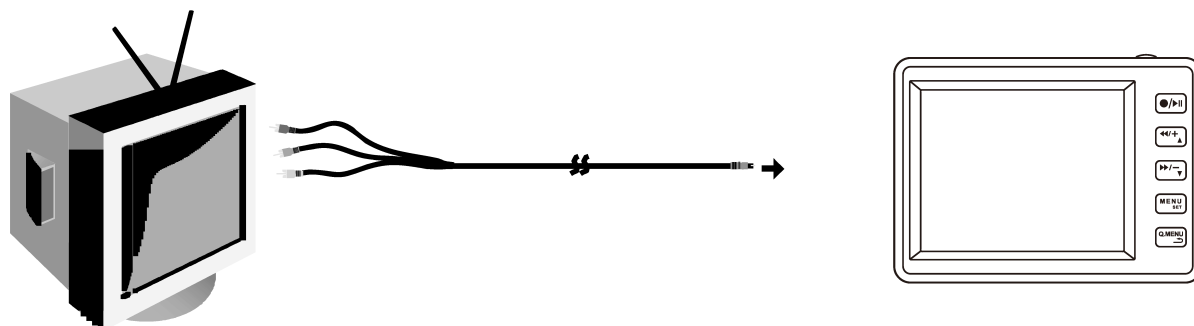

b. Press the [^{Q.MENU}→] button, select "Setup"

 
c. Press [◀/+▲] or [▶/-▼], and [●/▶] into the "TV-OUT SET" select "PAL" or "NTSC", the image is transmitted from DVR to TV . as illustrated.

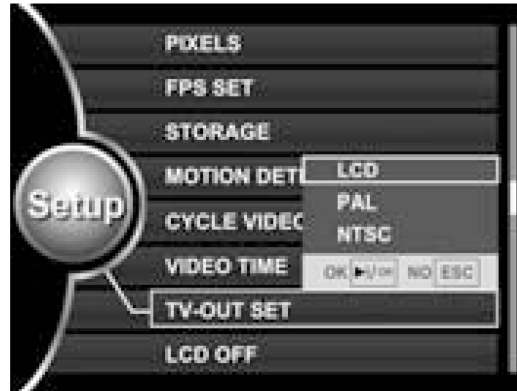

d. The next operations are the same as the DVR's (Playing back moving images on mini DVR).

Update media files (Music, Movie, Photo)

 - a. Take out the SD card, connect it with the computer via the card reader.
- b. Connect the DVR with the computer via the USB cable, " PC Connection " shows on the screen to update the media files as illustrated.

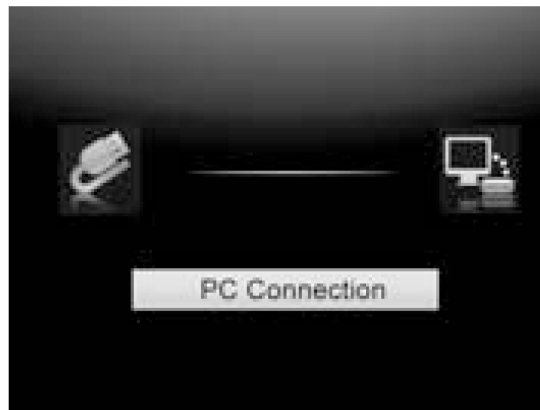

c. Format Instruction

| | |
|-------|-----------------------------|
| Music | MP3/MP2.5 |
| Movie | MPEG-1/MPEG-4/AVI/ASF/ADPCM |
| Photo | JPG/JPEG |

Copy recorded files

- a. In the playback mode, press [●/▶] into record submenu.
- b. Select the desired file, press [^{MENU}SET].as illustrated.



- c. Select "Copy to", Press "Nand flash" or "SD" as illustrated.

 
 


Delete recorded files

- a. In the playback mode , press [●/▶] into record submenu.
- b. Select the desired file , press [MENU_{SET}] .as illustrated.




- c. Select "Delete", press "All" or "Current" or "Cancel" as illustrated.

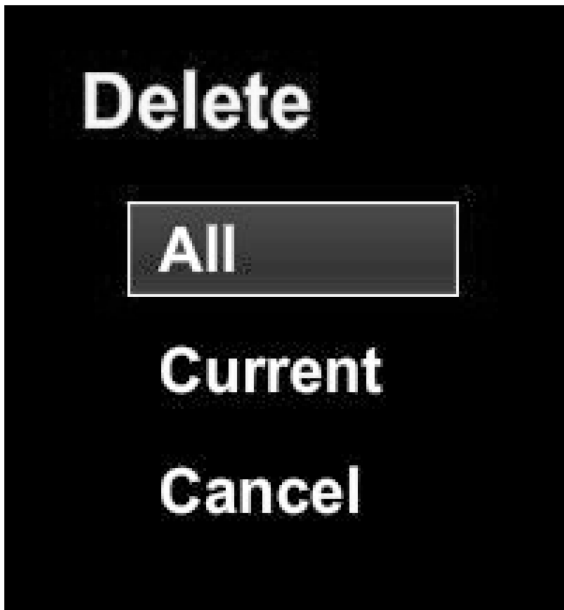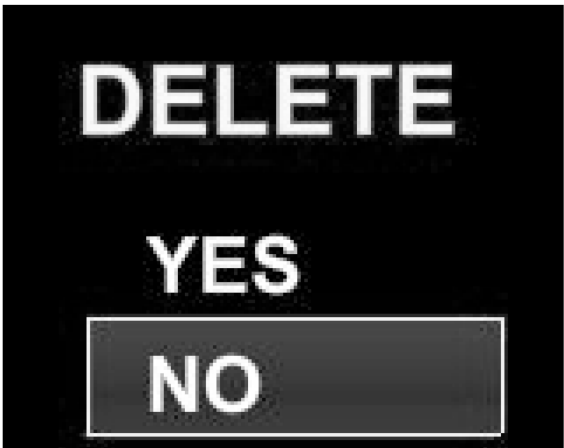

Setting the record


 
- a. In the state of preview,press [^{Q.MENU}↵] into record Setup
- b. Select "Pixels" and "Microphone" submenu,press [●/▶] as illustrated.

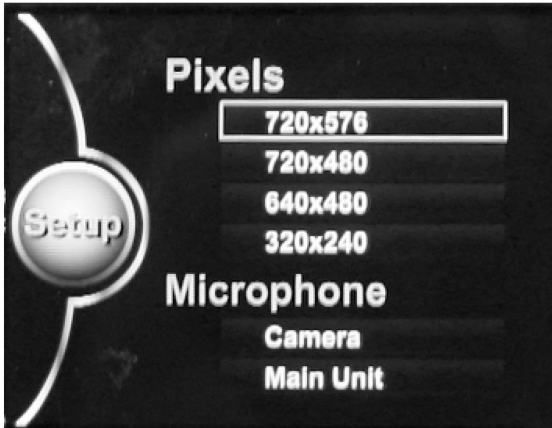

- c. Press [^{Q.MENU}↵] to back to the state of preview

Setting the pixels

  
- a. In the state of preview,press the [^{MENU}SET] button , select " Setup ".
- b. Press [◀/+▲] or [▶/-▼],select the "Pixels"
- c. Select "720x576" or "720x480" or "640x480" or "320x240"and press [●/▶] .as illustrated.

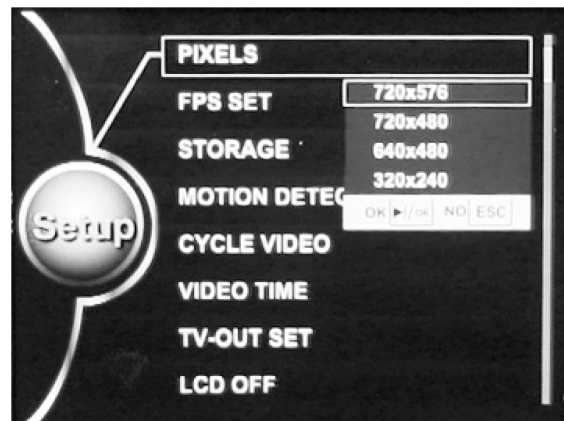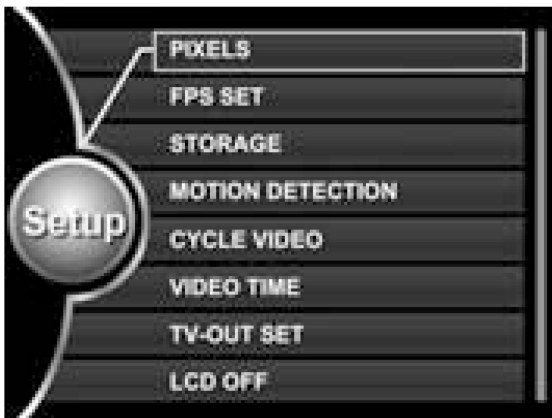

- d. Press [^{Q.MENU}↵] to back to setup menu.

Setting the frames


 
- In the state of preview, press the [^{MENU}_{SET}] button , select " Setup ".
- Press [^{◀/+}_▲] or [^{▶/-}_▼], select the "FPS SET".as illustrated.

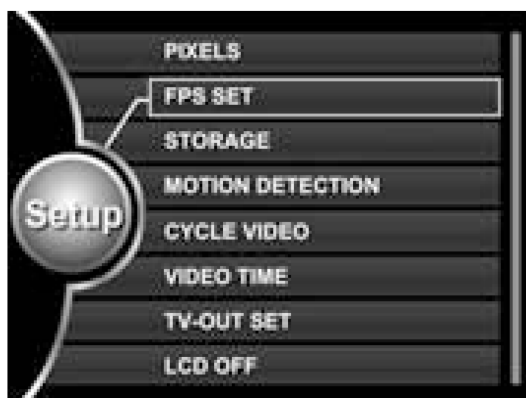

- Select "15Fps" or "25Fps" or "30Fps"and press [^{●/▶}_⏏].
- Press [^{Q.MENU}_↵] to back to setup menu.

Setting the storage

 
 
- In the state of preview, press the [^{MENU}_{SET}] button, select " Setup ".
- Press [^{◀/+}_▲] or [^{▶/-}_▼], select the "STORAGE".

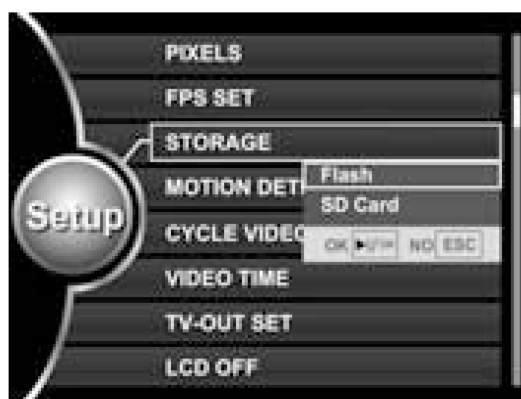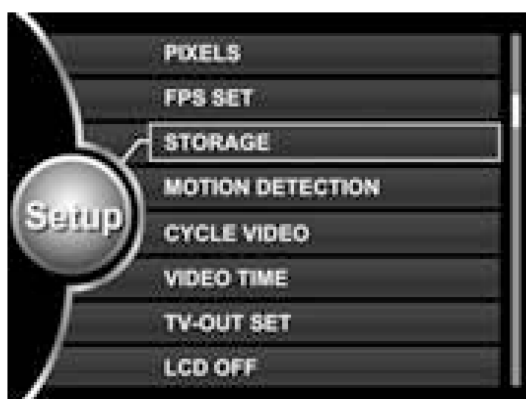

- Select "FLASH" or "SD Card" and press [^{●/▶}_⏏].
- Press [^{Q.MENU}_↵] to back to setup menu.

Setting the motion detection

 
 
- In the state of preview, press the [MENU_{SET}] button, select " Setup ".
- Press [◀/+] or [▶/-],select the "MOTION DETECTION".as illustrated.

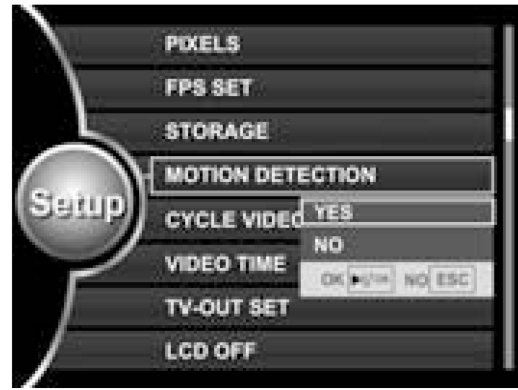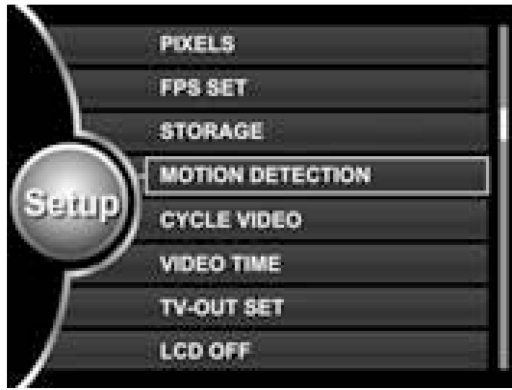

- Select "YES" or "NO" and press [●/▶].
- Press [$\text{Q.MENU}_{\text{SET}}$] to back to setup menu.

Setting the cycle video

  
- In the state of preview, press the [MENU_{SET}] button, select " Setup ".
- Press [◀/+] or [▶/-],select the "CYCLE VIDEO".as illustrated.

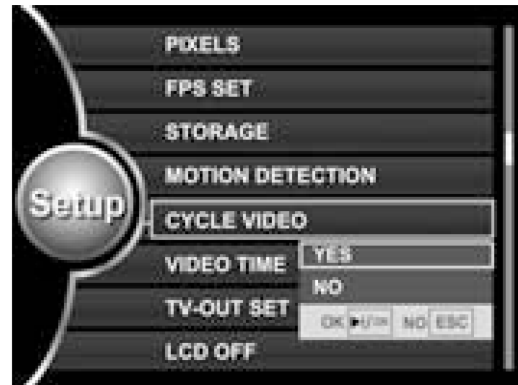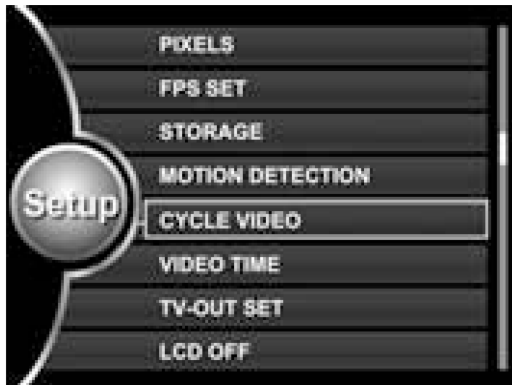

- Select "YES" or "NO"and press [●/▶].
- Press [$\text{Q.MENU}_{\text{SET}}$] to back to setup menu.

Setting the video time


 
- In the state of preview, press the [^{MENU}_{SET}] button, select " Setup ".
- Press [◀/+▲] or [▶/-▼], select the "VIDEO TIME" . as illustrated.

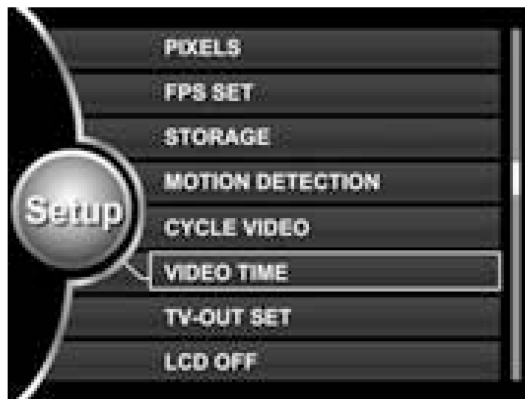

- Select "10 Minutes" or "20 Minutes" or "30 Minutes" and press [●/▶].
- Press [^{Q.MENU}_→] to back to setup menu

Setting the TV output

 
 
- In the state of preview, press the [^{MENU}_{SET}] button, select " Setup ".
- Press [◀/+▲] or [▶/-▼], select the "TV-OUT SET". as illustrated.

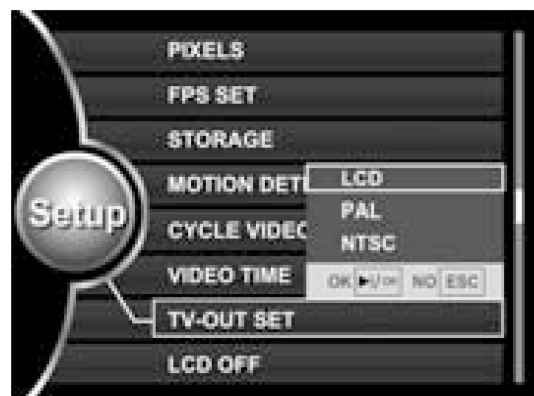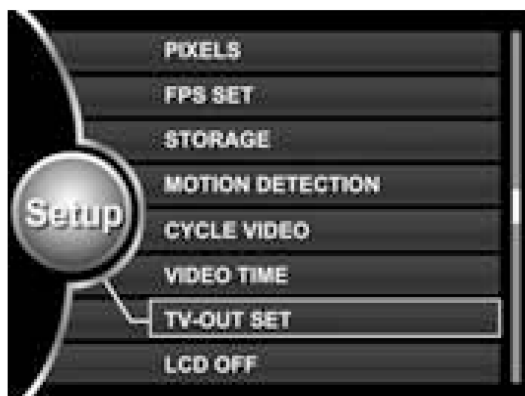

- Select "LCD" or "PAL" or "NTSC" and press [●/▶].
- Press [^{Q.MENU}_→] to back to setup menu.

Setting the LCD off time

 
 
- In the state of preview, press the [^{MENU}_{SET}] button, select " Setup ".
- Press [[←]+_▲] or [[→]+_▼],select the "LCD OFF" .as illustrated.

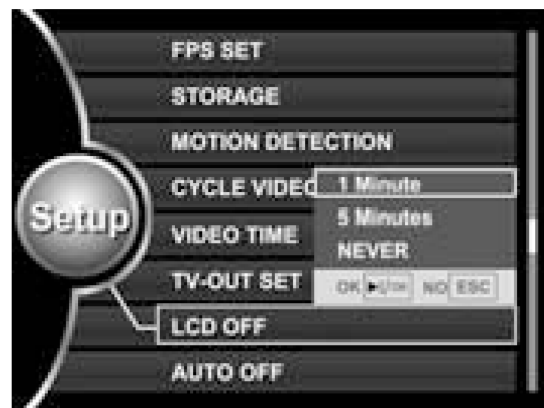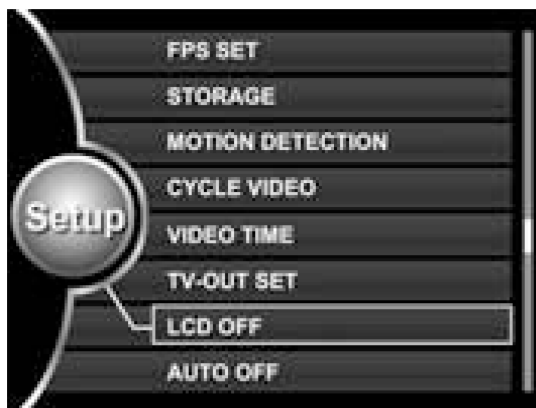

- Select "1 Minute" or "5 Minutes" or "NEVER"and press [[●]+_▶]
- Press [^Q._{MENU}] to back to setup menu.

Setting the Power off time

  
- In the state of preview, press the [^{MENU}_{SET}] button, select " Setup ".
- Press [[←]+_▲] or [[→]+_▼],select the "AUTO OFF" .as illustrated.

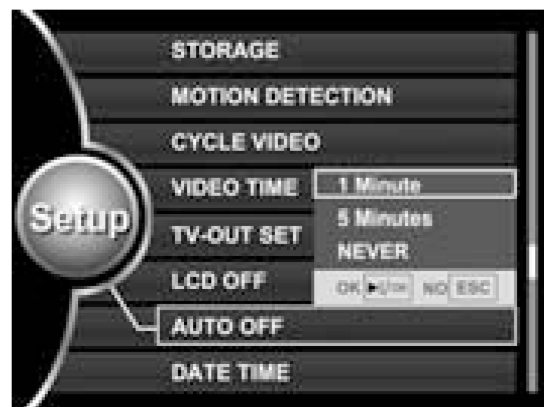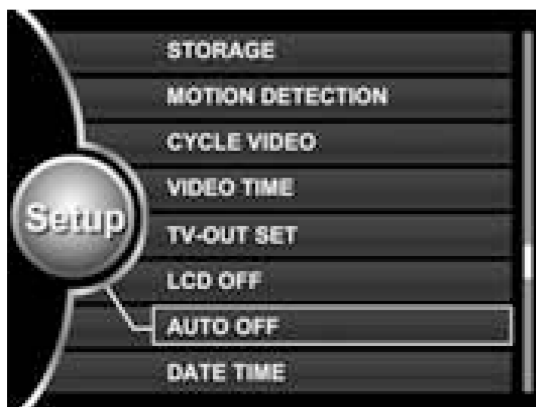

- Select "1 Minute" or "5 Minutes" or " NEVER"and press [[●]+_▶]
- Press [^Q._{MENU}] to back to setup menu.

Setting the vibrate

 - In the state of preview, press the [^{MENU}SET] button, select " Setup ".
- Press [◀/+] or [▶/-], select the "VIBRATE OFF" .as illustrated.

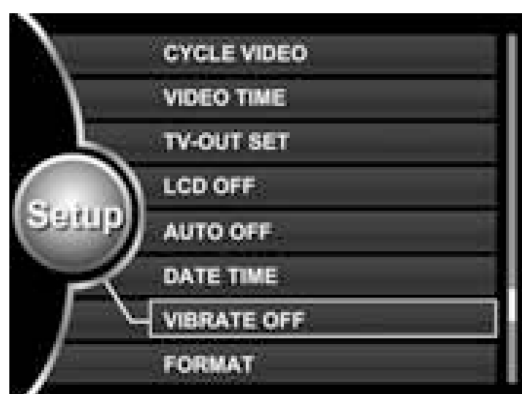

- Select "YES" or "NO" and press [●/▶]
- Press [^{Q.MENU}] to back to setup menu.

Setting the language

 
 
- In the state of preview, press the [^{MENU}SET] button, select " Setup ".
- Press [◀/+] or [▶/-], select the "LANGUAGE" .as illustrated.



- Select "English" or "Russian" or "Chinese" and press [●/▶]
- Press [^{Q.MENU}] to back to setup menu.

Setting the date time

- a. In the state of preview, press the [^{MENU}_{SET}] button, select " Setup ".
- b. Press [◀/+▲] or [▶/-▼],select the "DATE TIME".as illustrated.

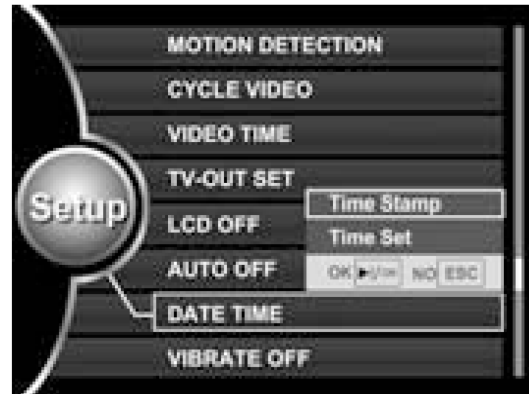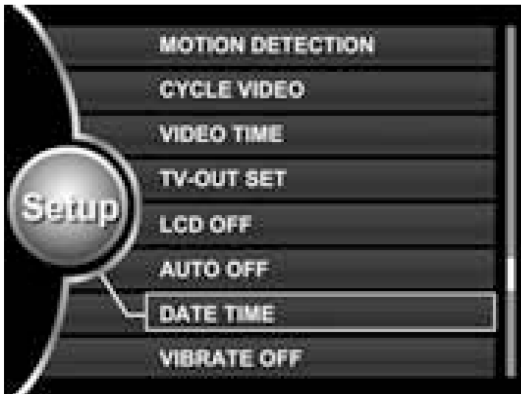

- c. Select "Time stamp", Select "YES" or "NO", and press [●/▶].as illustrated.



 
- d. Select "Time set" to set up the date. as illustrated.



- e. Press [^{Q.MENU}₃] to back to setup menu.

Setting the format

- a. In the state of preview, press the [MENU_{SET}] button, select " Setup ".
- b. Press [◀/+▲] or [▶/-▼],select the "FORMAT" .as illustrated.

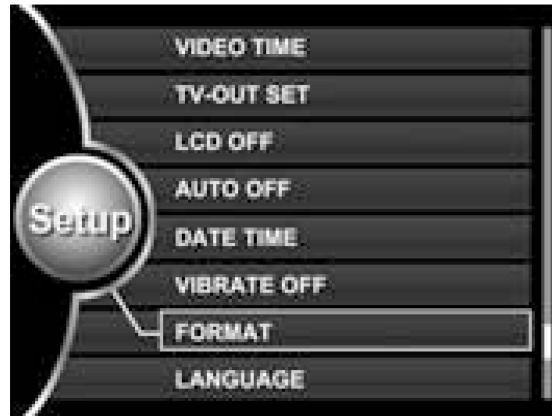

- c. Select "Flash" or "SD Card", and press [●/▶]. as illustrated.



- d. Press [Q.MENU↵] to back to setup menu. as illustrated.



WARNING! FORMATING WILL DELITE ALL DATA.

Specifications

KL-600DVR

| | | |
|------------------------|-------------------------|-----|
| Digital Screen | 2.5 TFT LCD | |
| Color System | PAL/NTSC (Auto) | |
| Resolution | 960 X 240 | |
| Recording Format | AVI | |
| Recording Resolution | 720 X 576 | |
| | 720 X 480 | |
| | 640 X 480 | |
| | 320 X 240 | |
| Motion Activated | Yes | |
| Cycle Recording | Yes | |
| Real-time Stamp | Yes | |
| Video Time | 10/20/30Mins | |
| LCD Off | 1/3/5Mins/Never | |
| Auto Power Off | 5/10Mins/Never | |
| Vibration Function | ON/OFF | |
| TV-OUT | NTSC/PAL | |
| AV-IN | NTSC/PAL | |
| Storage | FLASH | |
| | SD CARD | |
| Playback | Video | Yes |
| | Voice | Yes |
| Media | Yes/Music/Movie/Photo | |
| Frame Rate | 30fps/25fps/15fps | |
| Built-in Flash Memory | 256MB | |
| USB jack | High-speed USB2.0 | |
| DC Input | DC 5V 1A | |
| Battery pock capacity | 3.7V 1400mAh | |
| SD card | SD 1GB~32GB | |
| Power output of Camera | DC 5V 200mAh | |
| AV Input jack | 3 rings with 2.5 | |
| AV Output jack | 3 rings with 2.5 | |
| Language | English/Chinese/Russian | |

JS-418C mini button CCD camera(Optional)

| | |
|------------------------|------------------------------|
| Imaging Sensor | 1/3 color SONY CCD |
| Horizontal definition | 480 TV Lines |
| Total number of pixels | NTSC:537 (H) 505 (V) approx. |
| | PAL:537 (H) 597 (V) approx. |
| Minimum illumination | 0.5 LUX |
| Dimensions | 34x22x10mm |
| Power supply | DC 5V 150mAh |

JS-618C mini button CMOS camera(Optional)

| | |
|-----------------------|----------------|
| Imaging Sensor | 1/3 color CMOS |
| Horizontal definition | 420 TV Lines |
| Minimum illumination | 3 LUX |
| Dimensions | 34x22x10mm |
| Power supply | DC 5V 150mAh |







GL-403C mini bullet CCD camera (Option)

| | |
|------------------------|------------------------------|
| Imaging Sensor | 1/3 color SONY CCD |
| Horizontal definition | 480 TV Lines |
| Total number of pixels | NTSC:537 (H) 505 (V) approx. |
| | PAL:537 (H) 597 (V) approx. |
| Minimum illumination | 0.5 LUX |
| Dimensions | ø18x75mm |
| Power supply | DC 5V 150mAh |

GL-405C mini bullet digital camera (Option)

| | |
|-----------------------|----------------|
| Imaging Sensor | 1/3 color CMOS |
| Horizontal definition | 420 TV Lines |
| Minimum illumination | 3 LUX |
| Dimensions | ø15x61mm |
| Power supply | DC 5V 150mAh |

Accessories

| | |
|---|---|
| AV In cable AV Out cable |  x 1 |
| Camera Covers |  x 1 |
| USB cable |  x 1 |
| Rechargeable Li-ion Battery 1400mAh |  x 1 |
| AC charger |  x 1 |
| Manual |  x 1 |

DOWNLOAD

OzSpy PGDPVR03 KL-600 Mini Digital Video Recorder and JS-418C Mini Button CCD Camera User Manual – [\[Download PDF\]](#)
