



P-touch Electronic Labeling System User Guide

[Home](#) » [P-touch](#) » P-touch Electronic Labeling System User Guide

P-touch Electronic Labeling System



*Thank you for purchasing a Brother P-touch labeling system!
Use your new Brother P-touch labeling system to create a wide variety of custom, self-adhesive labels.
This P-touch labeling system uses Brother TZe or HGe tapes. TZe and HGe tape cassettes are available in many colours and sizes. For a complete list of tapes compatible with your P-touch labeling system, visit us at www.brother.com
Please read this guide, and the included Product Safety Guide, before using this P-touch labeling system. After reading this guide, keep it in a safe place.*

Contents [[hide](#)

1 GETTING STARTED

- 1.1 Installing Power Supply and Tape Cassette
- 1.2 LCD
- 1.3 Keyboard
- 1.4 Initial Settings
- 1.5 Contrast
- 1.6 Supplies and Accessories
- 1.7 Specifications

2 BASIC USAGE

- 2.1 Entering Text
- 2.2 Saving Tapes Files
- 2.3 Text Key
- 2.4 Underline and Frame
- 2.5 Symbols Key
- 2.6 Printing Labels

3 LABEL APPLICATION KEYS

- 3.1 Cable Wrap
- 3.2 Cable Flag
- 3.3 Faceplate
- 3.4 Serialise

4 HELPFUL HINTS

- 4.1 Shortcuts
- 4.2 Resetting the P-touch Labeling System

5 Troubleshooting

6 Documents / Resources


- 6.1 References

7 Related Posts

GETTING STARTED


Installing Power Supply and Tape Cassette

1. With the LCD facing down, open the Cassette Cover by pressing the grooved tab and pushing the cover in the direction of the arrow, as illustrated.

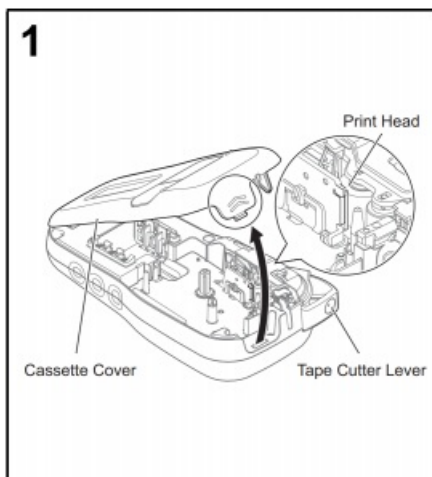


2. When replacing batteries or tape cassettes, make sure the power is turned off.


This P-touch labeling system requires six AAA alkaline batteries or six fully-charged Ni-MH batteries, not included.

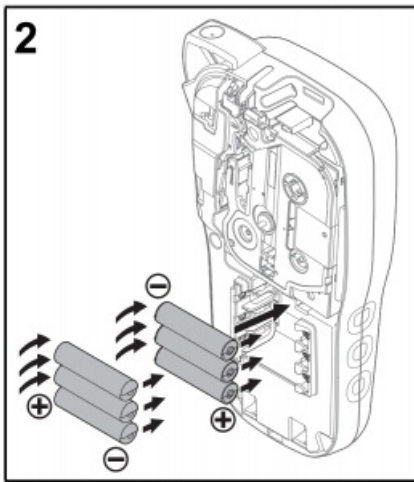

3. Insert the Tape Cassette following the drawing marked inside the case. Gently press the Cassette into the P-touch labeling system until it locks into place.

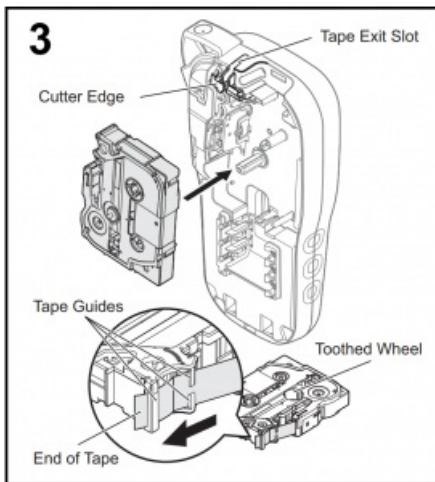

- Make sure your Tape Cassette is marked **TZe** or **HGe** .
 - Use only Brother TZe or HGe tapes with this machine.
4. Close the Cassette Cover and gently press until it locks into place.

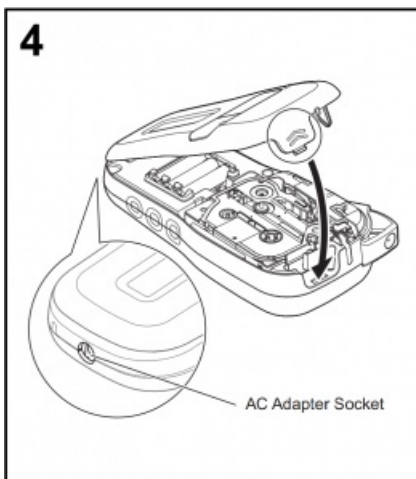


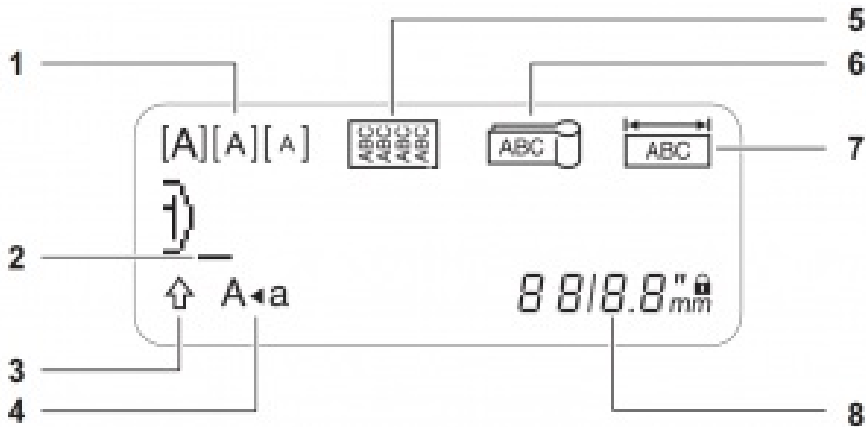
NOTE

If you prefer to use the optional AC Adapter (AD-24ESA) instead of using batteries:

1. Insert the Power Adapter cord into the AC Adapter Socket on the side of the P-touch labeling system.
2. Insert the Power Adapter into an earthed AC electrical socket.

LCD

1. Size
2. Cursor
3. Shift
4. Caps
5. Cable Wrap
6. Cable Flag
7. Faceplate
8. Label Length If a specific label length has been selected,  also appears.



NOTE


- The LCD displays one row of 15 characters; however, the text you enter can be up to 80 characters in length.

- Label length displayed on the LCD may differ slightly from the actual printed label length.

Keyboard

1. Menu key
2. Power key
3. Cursor key: Left (Use with the Shift key to go to top of the text.)
4. Escape key
5. OK key
6. Cable Wrap key
7. Text key
8. Character keys
9. Shift key
10. Caps key
11. Accent key
12. Tape Cutter lever
13. Clear key
14. Print key

15. Preview key
16. Cursor key: Right (Use with the Shift key to go to end of the text.)
17. Cable Flag key
18. Faceplate key
19. Serialise key
20. Backspace key
21. Enter key
22. Symbols key
23. Space key

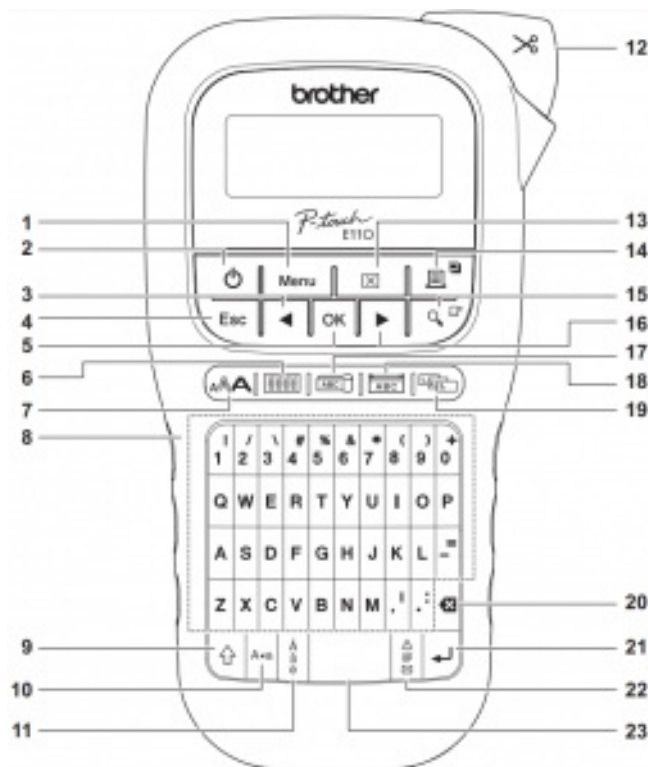


NOTE

- When selecting settings or lengths, press the Space key to return to the default value.

Pressing the Preview key displays a preview of the label, and may differ from the actual label when printed.

Initial Settings

1. Turn on your P-touch labeling system.

Supply power using six AAA batteries or the optional AC Adapter (AD 24ESA), and then press  to turn on the power.

2. Set the language.

The default setting is [English].




3. Set the unit of measurement.

The default setting is [mm].



NOTE

- The P-touch labeling system automatically turns off if it is inactive for five minutes.

- To cancel any operation, press  .
- To return to the default setting, press the Space key.

Contrast

Use this function to set LCD brightness. There are five levels from [-2] (darkest) to [+2] (brightest). The default setting is [0].



NOTE

- To return to the default setting, press the Space key.

Supplies and Accessories


Cassettes: See the included guide.
AC Adapter: AD-24ESA
Cutter Unit: TC-4 (replacement)

If the cutter blade becomes blunt after repetitive use and the tape cannot be cut cleanly, rotate the cutter board as shown in the illustration 1.

If you still have difficulties, replace with a new cutter unit (stock no. TC-4) from an authorized Brother reseller.

► Replacing the Cutter Unit

1. Remove the two sections of the Cutter Unit (green) in the direction of the arrows as illustrated below **2**.
2. Install a new Cutter Unit. Push it in gently until it locks into place.

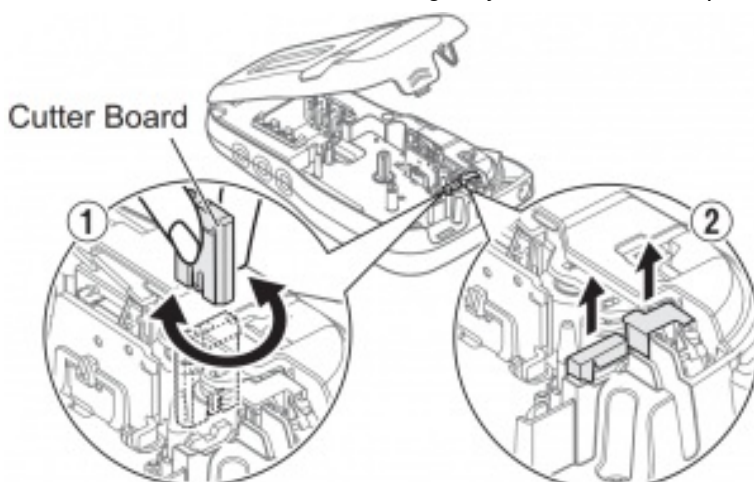

WARNING

Do not touch the cutter blade directly with your fingers.

Specifications

Dimensions: (W x D x H) Approx. 109(W) X 202(D) X 55(H) mm

Weight: Approx. 400 g (without batteries and tape cassette)

Power supply: Six AAA alkaline batteries (LR03) Six AAA Ni-MH batteries (HR03) *1 Optional AC Adapter (AD-24ESA)

Tape cassette: Brother P-touch TZe tape widths: 3.5 mm, 6 mm, 9 mm, 12 mm Brother HGe tape widths: 6 mm, 9 mm, 12 mm

*1 Visit support.brother.com for the latest information about the recommended batteries.

BASIC USAGE

Entering Text

You can enter a maximum of 80 characters and spaces for each text label.

To cancel any operation, press

Esc


► Switching Upper Case / Lower Case

A<a

Upper case

A<a


( ON)

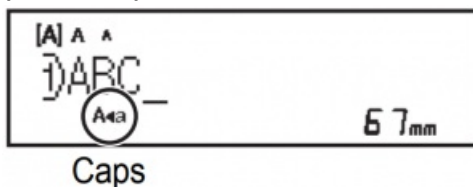


Lower case

A<a


( ON)

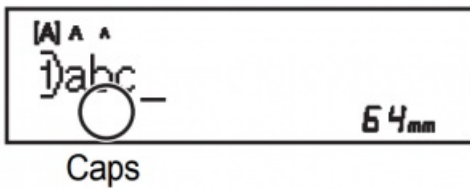

► Creating Two-Line Tapes

Move the cursor to where you want to start the next line and press . Use either 9 mm or 12 mm tape for two-line printing.


Line 1

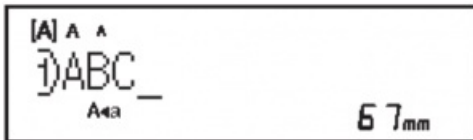



The image

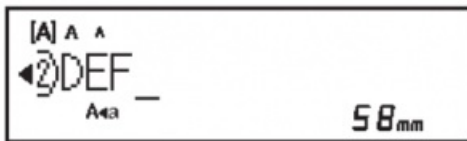

Line 2




NOTE

- The return symbol () appears when you press the Enter key .

► Entering Tabs



The tab symbol  appears when you insert a tab in the text.

 
► Changing Tab Length




- To return to the default tab length, press the Space key.
- Please note: the default length varies based on your tape size

► Cursor Keys

To move to the end of your text:



To move to the beginning of your text:

 


► Entering Accented Characters




- See the Accented Characters table in this guide.
- The order of accented characters varies based on the language you selected.

► Changing Label Length

NOTE

- The lock symbol  appears when you set a specific tape length.
- To return to the default length (Automatic, based on text length), press the Space key.

► Clearing Text and Settings

To delete individual letters and spaces, press  .

To delete all text:



To delete all text and settings:



Saving Tapes Files

You can save and reuse the text and settings for up to nine different labels. Each tape holds up to 80 characters (including spaces). Assign a number (1-9) to each saved file so you can reuse it, and edit or overwrite stored files as needed.


► Saving a new file




NOTE

- When saving a file, if you reuse a number that is already assigned to another file, [Overwrite OK?] appears on the LCD. To overwrite the previously-saved file, press . To cancel without saving, press .

► Printing a saved file

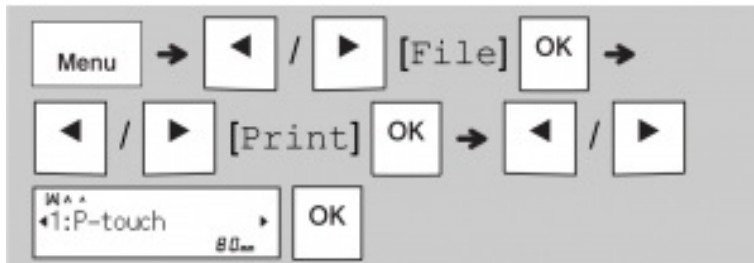

► Opening a saved file

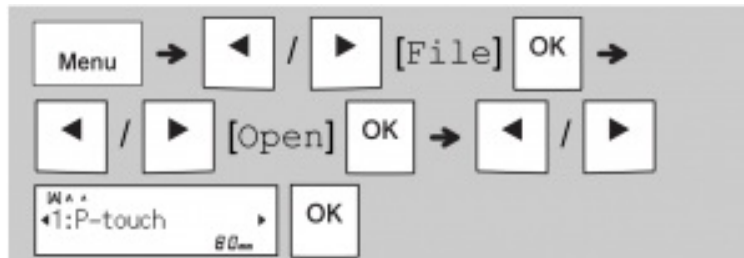












Text Key

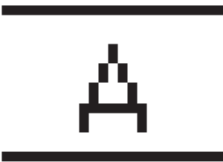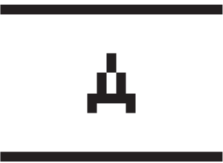



- Press to select the settings to enter the text.



- Press / to select the settings.

	Large	
--	-------	--

Size	Medium	
	Small	
Style	Normal	
	Bold	
	Outline	
	Shadow	
	Italic	
	I+Bold	
	I+Outline	
	I+Shadow	
	Vertical	

	V+Bold	
Width	Normal	
	× 2	
	× 1/2	

Underline and Frame

Emphasize text using underlines or a frame

Menu

→

◀ / ▶

[Undl/Frame]






OK

→

◀ / ▶


(Select a frame type)

OK

2	
12345	    
3	
<div></div>	

Symbols Key

► Entering Symbols



→

(Select category)


OK

→


◀ / ▶

(Select a symbol)

OK

- See the **Symbols** table in this guide.
- To cancel operation, press .
- Select History to view up to seven recently used symbols
- You can also insert Symbols by pressing the shortcut keys, as shown below.






Punctuation	Space key	Currency	<div>G</div>
History	<div>A</div>	Greek	<div>H</div>
Brackets	<div>B</div>	Electrical	<div>I</div>
Bullets	<div>C</div>	Datacom	<div>J</div>
Super/Subscript	<div>D</div>	AV/Security	<div>K</div>
Mathematics	<div>E</div>	Safety	<div>L</div>

Arrows			
--------	--	--	--

Printing Labels

► Preview



- Pressing the Preview key displays a preview of the label, and may differ from the actual label when printed.
- If the LCD cannot display all the text at once, press  /  to display the hidden text.
- Press  /  /  to exit Preview mode.

► Feeding (Tape Feed)



- This function feeds approximately 25 mm of blank tape.
- Do not pull uncut tape from the Tape Cassette as this may damage the Tape Cassette.

► Printing




Press the Print key to print the text displayed on the LCD.

► Printing Multiple Copies



- You can print up to nine copies of each label.
- DO NOT touch the Tape Cutter Lever while the message [Please Wait] is displayed on the LCD.
- To cut tape:** When printing ends, push the Tape Cutter Lever after the message [Please Cut] appears.
- To remove tape backing, fold the tape lengthwise (with the text facing inward), to expose the inside edges that run down the centre of the tape backing. Peel and apply

► Setting Margins

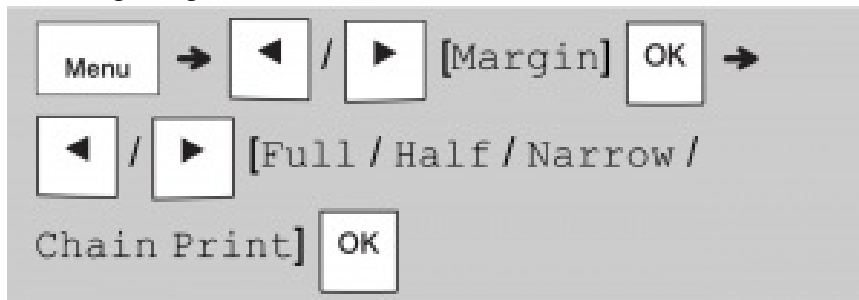


[Full] / [Half] / [Narrow]

Use one of these options to customize margin length before and after your text.

The printed dots (:) indicate the end of the label.

Cut along the printed dots (:) with scissors.

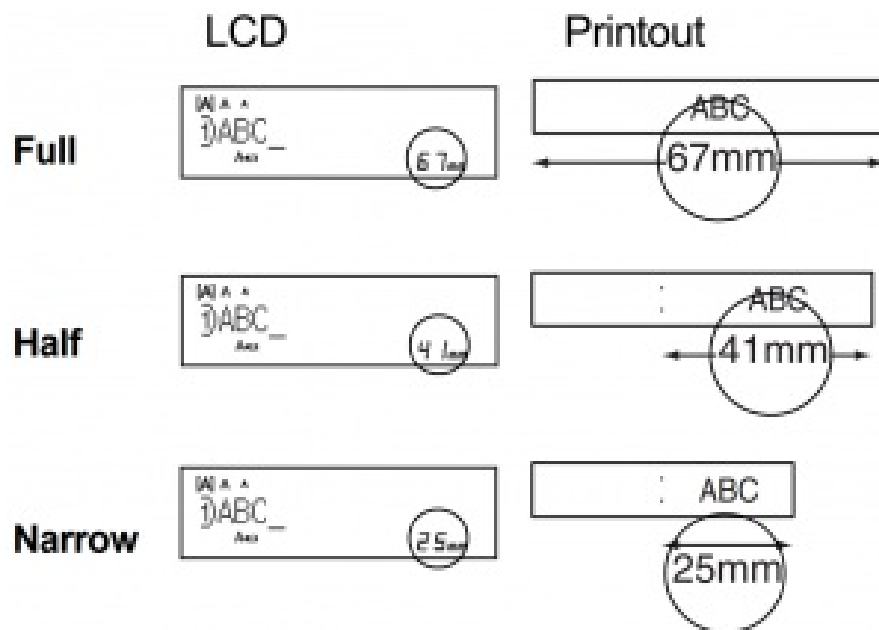

[Chain Print] (tape-saving option)

Use this option to print multiple different labels with narrow margins. This option saves tape.

1. Enter your text.

2. Press .

3. When [Feed OK?] appears on the LCD, press to change the text.

4. Clear the text, enter the text you want on the next label, and then press .

5. After your last label prints, when [Feed OK?] appears on the LCD, press .

NOTE


- When you use [Chain Print], feed the tape before using the cutter (+), otherwise part of the text may be cut off.

- Do not pull the tape, as this may damage the Tape Cassette.
- The printed dots (:) indicate the end of the label. Cut along the printed dots (:) with scissors.

LABEL APPLICATION KEYS

Cable Wrap

Use this function to create a label that can be wrapped around a cable or wire.

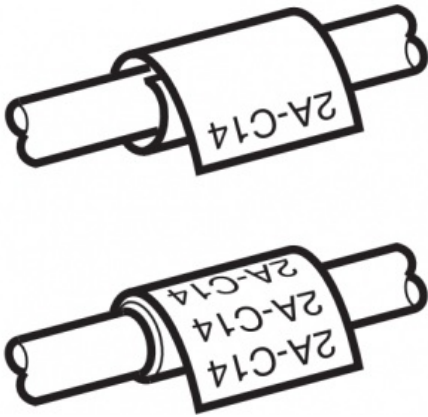

Turn on the Cable Rotate/Repeat function to print text repeatedly along the length of the label so that it can easily be read from any angle.

To activate the Text Repeat function, press Menu and then select [CableRot/Rpt].

[Txt Rpt: Off]




[Txt Rpt: On]




Cable diameter: 3 mm to 90 mm available Default: 6 mm

Cable Flag

Use this function to create a label that can be wrapped around a cable or wire with its ends applied together to form a flag.

 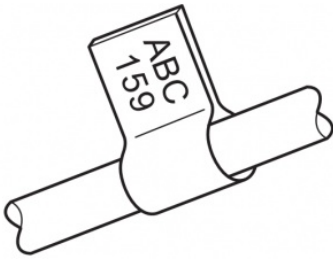

 


You can select the flag length you want. When you select [Auto], the flag length is automatically adjusted according to the text length.

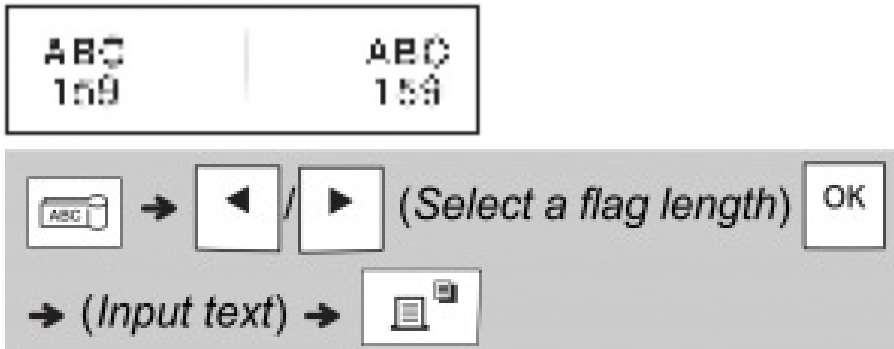


- Flag length: 10 mm to 200 mm, Auto Default: Auto
- Use the Cable Flag function when the diameter of the object is more than 3 mm.
- Text cannot be rotated when using the Cable Flag function.

NOTE

- We recommend using Flexible ID Tape for labels attached to cables and wires.
- To cancel the Cable Wrap/Cable Flag/Faceplate functions during operation, press  /  or .
- Depending on the format you select, the entire contents of your text may not be printed. For example, if the text is too long to fit into the format, the [Text Limit!] error message will appear.

Faceplate

Use this function to create a label that can be used to identify various components, or panels. Using the Faceplate function ensures that each block of text is evenly spaced on a single label.

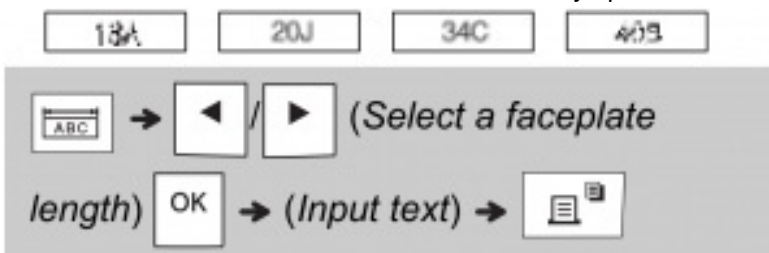


Faceplate length: 30 mm to 300 mm

Default: 50 mm

Serialise

Use this function to create multiple labels with a number or letter automatically incremented on each label.



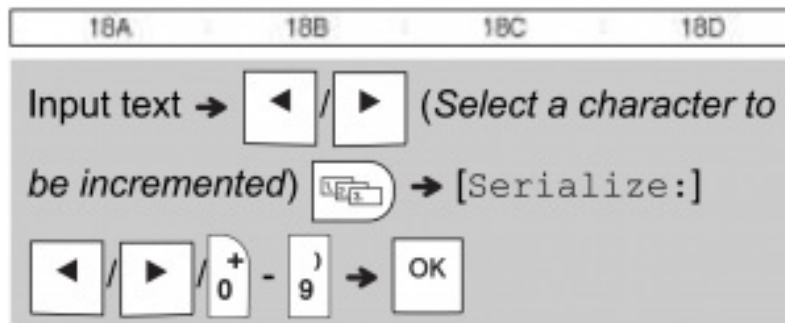








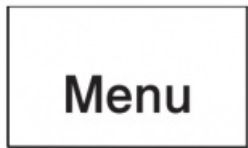





This serializing function can also be used with the Cable Wrap, Cable Flag, or Faceplate templates to save time entering and printing a series of labels.



You can serialise numbers from 01 – 50.



HELPFUL HINTS

Shortcuts

Language	Space key
Undl/Frame	 → Space key
Label Length	 → 
Margin	 → 
CableRot/Rpt	 → 
File	 → 
Tab	 → 
Tab Length	 → 
Unit	 → 
LCD contrast	 → 

Reset your P-touch labeling system when you want to initialize the settings, or in the event it is not working correctly. Resetting clears all the text, settings, and stored files.

1. Turn off the P-touch labeling system, hold down  and , and then press to turn the P-touch labeling system back on.

2. First release the power button, and then release  and .

The P-touch labeling system turns on with the internal memory reset.


CAUTION

BATTERIES (SUCH AS ALKALINE WITH Ni-MH), MAY RESULT IN AN EXPLOSION. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

NOTE

- Remove the batteries if you do not intend to use the P-touch labeling system for an extended period of time.
- Dispose of batteries at an appropriate collection point, not in the general waste stream. Be sure to observe all applicable federal, state, and local regulations.
- When storing or discarding a battery, wrap it with cellophane tape to prevent it from short circuiting (see illustration).

1. Cellophane tape
2. Alkaline or Ni-MH battery

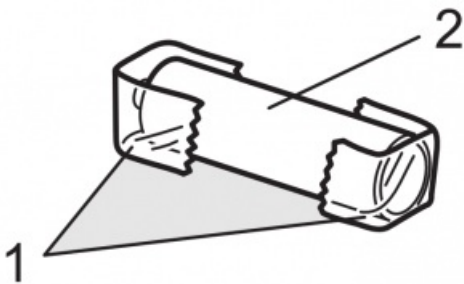

Do not mix old and new batteries. Replace all six batteries at the same time.




 
 






Awesome support comes standard with us.

Awesome support comes standard with us.



 So if you ever consider returning this product, contact us first at: www.brother.ca/support
Live Chat with us or reach us on facebook.com/brothercanada or twitter.com/Brother_Support


Contact Information Website: www.brother.ca

Message	Cause / Remedy
Battery Low!	The batteries are weak. If using AAA alkaline batteries, replace them with new ones (do not use a combination of old and new batteries). If using Ni-MH batteries, charge them fully.
Battery Empty!	The installed batteries are exhausted and need to be replaced for continued operation.
Invalid!	<ul style="list-style-type: none"> An invalid number was entered as the label length, tab length, cable diameter, flag length or faceplate length. An invalid letter or number to be incremented was selected in the Serialize function
No Text!	<ul style="list-style-type: none"> You tried to print a text file when there is no data stored in the memory.  is pressed when no text is entered.  +  is pressed when no text is entered.  is pressed when no text is entered.  or  was pressed when no text was entered while using templates.
2 Line Limit! / 1 Line Limit!	<ul style="list-style-type: none"> You tried to enter a third line by pressing . You tried to print or preview two lines of text while 3.5 mm or 6 mm tape was installed. Install a larger tape size.
No Cassette!	There is no cassette installed. Install a cassette with the  mark or  mark.
Cutter Pressed	The Tape Cutter Lever was pressed in the middle of the printing process.
Text Full!	The maximum number of characters (80 characters for text) have already been entered.
Text Limit! Change Length	You may have exceeded the set tape length. Reduce the text or select [Auto] as the tape length.
Feed OK?	Tape was fed after printing when [Chain Print] was selected. For more information, see the Setting Margins section.
Wrong Tape! Use TZe tape	Use a cassette with the  mark or  mark.

Problem	Solution
The display remains blank after you have turned on the P-touch labeling system.	<ul style="list-style-type: none"> • Check that the batteries are correctly installed. See the Installing Power Supply and Tape Cassette section. • The batteries may be weak. Replace them. • Check that the AD-24ESA Adapter is correctly connected.
When the label is printed, there is too much margin (space) on both sides of the text.	See the Setting Margins section in this guide and select [Half], [Narrow] or [Chain Print] to have smaller margins for your labels.
The P-touch labeling system does not print, or the printed characters are not formed properly.	<ul style="list-style-type: none"> • Check that the cassette is inserted correctly. • If the cassette is empty, replace it. • Check that the Tape Cassette Cover is closed correctly.
The setting has cleared on its own.	<ul style="list-style-type: none"> • The batteries may be weak. Replace them. • When power is disconnected for more than three minutes, all text and formats in the display settings are cleared.
A blank horizontal line appears through the printed tape.	There may be some dust on the Print Head. Remove the cassette and use a dry cotton swab to gently wipe the Print Head with an up-and-down motion. See the Installing Power Supply and Tape Cassette section for the Print Head location.
The P-touch labeling system has “locked up” (nothing happens when a key is pressed, even though the P-touch labeling system is on.)	For more information, see the Resetting the P-touch Labeling System section.
The power turns off when you try to print.	<ul style="list-style-type: none"> • The batteries may be weak. Replace them. • Check that the batteries are correctly inserted. • The wrong AC Adapter is used. We recommend using the AD-24ESA Adapter.
The tape does not feed correctly or the tape gets stuck inside the P-touch labeling system.	<ul style="list-style-type: none"> • Check that the end of the tape feeds under the tape guides. For more information, see the Installing Power Supply and Tape Cassette section. • The Cutter Lever was pressed while printing. Do not touch the Cutter Lever during printing.
To change language setting.	For more information, see the Initial Settings section.



Documents / Resources

	<p>P-touch Electronic Labeling System [pdf] User Guide Electronic Labeling System, Pt-E110</p>
---	--

References

- [f Log into Facebook](#)
- [United States | Brother support website](#)
- [twitter.com/Brother_Support](#)
- [Printers, Labellers, Scanners, Fax & Sewing | Brother Canada](#)
- [Support & Service - Product Support](#)
- [Brother: Products, Services & Solutions from Home Office to Corporate](#)