# DC-F80 Quick Start Guide







### **⚠** Important

- \*Please activate your warranty: <a href="https://www.MyLumens.com/reg">www.MyLumens.com/reg</a>.
- \*To download the updated software, multilingual manuals, and Quick Start Guide, please visit Lumens™ website at: https://www.MyLumens.com/support,


### 1. Product Introduction

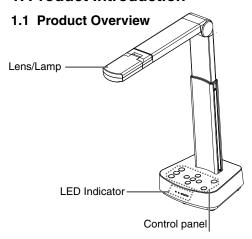

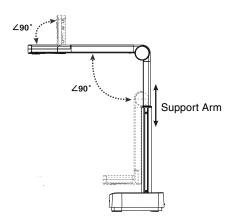


\*\*Please only operate in the extended angles as illustrated. Improper usage may damage the machine.

#### 1.2 I/O Interface

 


① Power LED Indicator

 


- (2) Kensington safety Lock
- (3) Reset Button
- (4) DIP Switch Setting
- (5) HDMI/USB mode switch button
- (6) HDMI output port
- (7) USB Type-B port

### 2. Installation and Connections

# ▼ Connect to a projector, monitor or TV(HDTV)

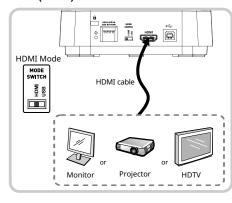



# ▼ Connecting to a computer and use Lumens<sup>™</sup> software

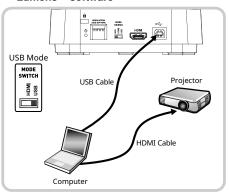

\* Please download the relevant software from Lumens website.

## 3. Start Using

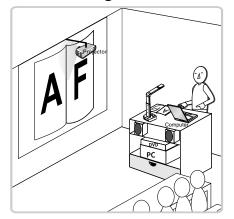

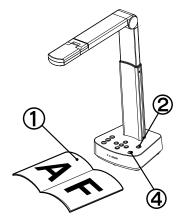

- 1 Place an object to be displayed under the camera.
- Turn on the power.
- Adjust the support arm and lens to the appropriate positions.
- Press [AUTO TUNE] Auto button to optimize the image.
- (5) You are ready to teach/present.