 




padmate O1 Multi-Function Dust Blowing Device Instruction Manual

[Home](#) » [padmate](#) » padmate O1 Multi-Function Dust Blowing Device Instruction Manual 

padmate O1 Multi-Function Dust Blowing Device

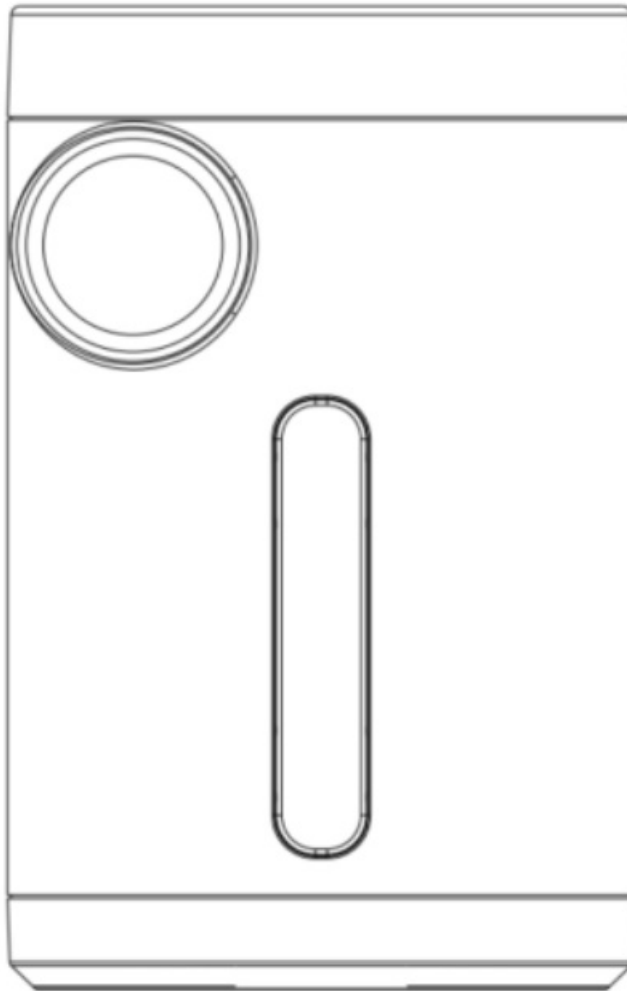

 
Contents

- [1 Product specification parameters](#)
- [2 Operation manual](#)
- [3 Instructions for transfer interface](#)
- [4 Debugging](#)
 - [4.1 * Matters need attention](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Product specification parameters

Working voltage	3.7V
Working current	3A-8A
Charging voltage / current	5V/1.5A
Maximum output	50w
Noise test	83dB distance of 100cm radial test)
Test loop	400 Vacation times
Work environment	-20°C to +80°C
Storage environment	-40°C to +80°C
Continuous working time	LOW speed for 30 minutes, high speed 15 minutes

Operation manual

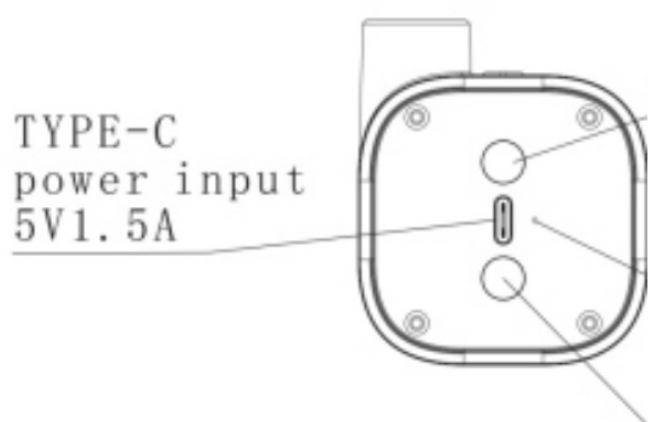

Fan key

Long press to open the wind speed and enter the low-speed state, then short press to enter the high-speed state, and then short press to close the wind speed. When the wind speed is on, long press to turn off the wind speed.

Power indication

When the power is on or on, the blue light is on when it is higher than 60%, the red light is on when it is lower than 30%, and the red light flashes when it is lower than 10% to 5%.When charging, the red light is on when it is not full, and the blue light is on when it is full.

 
Light button





Short press the switch light status 0 off,1 white light on, 2 red light on, 3 red and white flashing cycle switching.

1. Fan button: long press to open the fan to enter the low speed state, then short press to switch high and low gear, long press to close the fan.
2. Key light: 1 often bright, 2 slow flash, 3 flash, 4 off, cycle switch.
3. LED :the red light flashes when the power is too low, the red light flashes when charging, and the red light is full
4. Charging mode: Type-C charging port.

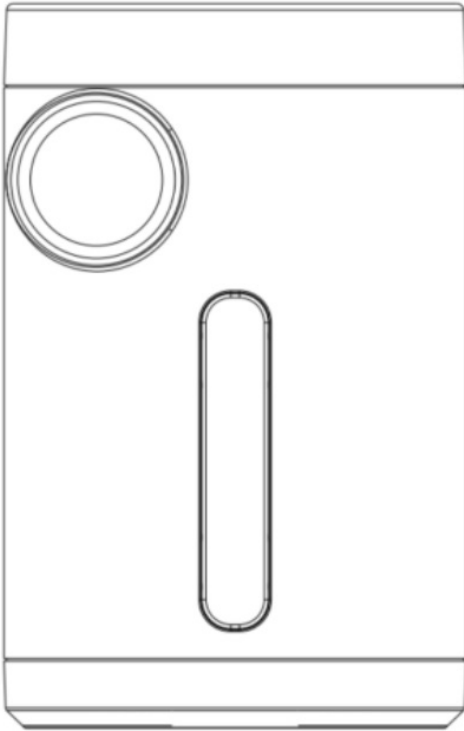Instructions for transfer interface

Please select the appropriate transfer interface as required and fill the transfer port to the air port of the air pump.



	For swimming pool, balloons, etc
	For swimming rings, inflatable toys, etc
	For air bed, etc
	For inflatable raft, etc

Debugging

f it does not work properly:

When the red light flashes, the power is low. Please charge in time.

Plug in the charger and check the battery for power.

Please check the pump surface for water or other liquid.


Check whether the fan blade is stuck or blocked by foreign objects.

Repeated attempts to switch the machine

*** Matters need attention**

1. This product is intended only for domestic or personal use and is not intended for industrial use.
2. Product protection program when charging, the product is in the protection state can not be used.
3. This product is not a toy, is prohibited by minors and children.
4. This product is not waterproof, do not contact with any liquid and water.
5. This product contains lithium batteries, please stay away from the fire source and the temperature above 50 degrees Celsius.
6. Do not use it continuously for more than eight minutes.
7. Keep the air outlet and air inlet clean.
8. Do not reach into the air outlet port and the air inlet port.
9. Please check whether the air pump will function properly before each use.

Documents / Resources

	padmate O1 Multi-Function Dust Blowing Device [pdf] Instruction Manual O1 Multi-Function Dust Blowing Device, O1, Multi-Function Dust Blowing Device, Dust Blowing Device, Blowing Device, Device, O1 Multi-Function Dust Blowing Device, O1, Multi-Function Dust Blowing Device
---	---

Manuals+.