



# Panasonic SC-GNW10 Game Speaker Instruction Manual

 
[Home](#) » [Panasonic](#) » Panasonic SC-GNW10 Game Speaker Instruction Manual 

# Panasonic



 **SOUND SLAYER™**  
QUICK START GUIDE

## IN THE BOX

SC-GN01

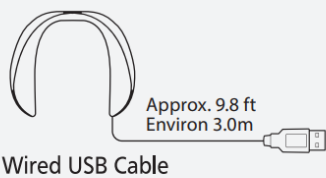

Audio cable

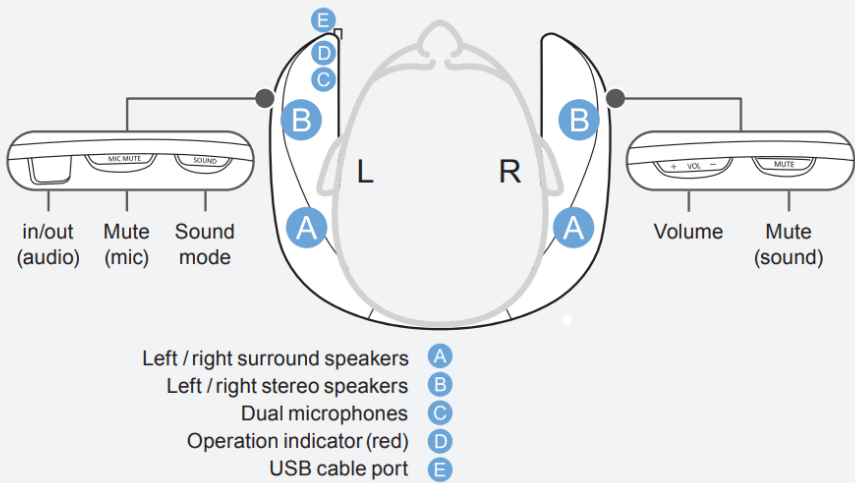  


## Contents

- 1 [CONNECTING TO A CONSOLE](#)
- 2 [POSITIONING](#)
- 3 [BASIC OPERATION](#)
- 4 [WHEN CONNECTING TO A PC \(1st time only\)](#)
- 5 [SPEAKER SOUND ADJUSTMENT](#)
- 6 [LOW VOLUME LEVELS](#)
- 7 [Documents / Resources](#)
  - 7.1 [References](#)
- 8 [Related Posts](#)


## CONNECTING TO A CONSOLE

 For PC PS4 PS5  
Nintendo Switch (TV mode)

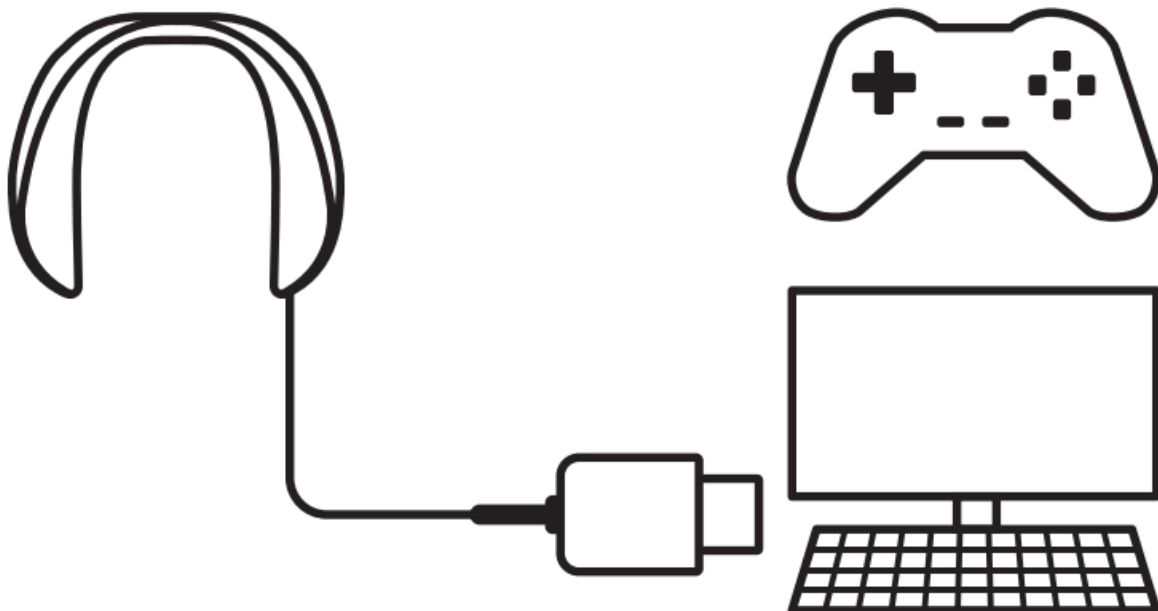

\*Connection to USB3.0 port is recommended.

 
Please note: The audio output For PS4/PS5 must connect to a USB port on the back of the console.  
For Xbox One. Series S/X Nintendo Switch (Tabletop / Handheld mode /Portable)

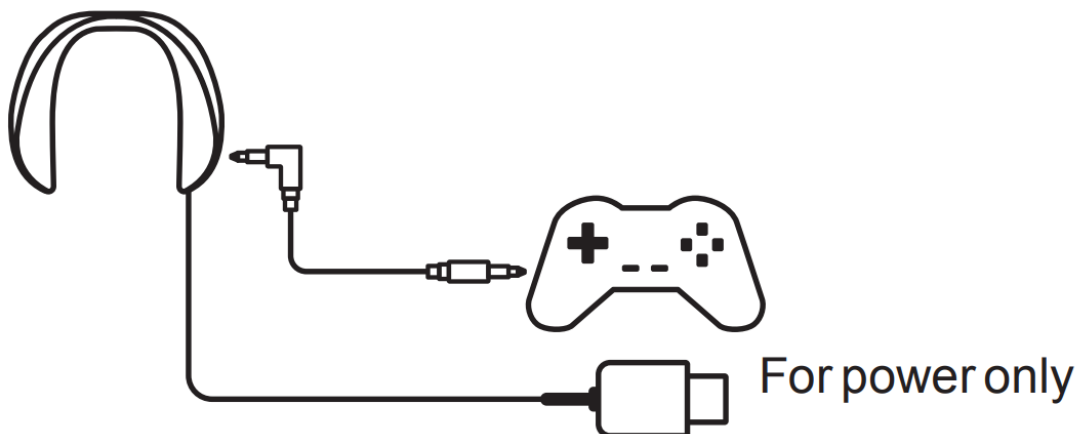

## POSITIONING


 
## BASIC OPERATION

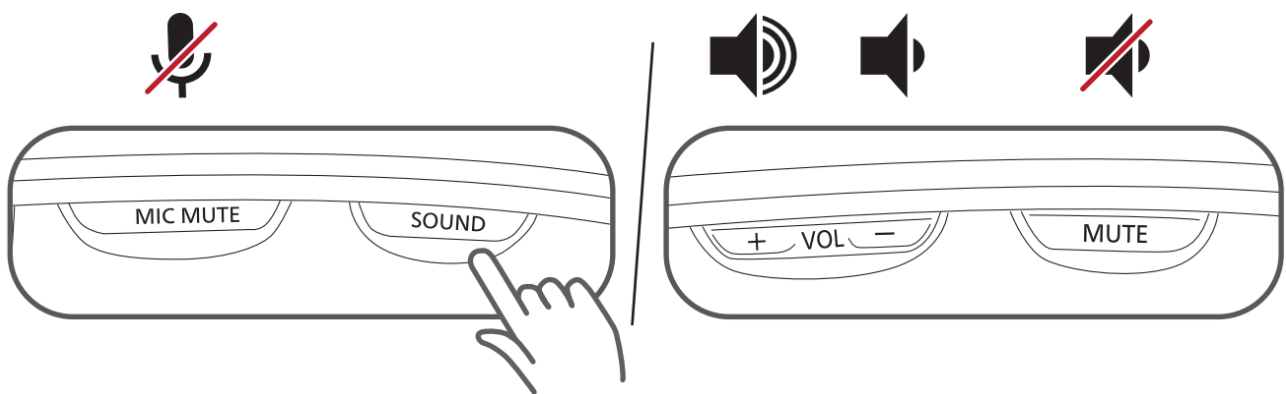

Role-playing games	RPG x1
First-person shooter games	FPS x2
Enhances voice/easier to hear	Voice x3
2 channel stereo sound for music	Music x4
Immersive surround sound and power	Cinema x5
Stereo output	STEREO x6

## WHEN CONNECTING TO A PC (1st time only)

The default Windows setting is SC-GN01 (Chat)\*.

In order to experience surround sound, change the setting to “Game”

\*SC-GN01 (Chat) setting will optimize voice playback for clear communication during the video calls.

Click the Volume icon on the taskbar notification area.

1.



Click the expansion arrow above the master volume control.

2.



Select Panasonic SC-GN01 (Game).

3.



## SPEAKER SOUND ADJUSTMENT

Adjust speaker sound positioning forwards or backward for a custom surround audio experience

1. Press the [MIC MUTE] and [MUTE] buttons at the same time
2. Press [+ VOL] to set sound position forwards Press [VOL -] to set the sound position backward
3. Press any button other than [+ VOL -] to save settings

## LOW VOLUME LEVELS

(Console Troubleshooting)

Please ensure you have followed steps 1-3. If volume levels are still low, please check headset volume in the audio settings of your console.

Documents / Resources

	<p><a href="#">Panasonic SC-GNW10 Game Speaker</a> [pdf] Instruction Manual SC-GNW10 Game Speaker, SC-GNW10, Game Speaker, Speaker</p>
---	--

References

- [SoundSlayer® Wireless Wearable Gaming Speaker System](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.