

## PANDA 405974 Proximity Card Reader with Keypad Instructions



### Contents [ [hide](#) ]

- [1 Programming Mode](#)
- [2 Changing Master Code](#)
- [3 Adding User Code](#)
- [4 Door release – code must be typed from standby mode followed by #](#)
- [5 Deleting User Code](#)
- [6 Restore Factory Settings](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)

## Programming Mode

1. Power on, and red LED illuminates.
2. Type ★ Master code # (Default code 123456). Green LED illuminates for 0.5 secs to

show

acceptance.

3. LED begins to flash red to programming mode is active

## **Changing Master Code**

1. Enter programming mode
2. Press 0, LED illuminates orange constantly.
3. Enter new code followed by #. Green LED illuminates for 0.5 secs to show accepted.
4. LED illuminates orange constantly.
5. Repeat new code followed by #. . LED illuminates green for 0.5 secs to show accepted. LED illuminates orange constantly.
6. LED begins to flash red to programming mode is active
7. Type ★ to exit programming mode

## **Adding User Code**

1. Enter programming mode
2. Press 1, LED illuminates orange constantly.
3. Enter USER ID 0-989 followed by #. Green LED illuminates for 0.5 secs to show accepted. LED  
illuminates orange constantly
4. Type new code followed by #. LED illuminates green for 0.5 secs to show acceptance. LED  
illuminates orange constantly
5. Press # again. LED illuminates green for 0.5 secs to show acceptance.
6. LED begins to flash red to programming mode is active
7. Type ★ to exit programming mode

## **Door release – code must be typed from standby mode followed by #**

### **Change Relay Time**

1. Enter programming mode.
2. Press 4, orange LED illuminates constantly.
3. Type value 1-99. The default is 5 seconds. (1=50ms. 0=Latching/Toggle.)

- 4. Press #, Green LED illuminates for 0.5 secs to show accepted.
- 5. LED begins to flash red to programming mode is active.

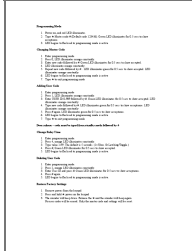
### Deleting User Code

- 1. Enter programming mode.
- 2. Press 2, orange LED illuminates constantly.
- 3. Enter User ID and press #. Green LED illuminates for 0.5 secs to show acceptance.
- 4. Press # again.
- 5. LED begins to flash red to programming mode is active.

### Restore Factory Settings

- 1. Remove power from the keypad
- 2. Press and hold ★ power on the keypad
- 3. The sounder will beep twice. Release the ★ and the sounder will beep again.  
No user codes will be erased. Only the master code and settings will be reset.

## Documents / Resources

	<a href="#">PANDA 405974 Proximity Card Reader with Keypad [pdf]</a> Instructions 405974 Proximity Card Reader with Keypad, 405974, Proximity Card Reader with Keypad, Card Reader with Keypad, Reader with Keypad
---	---

### References

- [User Manual](#)

📁 panda  
🔍 405974, 405974 Proximity Card Reader with Keypad, Card Reader with Keypad, panda, Proximity Card Reader with Keypad, Reader with Keypad

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.