



## Pandora D035 Remote Control User Manual

[Home](#) » [Pandora](#) » Pandora D035 Remote Control User Manual 

# Pandora

### D035 REMOTE CONTROL | TAG

The remote control is designed to control and monitor a state of a security system at a distance of a Bluetooth connection.

**ATTENTION!** Enable the “Use D-030 as a radio tag” option to use the remote control as an owner authorization device.



- OLED-display
- Three control buttons
- Built-in sound indicator (16 melodies for sound notifications)
- Built-in vibration indicator
- Built-in LED indicator “ALARM/SEND”
- 2.4 GHz radio interface (Bluetooth 5.0 protocol)


- Built-in battery
- Built-in micro-USB port

**OPERATING RANGE:** from -10º C to +40º C **DEGREE OF PROTECTION:** IP40

**COMPATIBILITY**

Pandora ELITE v.2, Smart Pro v.3, Camper Mini, Camper Pro v.2, Mini v.3

**TURNING ON/OFF THE REMOTE CONTROL**

Press and hold  the button for 3 seconds to turn ON/OFF the remote control



**Contents**

- [1 REMOTE CONTROLLED SIGNALS MEANING](#)
- [2 CHARGING THE REMOTE CONTROL](#)
- [3 FIRMWARE UPDATE](#)
- [4 QUICK ACCESS FUNCTIONS OF THE REMOTE CONTROL](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)


**REMOTE CONTROLLED SIGNALS MEANING**

Red indicator «ALARM»	Green indicator «SEND»
Flashes frequently if there are any notifications	Flashes if there is a connection with the base unit
Flashes occasionally when there is no connection	Goes dark when there is no connection with the base unit

**CHARGING THE REMOTE CONTROL**



There is a battery charge level icon  on the display of the remote control. It is recommended to charge the remote control if only the last segment of the icon is shown . Charge the built-in battery with a standard micro-USB cable.

**FIRMWARE UPDATE**



- Download the mobile application Pandora BT (Android/iOS) or Pandora Specialist (Android) to the smartphone or a tablet equipped with Bluetooth 4.0 or higher.
- Press and hold the  button, connect a USB cable to the remote control, release the button after connection.
- Open the mobile application, go to the “Search device” menu, select a found device and choose one of the











update options: FILE MANAGER (only for Andriod devices) or INTERNET.




	connected
	security mode disarmed/armed
	current time
	battery charge level
	engine temperature
	interior temperature
	outside temperature
	the voltage of the car battery
	fuel level
	shock sensor (Warning level)
	shock sensor (Alarm level)
	additional sensor (Warning level)
	additional sensor (Alarm level) /Status of the original alarm system

	security zone Tilt sensor
	security zone Motion sensor
	security zone Ignition ON
	security zone Doors
	security zone Hood
	security zone Trunk
	security zone Low voltage
	security zone Brake pedal
	Engine running icon

## QUICK ACCESS FUNCTIONS OF THE REMOTE CONTROL

System disarmed			System armed (no alarm events)
Ignition ON		Ignition OFF	
 (briefly)	Lock doors without arming	Arming with sound confirmation	Search mode – Flashing hazard lights with sound signals for 5 sec
 (1 sec)		Arming without sound confirmation	Search mode – Flashing hazard lights without sound signals for 5 sec

 (2 sec)	Hold-On ignition mode ON		
 (3 sec)	Program neutral mode ON		Remote engine start
 (briefly)	Unlock doors	Unlock doors	Disarming with sound confirmation
 (1 sec)			Disarming without sound confirmation
 (2 sec)	Hold-On ignition mode OFF		Switch OFF the ignition during remote/automatic engine start, turbo timer
 (3 sec)	Service mode ON/OFF		
 (briefly)	Switch on the LCD display		
 (1 sec)	Unlock trunk		
 (2 sec)	Switch ON an engine heater* Switch ON/OFF a time channel		
 (3 sec)	Switch ON/OFF the remote control		

 (briefly)	PANIC mode		
 (briefly)	Arming when the ignition is ON with sound confirmation	Arming in 30 sec with sound confirmation	
 (1 sec)	Arming when the ignition is ON without sound confirmation	Arming in 30 sec without sound confirmation	

\* To control an engine heater, it is required to make setting in Time channels:  
“Select channel” – for analog control, “Action 1” – “Switch on engine preheater”

## Documents / Resources

	<a href="#">Pandora D035 Remote Control</a> [pdf] User Manual D035, Remote Control, Tag
---	--