



PANDUIT CFPH Mini-Com Faceplates Instruction Manual

[Home](#) » [PANDUIT](#) » PANDUIT CFPH Mini-Com Faceplates Instruction Manual 

Contents

- [1 PANDUIT CFPH Mini-Com Faceplates](#)
- [2 FACEPLATE INSTALLATION](#)
- [3 CFPSL & CFPHSL Module Installation](#)
- [4 MODULE REMOVAL](#)
- [5 Cover Installation](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)


PANDUIT

PANDUIT CFPH Mini-Com Faceplates




FACEPLATE INSTALLATION

CFP, CFPL, CFPE & CFPH Module Installation

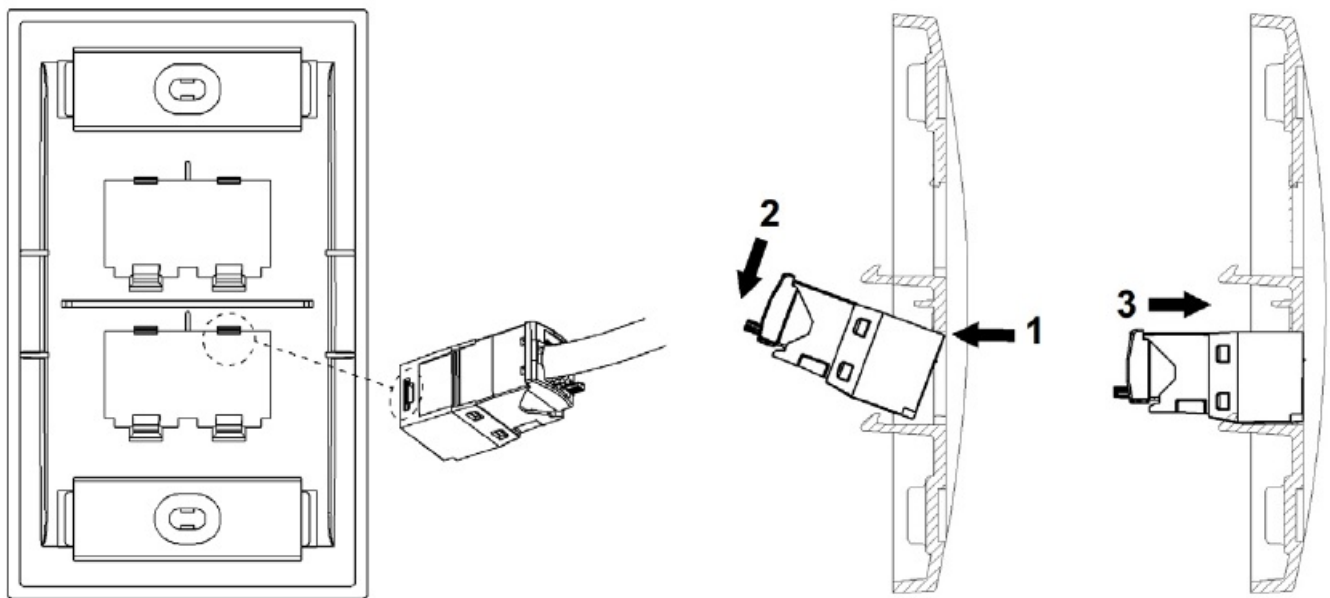


Note: Logo orientation is not an indicator of faceplate mounting direction.

CFPSL & CFPHSL Module Installation

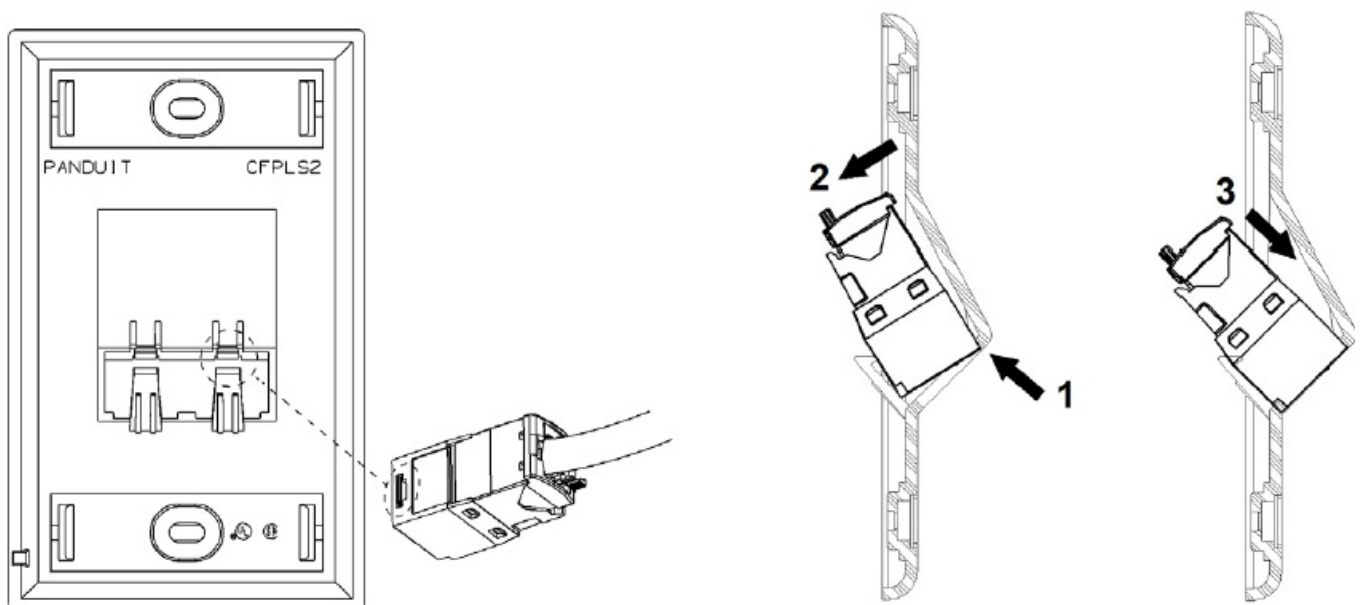



MODULE REMOVAL

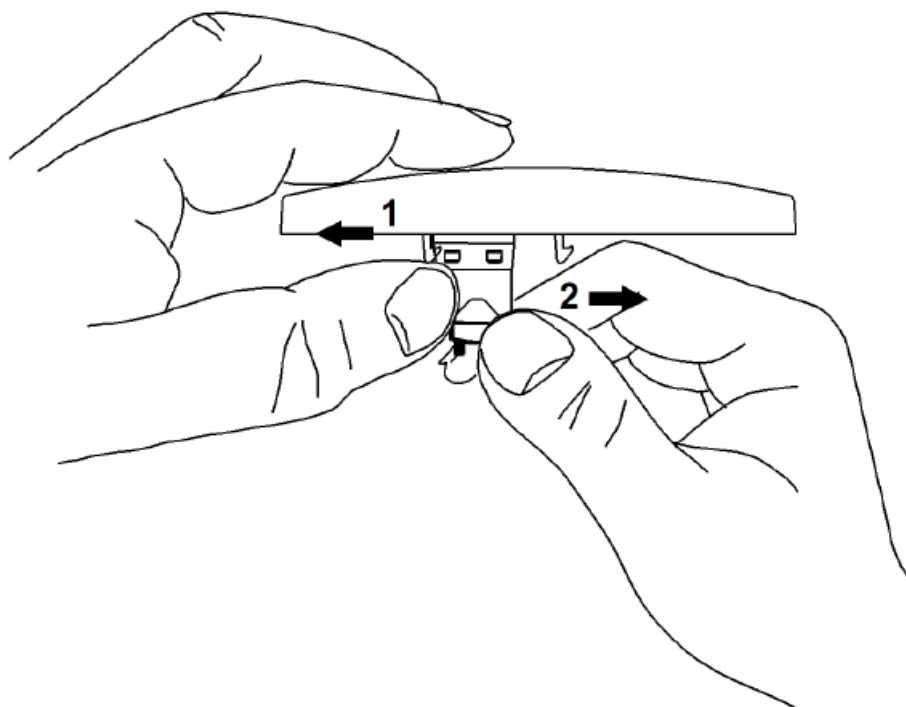

Cover Installation

(CFPE, CFPL, CFPSL, CFPHSL ONLY)

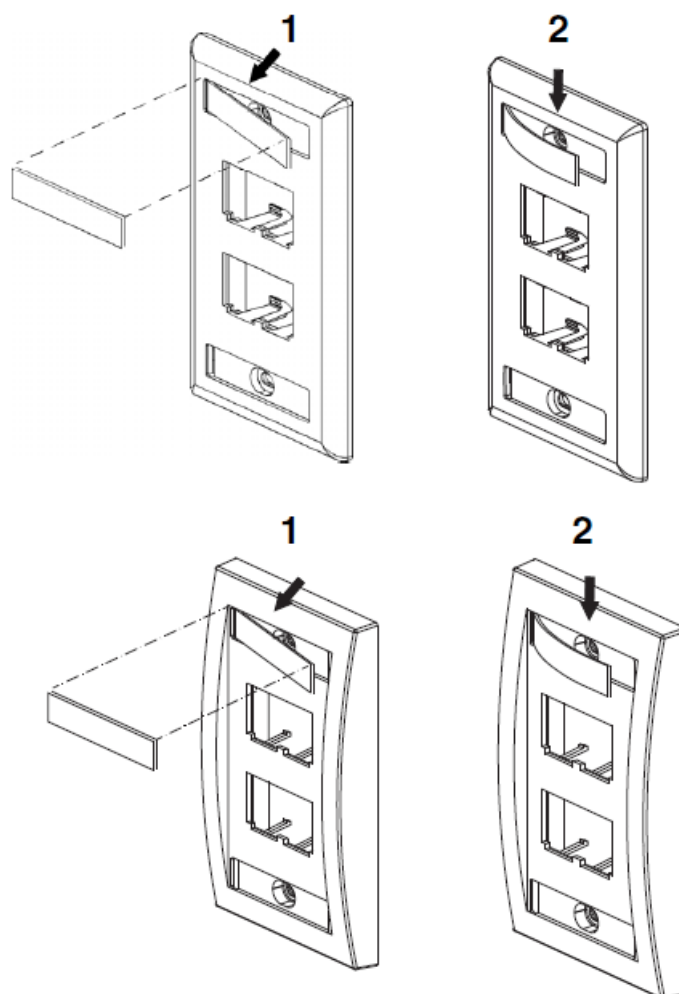

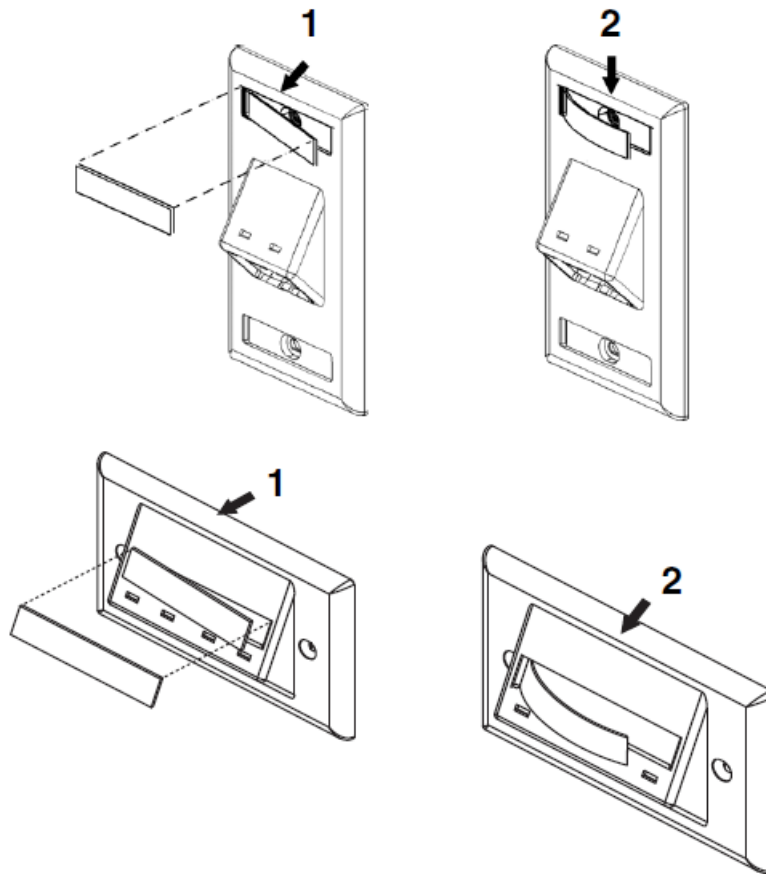


For Instructions in Local Languages and Technical Support: www.panduit.com/resources/install_maintain.asp

E-mail: techsupport@panduit.com

Phone: 866-405-6654

Documents / Resources

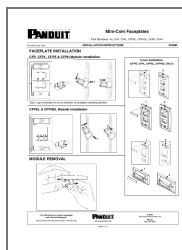

[PANDUIT CFPH Mini-Com Faceplates](#) [pdf] Instruction Manual
CFP, CFPL, CFPSL, CFPHSL, CFPE, CFPH, Mini-Com Faceplates, CFPH Mini-Com Faceplates, Faceplates

References

- **P** [Panduit | Network Infrastructure and Industrial Electrical Wiring](#)