



PANDUIT VS2-NET VeriSafe Network Module Instruction Manual

[Home](#) » [PANDUIT](#) » PANDUIT VS2-NET VeriSafe Network Module Instruction Manual 

Contents

- [1 PANDUIT VS2-NET VeriSafe Network Module](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Safety Information](#)
- [5 System Overview](#)
- [6 POWER INPUTS](#)
- [7 AVT CONNECTION](#)
- [8 VOLTAGE PRESENCE OUTPUTS](#)
- [9 Technical Specifications](#)
- [10 Dimensions](#)
- [11 Installation Instructions](#)
- [12 Warranty](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)



PANDUIT VS2-NET VeriSafe Network Module



Product Information

The VeriSafe Network Module is a device that provides network connectivity and control for the VeriSafe AVT system. It allows users to monitor and manage the AVT system through a web interface and provides data logging and reporting capabilities.

The VeriSafe Network Module is designed to ensure safe operation of the AVT system and is equipped with various safety features to prevent product failure, electrical shock, and injuries.

Technical Specifications

- Model No: VS2-NET
- Power Inputs: DC Input
- AVT Connection: 10/100 PoE
- Voltage Presence Outputs: 1A, 1B, 2A, 2B, 3A, 3B
- Environmental Ratings: IP 54 (in accordance with IEC 60079-0)

Contact Information: If you need technical support or have any inquiries, you can contact Panduit™ through the following channels:

- North America Tech Support: Email – techsupport@panduit.com, Tel – 866.405.6654
- EU Tech Support: Email – techsupportemea@panduit.com, Tel – 31.546.580.452, Fax – 31.546.580.441
- Asia Pacific Tech Support: Email – techsupportap@panduit.com, Tel – Singapore: 1-800-Panduit (7263848), Australia: 1-800-Panduit (7263848), Korea: 02.21827300

For more information about the VeriSafe Network Module, you can visit the official website at www.panduit.com/verisafe.

Product Usage Instructions

To ensure safe and proper usage of the VeriSafe Network Module, please follow the instructions below:

Safety Precautions:

- Read and comply with all the safety information and warnings provided in the user manual to prevent product failure, electrical shock, severe injury, or death.
- Install the equipment in an enclosure that provides a degree of protection not less than IP 54 in accordance

with IEC 60079-0.

- Ensure that the enclosure can only be accessed with the use of a tool.
- Use surge protection for the power supply, or install external surge protection at the input to the supply.

Installation Requirements: The VeriSafe Network Module requires a DC power input and an AVT connection. Follow the steps below for installation:

1. Ensure that the power supply is surge protected or install external surge protection at the input to the supply.
2. Connect the DC power input to the appropriate power source.
3. Connect the AVT connection to the AVT isolation module or other compatible devices using a 10/100 P0E network connection.
4. Verify that the termination resistor switch below the AVT connection ports on the network module and AVT isolation module is positioned to the right (factory default) when facing the port.
5. Check that the system status and power status indicators are functioning properly.
6. If necessary, refer to document B21176 (VS2-Net User Guide) for instructions on utilizing VS2-NET functions, accessing the web interface, and logging/reporting data from the connected 2.0 AVT system.
7. Regularly check for updates to the network module firmware and user guide on the official website (www.panduit.com).

For any additional information or inquiries, refer to the user manual or contact Panduit™ technical support.

The network module is designed to be an optional accessory that enables network capabilities for the VeriSafe 2.0 Absence of Voltage Tester (AVT). The network module provides an integrated web application that is delivered by an on board web server. The web application monitors data from the AVT and provides integration, configuration and firmware update capabilities. The network module supports AVT data over EtherNet/IP and Modbus TCP protocols. The voltage presence discrete outputs may be used as an indication of voltage presence with or without a network connection. The network module provides the ability to log various pieces of data based on built intriggers (see VeriSafe Network Module User Guide, document no. B21176, for more information).

TO REDUCE THE RISK OF INJURY, USER MUST READ INSTRUCTION MANUAL

- **NOTE:** In the interest of higher quality and value, Panduit™ products are continually being improved and updated. Consequently, pictures may vary from the enclosed product.
- **NOTE:** Updates to this Instruction Manual may be available. Check www.panduit.com for the latest version of this manual.

Safety Information

This manual contains information and warnings which must be followed to ensure safe operation of the Network Module. Failure to comply with the warnings and information in this manual could result in product failure, electrical shock, severe injury or death.

Special Conditions of Use

Hazardous Locations

- The equipment shall be installed in an enclosure that provides a degree of protection not less than IP 54 in accordance with IEC 60079-0.
- Ambient Temperature Range: $-25^{\circ}\text{C} \leq T_{\text{amb}} \leq 60^{\circ}\text{C}$
- The enclosure must only be accessible with use of a tool.

WARNING:

- Always de-energize power before accessing an electrical enclosure


- Always follow safety and lockout/tagout procedures when working on or near electrical systems and equipment
- Do not use this product outside of the specified performance and environmental limits
- Always comply with local installation codes and standards
- The data from the network module does not carry a functional safety rating. It should be used for monitoring only. If integrating with a safety-rated system, use the SIL 3 outputs on the AVT isolation module.

The network module contains electronic circuit boards and can be disposed of at an electronics recycling facility.

Important This instruction manual is only for the physical installation requirements. Refer to document B21176 (VS2-Net User Guide) for instructions how to utilize VS2-NET functions, the web interface and logging / reporting data from connected 2.0 AVT system.

Updates to the network module firmware and user guide may be available. Visit www.panduit.com to access the latest versions.


System Overview

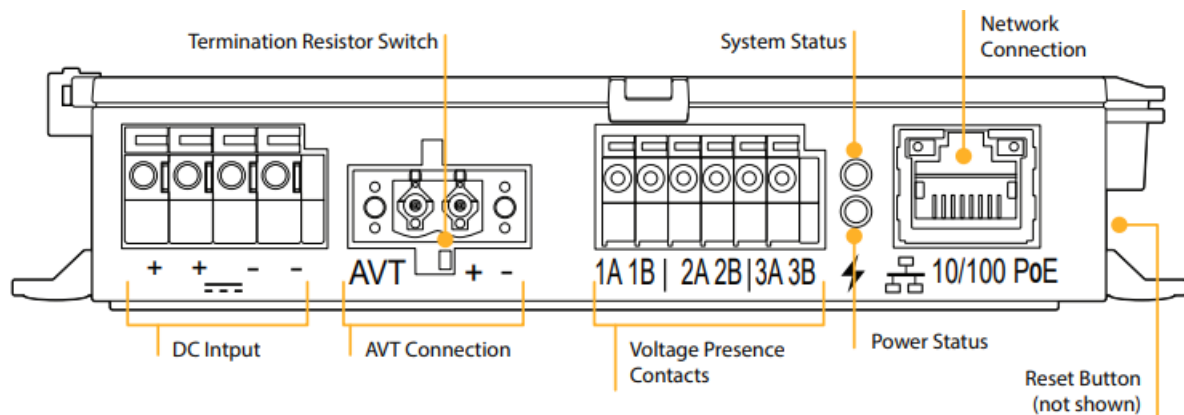

- The termination resistor switch below the AVT connection ports on the network module and AVT isolation module shall be positioned to the right (factory default) when facing the port

POWER INPUTS


DC Input

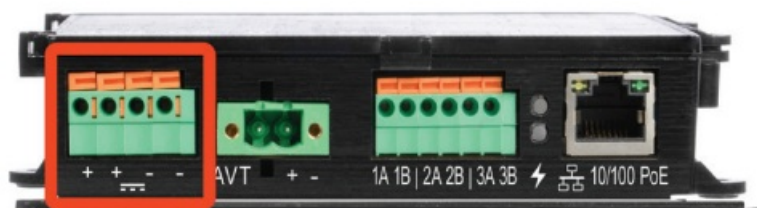

Important The power supply must be surge protected, otherwise external surge protection is required at the input to the supply.

- IEC Class I regulated power supply Min. Output: 12 VDC @ 100mA, 24 VDC @ 50mA
- Connector / Wiring Requirements
 - Wire Range: AWG #24 – 14 SOL / STR (1 wire only)
 - Wire strip length: 9.0mm (min) / 10.0mm (max)

Network Connection (PoE)

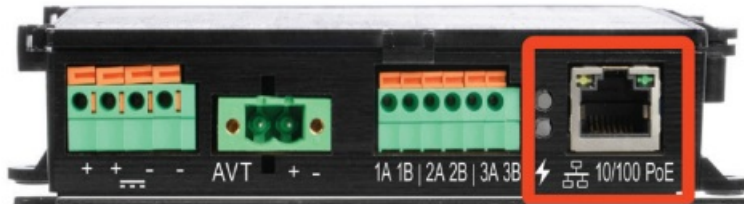

- 10/100 PoE
- IEEE 802.3af Type 1 Class III PoE topology.

Important When using the network module with the 2.0 AVT isolation module, the network module “AVT Connection” supplies power from the network module to the isolation module. Therefore DO NOT apply an external power source to the 2.0 AVT isolation module when used with the network module.


AVT CONNECTION

AVT CONNECTION

Provides power and communications to the AVT isolation module . The connection features a pluggable screw terminal connector .

Only install the network module in the same electrical enclosure as the VeriSafe 2 .0 AVT isolation module .

Recommended Wiring

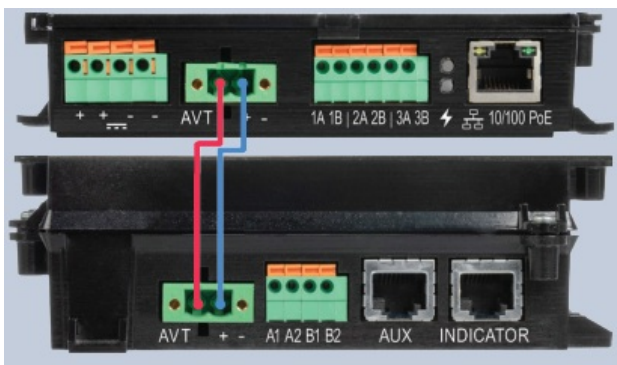

1 Network Module

2 Isolation Module

Connector Specifications

■ Connector / Wiring Requirements;

Wire Range: (1 wire): AWG #24 – 12 [2 .5mm²] SOL / STR
 (2 wire): AWG #18 [1 .0mm²] SOL

AWG #18 [1 .5mm²] STR

Wire strip length: 7 .0mm (min) / 8 .0mm (max) Screw Drive Size: M3x0 .5

Screw Torque Required: 5 .0 in-lb [0 .57 N-m] +/- 10%

VOLTAGE PRESENCE OUTPUTS


VOLTAGE PRESENCE OUTPUTS

Reflects status of Voltage presence LEDs on the AVT indicator module . These outputs are updated every 2 seconds based on the state

reported from the AVT isolation module . These outputs are not an indication of absence of voltage .

	Output Specification	Output schematic
3 Solid-state Relay	Normally open, relays close when red AVT indicators are illuminated (see AVT manual for red indicator voltage thresholds)	
Output Contacts	AWG #26-16 AWG (0.13 – 1.3mm ²) Solid/Stranded (1 wire only)	
Wire Size	5000 Vrms Input/Output	
Isolation	30V AC/DC	
Voltage Rating	80 mA (max)	
Current Rating	30 W	
On-resistance		


Output schematic

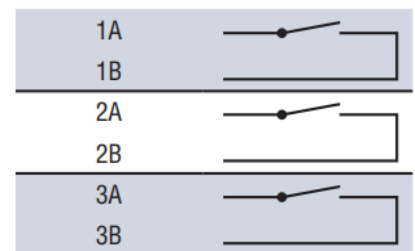

Technical Specifications

WARNING: Do not use this product outside of the specified performance and environmental limits. Failure to comply with these specifications could result in product failure, personal injury, or death.

Environmental Ratings	
Operating Temperature	-25°C to 60°C (-13°F to 140°F)
Storage Temperature	-45°C to 85°C (-49°F to 185°F)
Humidity	5 to 90% non-condensing; Rated 80% at 40°C (104°F), decreasing linearly to 50% at 60°C (140°F)
Pollution Degree	3
Altitude	Up to 5000 meters (16400 feet)
Degree of Protection	Open Type, IP20

Hazardous Locations	
Special Conditions of Use	 <ul style="list-style-type: none"> The equipment shall be installed in an enclosure that provides a degree of protection not less than IP 54 in accordance with IEC 60079-0. Ambient Temperature Range: $-25^{\circ}\text{C} \leq T_{\text{amb}} \leq 60^{\circ}\text{C}$ The enclosure must only be accessible with use of a tool.
Network Module (Hazardous Location Ratings)	<u>cULus</u> : Class I, Division 2, Groups A, B, C, D Class I Zone 2 AEx ec IIC T5 Gc; Ex ec IIC T5 Gc


Power Requirements	
DC Input	IMPORTANT The power supply must be surge protected, otherwise external surge protection is required at the input to the supply. 12-24 VDC (IEC Class I regulated power supply) Min. Output: 12 VDC @ 100 mA, 24 VDC @ 50 mA Power Draw: 84 mA max @ 12 VDC; 42 mA max @ 24 VDC (Network Module + AVT)
Power over Ethernet (PoE)	PoE (10/100), 15 mA, IEEE 802.3at (-af) Type 1 Class III PoE topology

Standards and Certifications	
IEC / UL / CSA C22 .2 NO . 610 10-1 IEC / UL / CSA C22 .2 NO . 610 10-2-030	Safety requirements for electrical equipment for measurement, control, and laboratory use
UL 508 & CSA-C22 .2 No . 14	Industrial control equipment
FCC – CFR 47 Part 15 Subpart B	Radio frequency devices
CAN ICES-001	Industrial, scientific and medical (ISM) radio frequency generators
EN 55011, CISPR 11, AS/NZS CISPR 11	Radio frequency disturbance characteristics
IEC 61326-1 EN 61326-1	EMC and immunity requirements
IEC / EN 61000-3-2, -3-3, -6-2	Electromagnetic compatibility (EMC)
CE UKCA	Conformity Marking for European Economic Area Conformity Marking for United Kingdom
RoHS	Restriction of hazardous substances



Dimensions

Dimensions 135 x 112 x 28 mm (5.3 x 4.4 x 1.1 inches), when network connection is installed

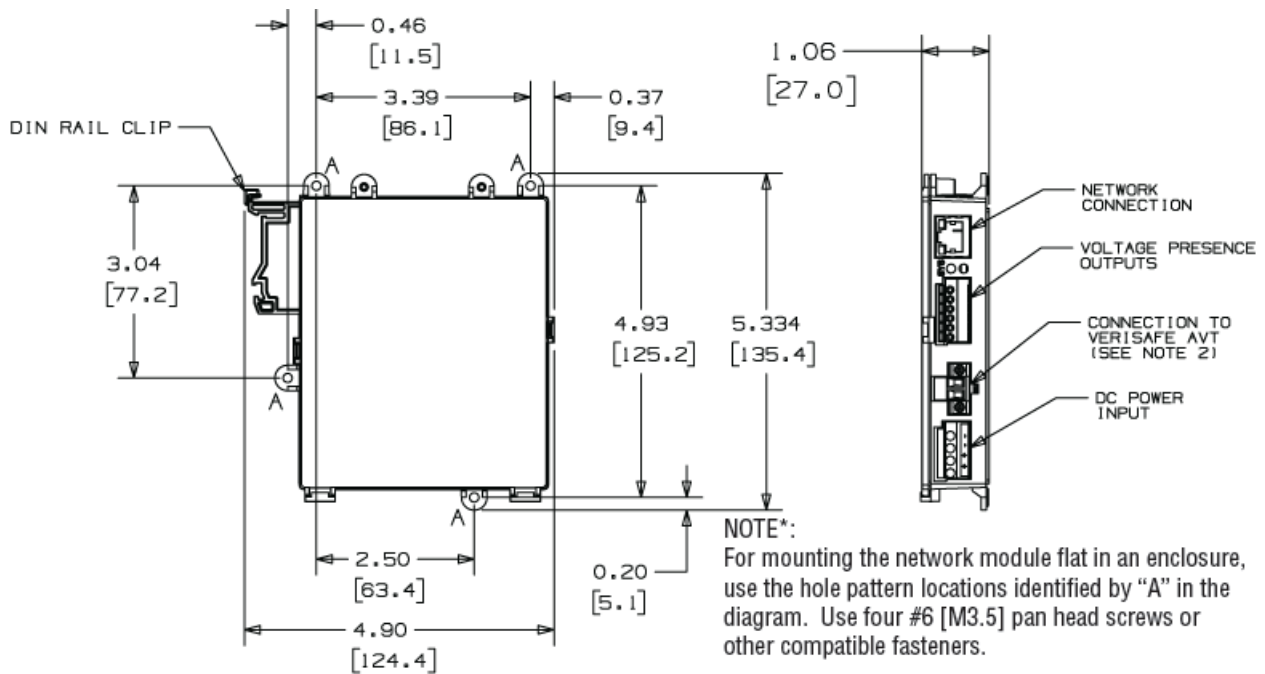

Installation Instructions

Special Conditions of Use

Hazardous Locations

- The equipment shall be installed in an enclosure that provides a degree of protection not less than IP 54 in accordance with IEC 60079-0.
- Ambient Temperature Range: $-25^{\circ}\text{C} \leq T_{\text{amb}} \leq 60^{\circ}\text{C}$
- The enclosure must only be accessible with use of a tool.

WARNING:

- Always de-energize power before accessing an electrical enclosure
- Always follow safety and lockout/tagout procedures when working on or near electrical systems and equipment
- Do not use this product outside of the specified performance and environmental limits
- Always comply with local installation codes and standards
- The data from the network module does not carry a functional safety rating. It should be used for monitoring only. If integrating with a safety-rated system, use the SIL 3 outputs on the AVT isolation module instead of the network module outputs.

STEP 1: INSTALL NETWORK MODULE INTO ENCLOSURE

- Mount network module flat in enclosure (see *NOTE in dimensional diagram above), or
- Snap the network module onto the DIN rail, or
- Mount the network module to the 2.0 AVT isolation module. See image to the right.

STEP 2: CONNECT POWER TO NETWORK MODULE (DC POWER SUPPLY, OR POWER OVER ETHERNET)

- Connect power supply to DC Input, or connect PoE network cable to PoE connection

STEP 3: CONNECT THE DATA/POWER OUTPUT FROM NETWORK MODULE TO 2.0 AVT ISOLATION MODULE

- Connect wires into pluggable screw terminal connectors on network module and the 2.0 AVT isolation module. The connector ports are labeled “AVT”.


STEP 4: CONNECT NETWORK CONNECTION TO RJ-45 PORT

- if using the DC Input connector for power, and not using PoE, connect RJ-45 network cable,
- if using PoE, connect the PoE network cable to RJ-45 port

STEP 5: BEFORE POWER-UP, READ DOCUMENT B21110 (2.0 AVT INSTRUCTION MANUAL) AND DOCUMENT B21176

(NETWORK MODULE USER GUIDE) FOR USER AND WEB-INTERFACE INSTRUCTIONS. POWER UP THE SYSTEM.

IF DESIRED, ATTACH NETWORK MODULE TO THE 2.0 AVT ISOLATION MODULE USING SCREWS PROVIDED WITH THE NETWORK MODULE

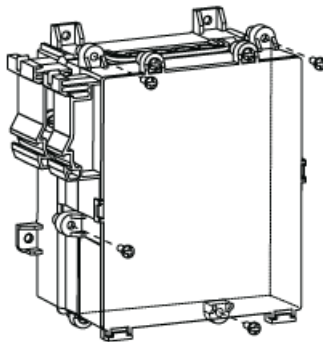

Warranty

PANDUIT LIMITED PRODUCT WARRANTY

1. **Limited Product Warranty.** For purposes of this Limited Product Warranty, “Panduit products” mean all Panduit-branded products that Panduit sells. Unless a different time period is set forth in the Panduit product manual, user guide or other product documentation, Panduit warrants that the Panduit product, and each part or component of the Panduit product, will comply with Panduit’s published specifications and will be free from defects in material and workmanship for a period of 1 year from the date of invoice from Panduit or its authorized distributor, not to exceed 18 months from the original date of shipment from Panduit’s facility.
2. **Firmware.** Unless otherwise provided in a separate license agreement, and subject to the limitations for third-party products set forth below, Panduit warrants that any firmware contained in any Panduit products, when used with Panduit-specified hardware and when installed properly, will perform in accordance with the Panduit published specifications for a period of 1 year from the date of invoice from Panduit or its authorized distributor, not to exceed 18 months from the original date of shipment from Panduit’s facility. Any exceptions to this 1 year warranty period will be identified in the Panduit product manual, user guide or other product documentation. Panduit does not warrant that the operation of the firmware will be uninterrupted or error-free, or that the

functions contained therein will meet or satisfy Buyer's intended use or requirements. Any warranties, if any, that Panduit provides for any standalone software that Panduit sells will be stated in the applicable End User License Agreement.

3. **Remedies.** Panduit's sole and exclusive obligation and Buyer's exclusive remedy under this warranty is Panduit's repair or replacement of the defective Panduit product. Panduit shall have sole discretion as to which of these remedies Panduit will provide to Buyer. Buyer requested on-site warranty service is not covered and will be at Buyer's sole expense, unless authorized in writing by Panduit in advance of the commencement of the on-site warranty service. Panduit has the right to either examine the Panduit products where they are located or, in its sole discretion, issue shipping instructions for return of the product. Where applicable, Buyer must return the defective product, part or component, transportation prepaid to Panduit's customer service department accompanied by Panduit's Return Material Authorization. If Panduit confirms that there is a defect that is covered by this warranty, the repaired or replaced Panduit product will be warranted for the remainder of the warranty period applicable to the originally shipped Panduit product, or for a period of 90 days from the date of shipment to Buyer, whichever is longer.
4. **No Warranty for Third-Party Products.** Panduit makes no representations and disclaims all warranties of any kind, express or implied relative to any third-party product or services, including any third-party software or firmware, which may be incorporated into a Panduit product and/or resold or sublicensed by Panduit. To the extent any warranties extended to Panduit by the third-party manufacturer are transferable, Panduit will transfer such warranties to Buyer and any enforcement of such third-party warranties shall be between the Buyer and the third-party. Panduit does not warrant the compatibility of the Panduit products with the products of other manufacturers or Buyer's application except to the extent expressly represented in Panduit's published specifications or written quotation.
5. **Exclusions.** Before using, Buyer shall determine the suitability of the Panduit product for his intended use and Buyer assumes all risk and liability whatsoever in connection therewith. The warranties contained herein shall not apply to any Panduit products that have been subjected to misuse, neglect, improper storage, handling, installation or accidental damage or modified or altered by persons other than Panduit or persons authorized by Panduit. In addition, the firmware warranty does not cover any defects resulting from Buyer-supplied firmware or unauthorized interfacing, operation outside of the environmental specifications for the products, or improper or inadequate site preparation or maintenance by Buyer. Panduit products are not designed, intended or authorized to be used in medical applications or as components in medical devices that are used to sustain or support human life. Should Buyer purchase or use a Panduit product for any such unintended or unauthorized medical application, Buyer shall indemnify and hold Panduit harmless from any liability or damage whatsoever arising out of the use of Panduit products in such medical applications.
6. **LIMITATION ON LIABILITY.** THE WARRANTIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE WARRANTIES. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR USE ARE DISCLAIMED. TO THE EXTENT PERMITTED BY LAW, IN NO EVENT SHALL PANDUIT BE LIABLE FOR ANY LOSS OR DAMAGES ARISING FROM ANY PANDUIT PRODUCT WHETHER DIRECT, INDIRECT, CONSEQUENTIAL, INCIDENTAL OR SPECIAL, INCLUDING WITHOUT LIMITATION ANY CLAIM FOR LOSS OF DATA, LOSS OF ACTUAL OR ANTICIPATED REVENUE, PROFITS OR SAVINGS.
7. **General.** This Limited Product Warranty applies to the Panduit products only and not to any combination or assembly of the Panduit products. Nothing in this Limited Product Warranty shall be construed to provide Buyer with a warranty for any system implementation using Panduit products. The Panduit Certification Plus System Warranty is available for projects that are installed by Panduit Certified Installers, meet various

requirements and are registered with Panduit in accordance with the terms of the Panduit Certification Plus System Warranty.

Tech Support

North America Tech Support:

techsupport@panduit.com

Tel: 866.405.6654

EU Tech Support :

techsupportemea@panduit.com

Tel: 31.546.580.452

Fax: 31.546.580.441

Asia Pacific Tech Support:

techsupportap@panduit.com

Tel:

Singapore: 1-800-Panduit (7263848)

Australia: 1-800-Panduit (7263848)

Korea: 02.21827300


For a copy of Panduit product warranties, log on to www.panduit.com/warranty

For more information

Visit us at www.panduit.com/verisafe

1006772, B21148_EN_rev1

Documents / Resources

	<p>PANDUIT VS2-NET VeriSafe Network Module [pdf] Instruction Manual VS2-NET, VS2-NET VeriSafe Network Module, VeriSafe Network Module, Network Module, Module</p>
---	---

References

-  [Manual.to - Instant Know How](#)
-  [Panduit | Network Infrastructure and Industrial Electrical Wiring](#)