

 


Pansonite SB-HEJ-VR Vr Headset with Remote Controller User Guide

[Home](#) » [Pansonite](#) » Pansonite SB-HEJ-VR Vr Headset with Remote Controller User Guide 

Pansonite


SB-HEJ-VR Vr Headset with Remote Controller User Guide

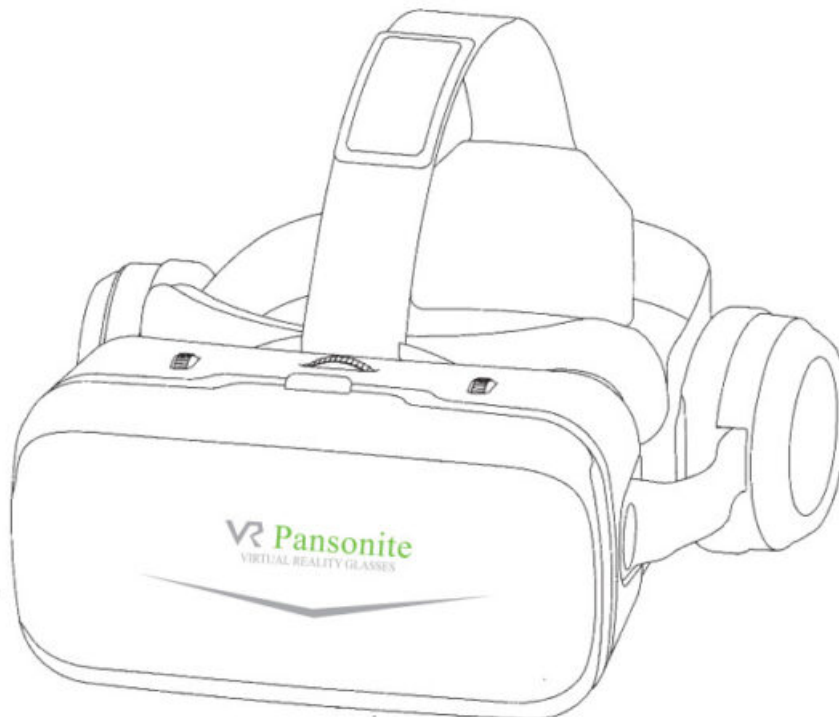

Contents

- [1 Packing List](#)
- [2 Introduction](#)
- [3 After-sales service:](#)
- [4 Out of warranty:](#)
- [5 Operating instructions:](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

 Packing List

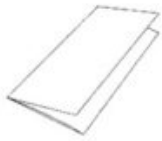

1 pcs manual

 


1 pcs remote




1 pcs device

Introduction

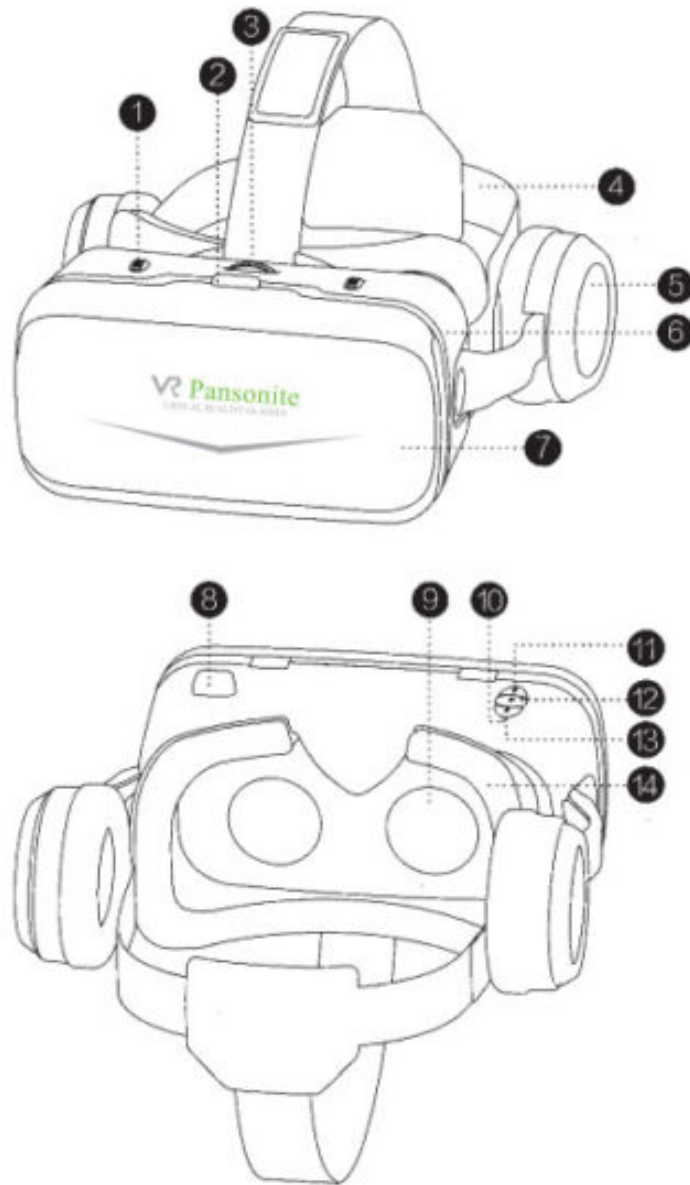

1. Focal Distance Adjustment	8. Touch screen button
2. Device buckle	9. Optical lens
3. Pupil Distance Adjustment	10. Hidden microphone
4. Ergonomic Belt	11. Volume+
5. Headset	12. Multifunction button
6. Device body	13. Volume-
7. Removable Panel	14. Leather Patch

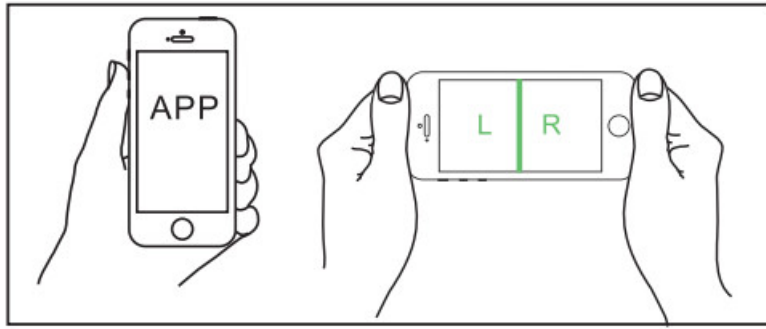 


1. Download and play the video test

Enter the Android market or IOS App store to download VR resources on a mobile phone (better under WIFL connection), select and install the APP according to the mobile system. then download the videos or games to test whether the device is split-screen on the left & right sides and can play normally.


2. How to use

Open the cover plate (as shown in the right picture), put your cell phone into the VR headsets, and make sure the cell phone screen is in the middle. then close the cover. Adjust the screen in the right direction.

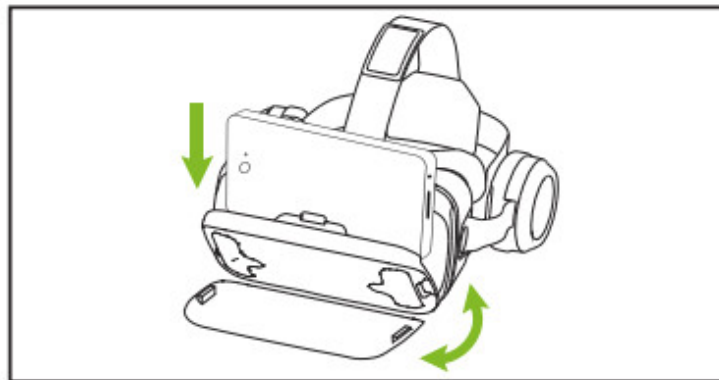

3. Adjustment function

Adjust the pupil distance once wear the VR headsets, and adjust the focal distance to get the best experience. It's also compatible with nearsighted people.

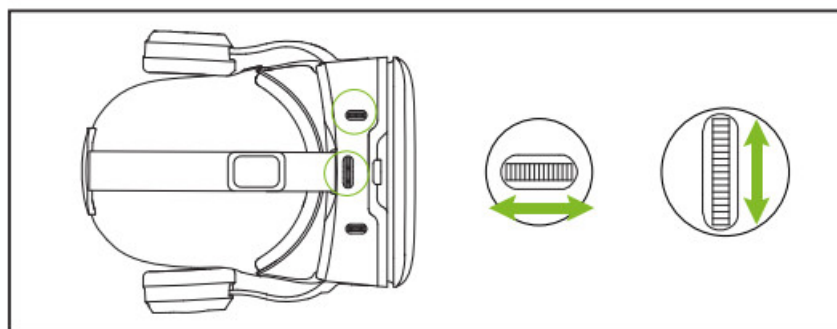


4. Introduction of gameplay

Two ways to play VR games:


A VR game can be controlled by the gyroscope of the smartphone, shaking your head or rotating to control the games(as shown in the right picture)

B VR games can be controlled by a Bluetooth gamepad, move all around, or 360°rotate.

Note Most VR games can be controlled by a gyroscope no need Bluetooth gamepad, please refer to the gameplay tips to see if your device is necessary with it or not.

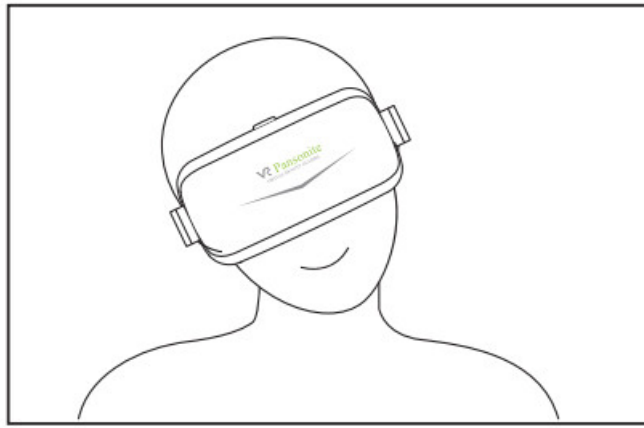

 5. introduction of the multi-function button

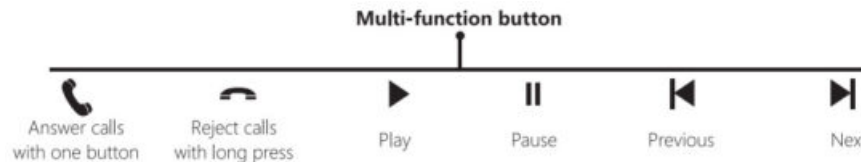

After-sales service:

1. Any quality problems within 7 days you bought VR PANSONITE, we accept sales return and refund the cost for you or change same item for free.
2. Any quality problems within 15 days you bought VR PANSONITE, we accept change same item for free.
3. Repair for free within 3 months.

Out of warranty:

1. Lack of valid invoice or not within the warranty period.
2. Not "Manual" requires the use, maintenance, custody and led to the failure or damage.
3. Damages caused by fire, water flood, thunder stroke, etc force majeure factors.
4. Malfunction as disassembling, refit.
5. Can not use suitable for your phone or network.

 
Important Note:

Please keep all the packaging and accessories when sales return.

If you encounter any problems in use, please contact us:

pansonite1@outlook.com

Kindly remind: In order to improve your viewing comfort, the appropriate angle of the back and seat is better to be 60. In order to protect your vision, we suggest your viewing time should not be more than 30 minutes.

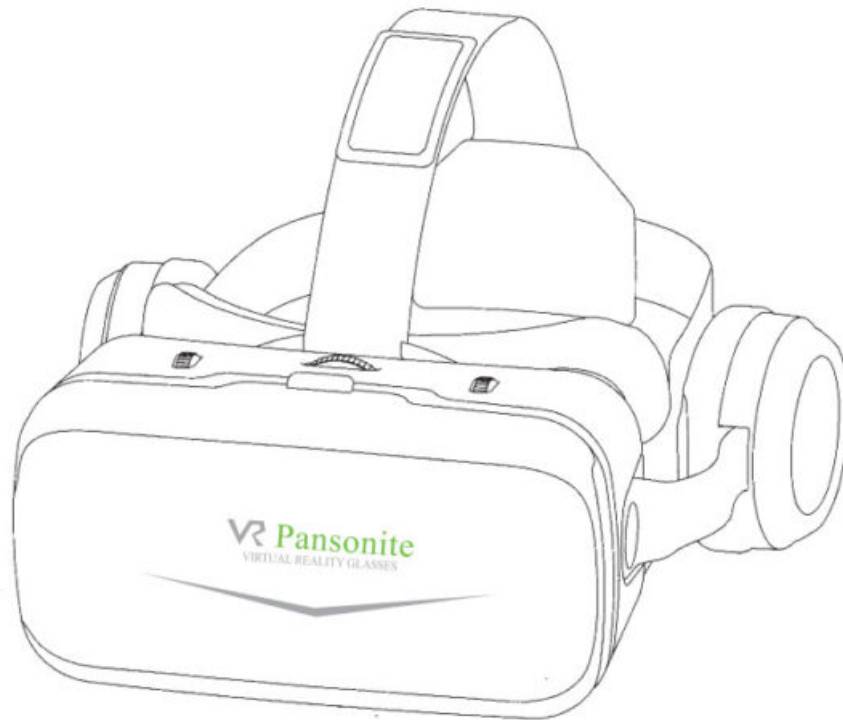

Without authorization in writing of PANSONITE, copying all or part of this manual is not allowed (Excluding comments on an article or simple reference for comment).



Pansonite

Bluetooth Remote USER GUIDE



 
Many thanks for purchasing our product! This is a portable wireless controller, used for mobile phones, MID, TV boxes, smart TV, PC and so on. It can be used as a gamepad, VR remote, wireless mouse, music control, E-book page, PPT presentation, etc., and supports iOS, Android, Windows, and so on.

Important Note: Products are subject to change without any notice. And this product has applied for patents, counterfeiting is not permitted.

Operating instructions:

1. **Power On:** Press the START button until LED is on (about 2 seconds).(First put the batteries.)
2. **Power Off** Press the START button until LED is off (about 5 seconds). Note: If no connection with the wireless device after 5mins, the system will power off automatically; after connecting with a wireless device, if no operation, the system will power off after 30mins.
3. **Pair and connect** after power on, LED indicator will flash, the device will enter into the wireless pair mode automatically to find the address and name of this device, click then can connect. Pair and connect successfully, the LED indicator will turn off. Next power on, it can connect and match the last wireless device. Under turn off state, press START (over 8 seconds), LED will flash, then go to pair mode again, and can't connect the last paired device automatically.
4. **KEY Mode:** Turn the switch on the side to KEY (there is "KEY" on the side), The device operation is a one-hand vertical operation.(as shown to the right)

4.1 Music operation: After connecting with wireless, open the mobile's music player (like Samsung's player), click play, they can use this device to operate, like music play, pause, change songs, and so on. There are some differences due to different software and system,

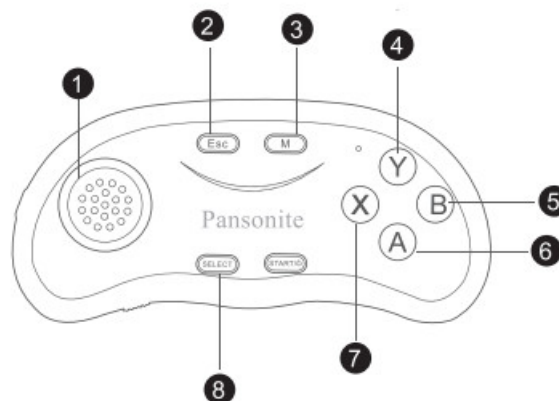

1.up/ down /left/ right/ front/ back 7.Volume+ 8.Play / Pause 2.ESC 3.Mouse Mode 4.Menu 5.Mute / Shutter 6.Volume+ like: key is for mute under iOS, but for camera selfile under Android.

4.2 Selfie operation:

For ios mobile, press **X** key to shutter; for Android Samsung mobile, then press the **B** key to shutter, Volume key to adjust focus; for another Android mobile, please enter camera setup first, then set the volume key to shutter or scan QR code to download camera software.

4.3 Mouse operation(just for Android):

When the controller is in the music operation function, Press, **M** then the joystick can change to mouse function, **SELECT** is for the mouse confirm key. Press **M** again, then can switch to music mode. If need to move the mouse function, please press the confirm key on the top and move the joysticsame time (Turn side switch to Game side). MENU function: press **Y** is MENU key function.

4.4 E-Book flip function:


In 'Reader: use Volume+/- to turn the page up-down; In Kindle or PPT for iOS, use joystick in Game mode to turn the page.

5. GAME function:

Turn the side switch to the Game side(there is "GAME" on the side), now the device is operated by two-hands horizontal.

5.1 Game function on Android:

In Menu, if the joystick can move the cursor, Key **A** is the confirmation button, Key **B** is returning button, then means your mobile system can support international standard gamepad, just download the game and play directly (If can't operate, then refer to part 6, Android MTK mobile operation)

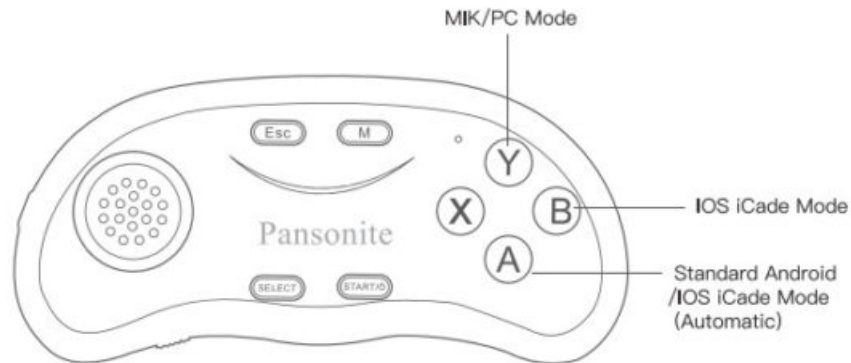

Users can also download simulator BIN files to the Games file folder on mobile, then can use MIGAMEPAD software to open the game file, like many famous games:

Super Mario, Metal Slug, Sangokushi, and so on. Android games usually have a gamepad type, download this kind of game, just connect with wireless then can operate with the gamepad directly (please note, turn side switch to "Game"), this kind of games are like Eternity Warriors 2, FIFA 15 and so on.

(Some games maybe need set to use gamepad control when playing) senior game combination key:

START + **A** =L1, **SELECT** + **B** =R1, **SELECT** + Joystic = Right Joystic
SELECT + **X** =L2, **SELECT** + **Y** =R2

6. Android MTK mobile operation:

Like Redmi 3G version, Huawei Honor3X, CoolPAD, Zhongxing, these old-style mobiles use MTK CPU, due to MTK's bad compatibility, they can't support international standard gamepad agreements. So if by standard Android connection method, unusual problems will happen. We preset MTK mode to support MIGAMEPAD games.

6.1 MTK Power on mode: under the power-off state, press key **Y** st then press **START** at the same time until the LED light is on, and the device turns on successfully.

Next time, press the key then default to MTK mote. if want to shift to standard Android mode press key **A** and, **START** then ok

6.2 Function instruction on MTK mode Music, mouse, and shutter are the same as standard Android, just game mode is different. MTK mode can support GAMEPAD simulation directly, but can't support standard Android APK games.

7. VR 3D virtual reality game or video operation:

Browse the website to learn more: www.migamepad.com/english/index-ios-english.jsp

8. Battery:

Our product needs two 1.5V batteries of type size AAA, when power is low, LED will flash, please change the batteries.


Notes:

1. When an accident causes no boot or is unable to shut down, please use a needle to take out the batteries.
2. If already paired, but can't connect, please cancel the pair and boot the device again.
3. If can't use the input method, please download input software from the website above for Android, and press the M button for iOS.

Product Specifications

Item	Specifications
Size	130mmx60mmx14mm
Wireless Protocol	Bluetooth 3.0 compliant
Wireless Distance	2-10 Meters
OS	Android /iOS/PC
CPU	ARM968E-S Core
Battery	Type size alkaline AAA 1.5V X 2
Working time (Continuous game)	About 40 hours
Work current	0.5-8mA
Standby current	0.5-1mA
Shutdown current	<20uA

Documents / Resources

	<p>Pansonite SB-HEJ-VR Vr Headset with Remote Controller [pdf] User Guide SB-HEJ-VR, Vr Headset with Remote Controller</p>
---	--