



Pass Seymour 2624-GRY Four Way Decorator Switch Instructions

[Home](#) » [Pass & Seymour](#) » Pass Seymour 2624-GRY Four Way Decorator Switch Instructions 

Pass & Seymour

Instructions

Contents


- [1 2624-GRY Four Way Decorator Switch](#)
- [2 WIRING INFORMATION](#)
- [3 Documents / Resources](#)
- [3.1 References](#)

2624-GRY Four Way Decorator Switch

WIRING INFORMATION

1. TURN OFF POWER.
2. LOOSEN TERMINAL SCREWS.
3. CONNECT WITH INSULATED COPPER CONDUCTORS (SOLID OR STRANDED). DO NOT TIN CONDUCTORS.
CAUTION:USE WITH COPPER WIRE ONLY.
ATTENTION:EMPLOYER UNIQUEMENT AVEC FIL DE CUIVRE.
4. DO NOT EXCEED MARKED ELECTRICAL RATING.
5. FOR PROPER WIRING PROCEDURE.
 - A. FOR BACK WIRED DEVICES, SEE FIG. A
 - a) STRIP WIRE(* 14-710 AWG)11/116 LONG.
 - b) INSERT STRIPPED WIRE IN BACK SLOT UNDER CLAMP.
 - B. FOR SIDE WIRED DEVICES, SEE FIG. B


- a) STRIP WIRE(' 14-°10 AWG)15/16 LONG.
 - b) BEND WIRE AROUND SCREW.
6. TIGHTEN SCREWS TO 12-15 INCH POUNDS.
- NOTE: WHEN FLUORESCENT LOADS ARE CONTROLLED BY LIGHTED SWITCHES THE LAMP MAY OCCASIONALLY FLICKER WHEN THE SWITCH IS IN THE OFF POSITION.
7. AGREEN HEX, HEAD SCREW (OR GREEN PIG TAIL) IS PROVIDED TO GROUND THE MOUNTING STRAP WHERE REQUIRED.
8. INSTALL SWITCH AND WALL PLATE SECURELY TO ELECTRICAL BOX.
9. TURN ON POWER.

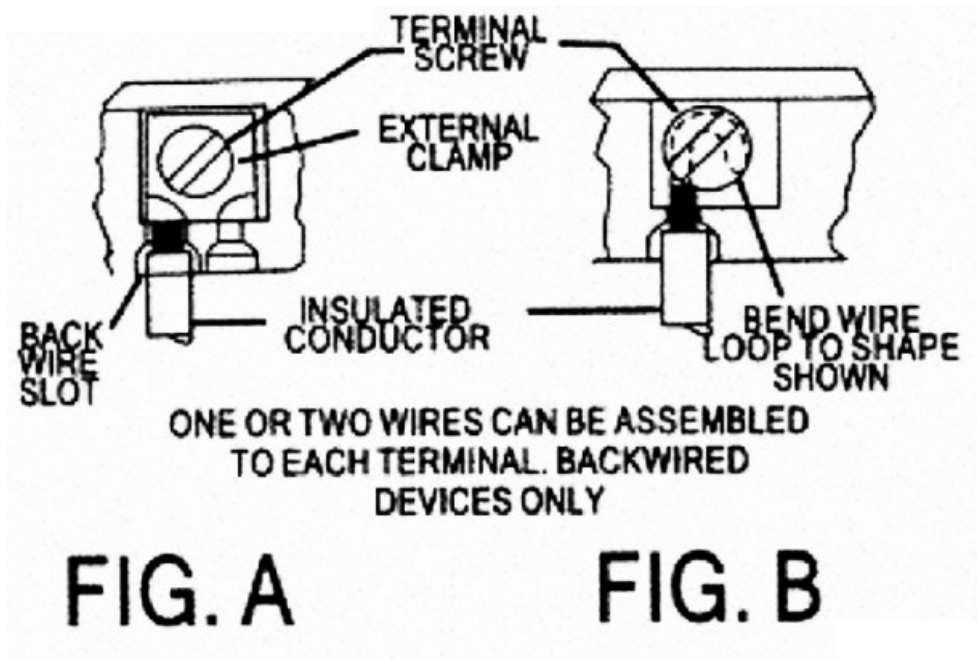

Pass & Seymour

341056

 Documents / Resources



[Pass Seymour 2624-GRY Four Way Decorator Switch](#) [pdf] Instructions
2624-GRY, 2624-GRY Four Way Decorator Switch, Four Way Decorator Switch, Decorator Switch, Switch

References

- [User Manual](#)