Tracking
System
Software





pat Tracking System Software User Guide


Home » pat » pat Tracking System Software User Guide The state of the

Contents

- 1 pat Tracking System
- **Software**
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 FAQ
- **5 Software Installation**
- **6 Hardware Setup**
- 7 Contact
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

pat

pat Tracking System Software

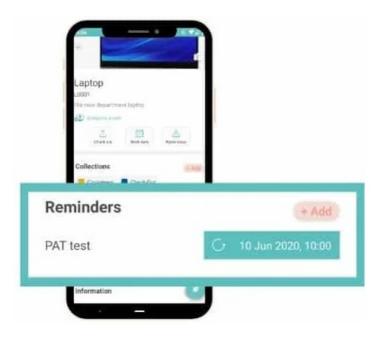

Product Information

Specifications

Product Name: PST Tracking System
 Operating System Compatibility: Linux

Connection Interface: USB

• Power Supply: Standard wall socket

Mounting: Standard tripod mount (1/4"-20 UNC)
 LED Indicator: Status LED for PST HD trackers

Product Usage Instructions

- Insert the PST software USB stick into your computer.
- Run `pst-setup-#-Linux-x -Release. deb' to start the installation (replace '#' with the version number).
- Click the `Install' button to install all PST components on your computer.
- Mount the PST using the standard tripod mount ensuring a clear line of sight.
- Connect the power cable to the power supply unit and plug it into a wall socket.
- Connect two USB cables to your computer's SuperSpeed USB ports.
- · Open a Terminal.
- Follow instructions specific to your PST model for initialization.
- Access PDF manuals at /opt/ps-tech/pst/ for guidance on working with the PST.

FAQ

- Q: What should I do if I cannot download the initialization files?
- A: Contact PS-Tech to receive the required initialization files for manual installation.

QUICK START GUIDE for LINUX

Thank you for choosing the PST tracking system. This quick start guide will describe the PST software installation, hardware setup, and initialization procedure for use with Linux.

IMPORTANT: Do not plug in the PST before you install the client software.

Software Installation

- 1. Insert the PST software USB stick into your computer.
- 2. Start the installation by running 'pst-setup-#-Linux-x64-Release.deb', where '#' is the version number.
- 3. Click the 'Install' button and all PST components will be installed on your computer.

Hardware Setup

- 1. The PST can be mounted with the standard tripod mount (1/4-20 UNC) at the bottom of the device. Ensure that the PST is positioned in such a way that no objects are blocking its line of sight.
- 2. Attach the power cable to the power supply unit and plug the other end into a wall socket (110-240V). Plug the cable coming from the power supply unit into the back of the PST.
- 3. Plug the two USB cables into your computer. Make sure you connect the PST to SuperSpeed USB 3.0 capable ports.

For the PSTHD trackers, the status LED on the front of the PST should now be lit.

IMPORTANT: Do not use the PST near any heat sources. The PST is a high-precision optical measurement device and is designed to operate within a temperature range of 15 °C to 35 °C (59 °F to 95 °F).

Startup

To Start using the PST unit, start the Server:

- Open a Terminal.
- Depending on the model of the connected PST:
 - For a PSTHDrun /opt/ps-tech/pst/pst-server basler_ace
 - For a PST Pico run /opt/ps-tech/pst/pst-server basler dart
- · After successful initialization, run the PST-Client from the Applications folder.

If this is the first time you use your PST in the PST client software, it has to be initialized. You will be given the option to automatically download the required initialization files. After initialization has been completed, the PST will be ready for use. PDF Manuals on how to work with the PST can be found in /opt/ps-tech/pst/. The PST SDK documentation can be found in /opt/ps-tech/pst/Development/docs/index.html.

IMPORTANT: If it is not possible to download the initialization files, they can be installed manually. Please contact PS-Tech if you would like to receive these initialization files.

Contact

- For questions regarding the installation, set, and usage of the PST software and hardware please contact PS-Tech.
- Website: http://www.ps-tech.com

• E-mail: info@ps-tech.com

• Phone: +31 20 3311214

• Fax: +31 20 5248797

- Falckstraat 53 hs
- 1017 VV Amsterdam
- Netherlands

IMPORTANT: The PST is a high-precision optical measurement device. Opening or modifying the PST is likely to cause irreparable damage and will void the warranty.

IMPORTANT: Please keep the original shipping box as only devices shipped in the original box can be considered for warranty.

Documents / Resources



pat Tracking System Software [pdf] User Guide
Tracking System Software, System Software, Software

References

- W Optical tracking systems | PS-tech
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.