

PATCHBOX SETUP.EXE User Manual

[Home](#) » [PATCHBOX](#) » PATCHBOX SETUP.EXE User Manual

Contents [[hide](#)]

- [1 PATCHBOX SETUP.EXE](#)
- [2 How to Assemble](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)




PATCHBOX SETUP.EXE



Warning: Please clarify the load capacity of the server rack with the manufacturer. Always check assembly aid for tightness before loading. Assembly aid needs to be free from contamination, such as oil and lubricants. Make sure all nuts are tight. Before loading, make sure that the locking pins are fully inserted. If necessary, remove the extended locking bolts with one turn. Loads must not be pushed over the joint of the assembly aid (risk of overloading).

Loads must be protected from the risk of damage caused by falling down through appropriate additional measures. The mounting aid includes magnets. Keep away from data carriers, magnetic storage devices and sensitive electronic devices. Keep away from children, risk of swallowing small parts.

How to Assemble

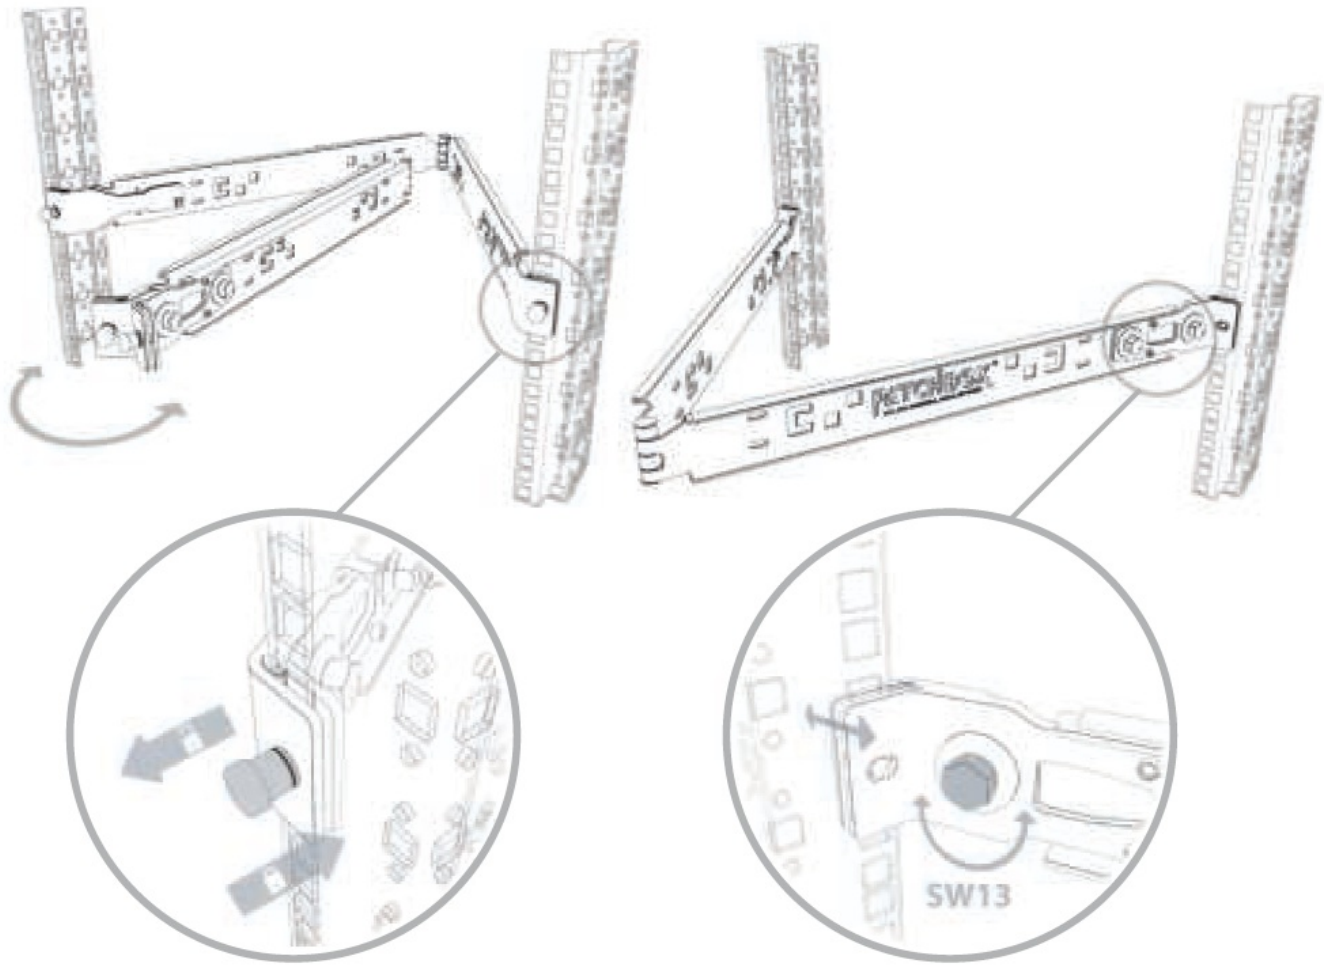

All rights reserved. Specifications subject to change. PATCHBOX GmbH, Hernalser Gürtel 1/12, 1170 Vienna, Austria. +43 1 99 71 960, office@patchbox.com, patchbox.com. KD001Q120 © PATCHBOX 2020

PATCHBOX

patchbox.com

Documents / Resources

| | |
|---|---|
|  | <p>PATCHBOX PATCHBOX SETUP.EXE [pdf] User Manual PATCHBOX, SETUP.EXE</p> |
|---|---|

References

-  [Cable Management Tools for Network Cabinets | PATCHBOX Menu Arrow Forward Close](#)