





# **PAX A930 Wireless POS Terminal User Manual**

Home » Pax » PAX A930 Wireless POS Terminal User Manual




#### Contents

- 1 PAX A930 Wireless POS Terminal User **Manual**
- **2 Contents Checklist**
- **3 Product Description**
- 4 Power ON/OFF
- **5 Printer Paper**
- **6 Specifications**
- 7 Device Location
- 8 Cleaning the Device
- 9 References



**PAX A930 Wireless POS Terminal User Manual** 

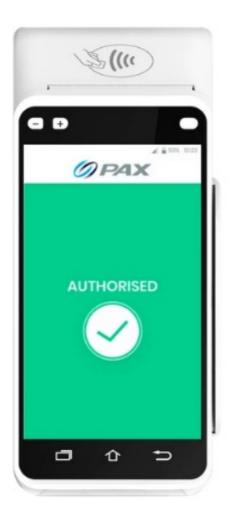

### Note


Product images shown may be different from than actual product received.

# **Contents Checklist**


Please check the components after unpacking. If any components are missing, please contact the dealer.

Name	Qty.
Wireless POS Terminal	1
AC Power Adapter	1
USB Cable	1
Battery	1
Product Manual	1

# **Product Description**

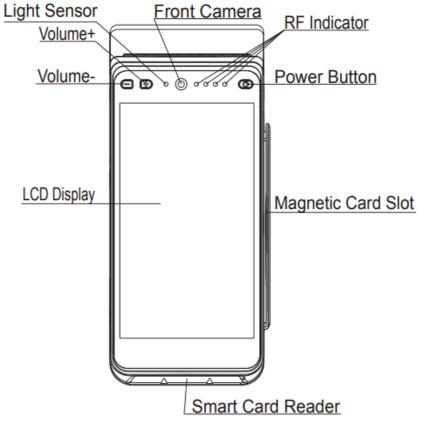


# Front View

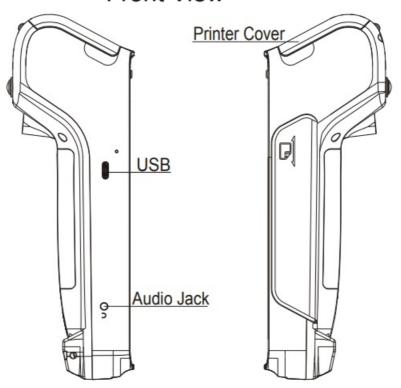


Left Side View

Right Side View

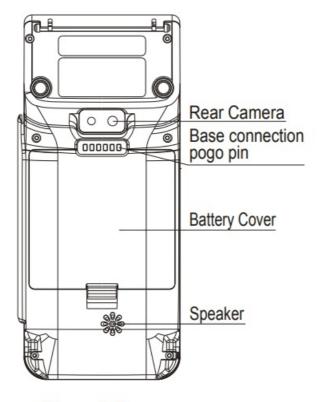

Rear View

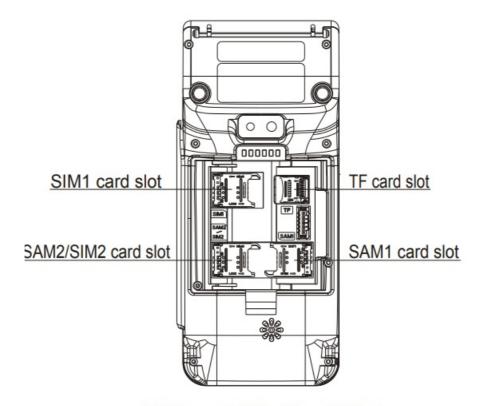

SIM and SD Card Slots

## Power ON/OFF

- Power on: Press and hold the Power button for five seconds until the LCD screen lights up.
- Red indicator: Device is charging
- Green indicator: Charging is complete
- Red and green indicators flashing alternately: Charging problem
- Power off: Press and hold the Power button for three seconds until the

• The shutdown menu appears. Tap Shutdown, then click Shutdown again. "Shutting" appears on the screen when the terminal is turned off.

#### **Battery charging**

Users can charge the battery with the power adapter and the charging status will be displayed on the LCD screen.


## **Printer Paper**

To install the paper:

1. Press the printer cover button (see page 2 for location) and open the cover.



2. Insert paper roll with the end facing up and extending out of A930.

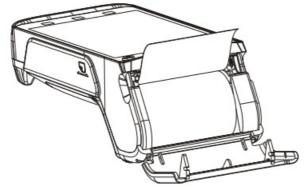

3. Gently snap the printer cover closed.



4. To tear the paper, press the paper downward along the cutter and pull it to the left or right along the cutting edge.

#### **Card Readers**

Magnetic Stripe Card: Place the card in the slot with the stripe facing left towards the terminal. Swipe the card through the card slot at a constant speed. The card can be swiped bi-directionally. Smart Card: Insert the card into the card slot with the chip facing up. Push the card in the slot as far as it will go. Contactless Reader: Place a contactless card close to the Contactless area, located on the top of the terminal.

#### **SIM Cards**

To insert the SIM card, open the battery cover on the bottom of the terminal and take out the battery. Insert the SAM/SIM card into the corresponding SAM/SIM card slot and replace the battery and battery cover.

#### **SD Card**

To insert the SD card, open the battery cover on the bottom of the terminal and take out the battery. Insert a Micro SD card into the corresponding Micro SD card slot. Replace the battery and the battery cover.

## **Specifications**

- Operating System: PayDroid powered by Android 7.1
- CPU: Quad-core Cortex-A53, 1.4 GHz
- Memory: 1GB DDR + 8GB eMMC
- Display: 5.5" 720 x 1280 IPS Display
- Multi-touch Captivate Display
- Printer: 2" High-speed thermal printer, supports 58 x 40mm paper
- Audio: built-in speaker, supports headphone output
- Camera: Front camera: 0.3 Megapixel fixed focal camera and
- Rear camera: 5 5-megapixel autofocus camera with LED flashlight
- L-Sensor (Ambient Light Sensor): Automatically adjusts the backlight brightness of the main display
- · Wireless Communication: Bluetooth® wireless technology, Wi-Fi, and
- · HotSpot Positioning: supports GPS, Glonass, BeiDou, and Galileo
- Card Slots: 1 SIM card slot, 1 Micro SD card slot supports up to 128GB,

### Magnetic stripe/IC card slot

- Magnetic Card Reader: Complies with the standard of ISO7810, ISO7811, ISO7812, 1/2/3 Track
- IC Card Reader: Conforms to the standard of ISO7816, EMV 4.3 L1 & L2, PBOC3.01
- Contactless Card Reader: Compatible with ISO14443 Type A & B
- Working Environment: Temperature: -10°C 50°C (14°F 122°F)
- Humidity.:5% 96% (non-condensing)
- Storage Environment: Temperature: -20°C 70°C (-4°F 158°F)

## **Device Location**

Locate the device on a countertop, desktop, or tabletop. Keep the device away from direct sunlight, excessive dust, moisture, and heat. Avoid locating the device near electrical devices that might introduce interference such as microwave ovens and blow dryers.

## Cleaning the Device

#### **WARNING**

- Do not use industrial strength or abrasive cleaner as it may damage or scratch the screen.
- Do not immerse the terminal in water or liquid.
- Do not spray water or cleaner into card readers or ports.
- To clean the screen, apply distilled water or mild glass cleaner onto a soft,

- lint-free cloth and gently wipe the screen.
- To clean the device, apply distilled water or plastic-safe cleaner onto a soft,
- · lint-free cloth and wipe gently.

#### **Cleaning the Device**

- 1. Avoid exposing the device to an excessively hot, humid, dusty, and/or strong electromagnetic environment.
- 2. Do not vibrate, shake, or drop the device.
- 3. Do not plug or unplug any part of the device while it is powered on. This may cause damage to the internal circuit
- 4. There is a risk of explosion if the battery is replaced with an incorrect type.
- 5. Please contact PAX technical support for assistance with the device.

### **Lithium Ion Battery Usage Tips**

- 1. Do not use the battery in direct sunlight or smoky or dusty environments.
- 2. Do not crush the battery or place it in liquid or fire.
- 3. Discontinue use if the battery is damaged.
- 4. Consider replacing the battery when the battery life begins to decline.
- 5. Only use the appropriate battery and charger for the terminal.
- 6. Overcharging the terminal can degrade the battery. Do not over-use the battery or charge the battery longer than 24 hours.
- 7. If the battery is not used often, please recharge the battery every 6 months to avoid shortening the life of the battery.
- 8. Replace the battery if it has not been used in 2 years.
- 9. Dispose of used batteries properly.

This document is provided to you for informational purposes only. All features and specifications are subject to change without notice. PAX's name and PAX's logo are registered trademarks of PAX Technology Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., And any use of such marks by PAX Technology, Inc. is under license. Other trademarks and trade names are those of their respective owners.

## **Responsible Party**

PAX Technology, Inc. 8880 Freedom Crossing Trail Building 400, 3rd Floor, Suite 300 Jacksonville, FL 32256, USA Help Desk 1-877-859-0099 www.pax.us

Download PDF: PAX A930 Wireless POS Terminal User Manual

#### References

• User Manual

## Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.