


# Pbms Tools Changing The Inverter Protocol Software User Guide

[Home](#) » [Pbms Tools](#) » Pbms Tools Changing The Inverter Protocol Software User Guide 

## Pbms Tools Changing The Inverter Protocol Software

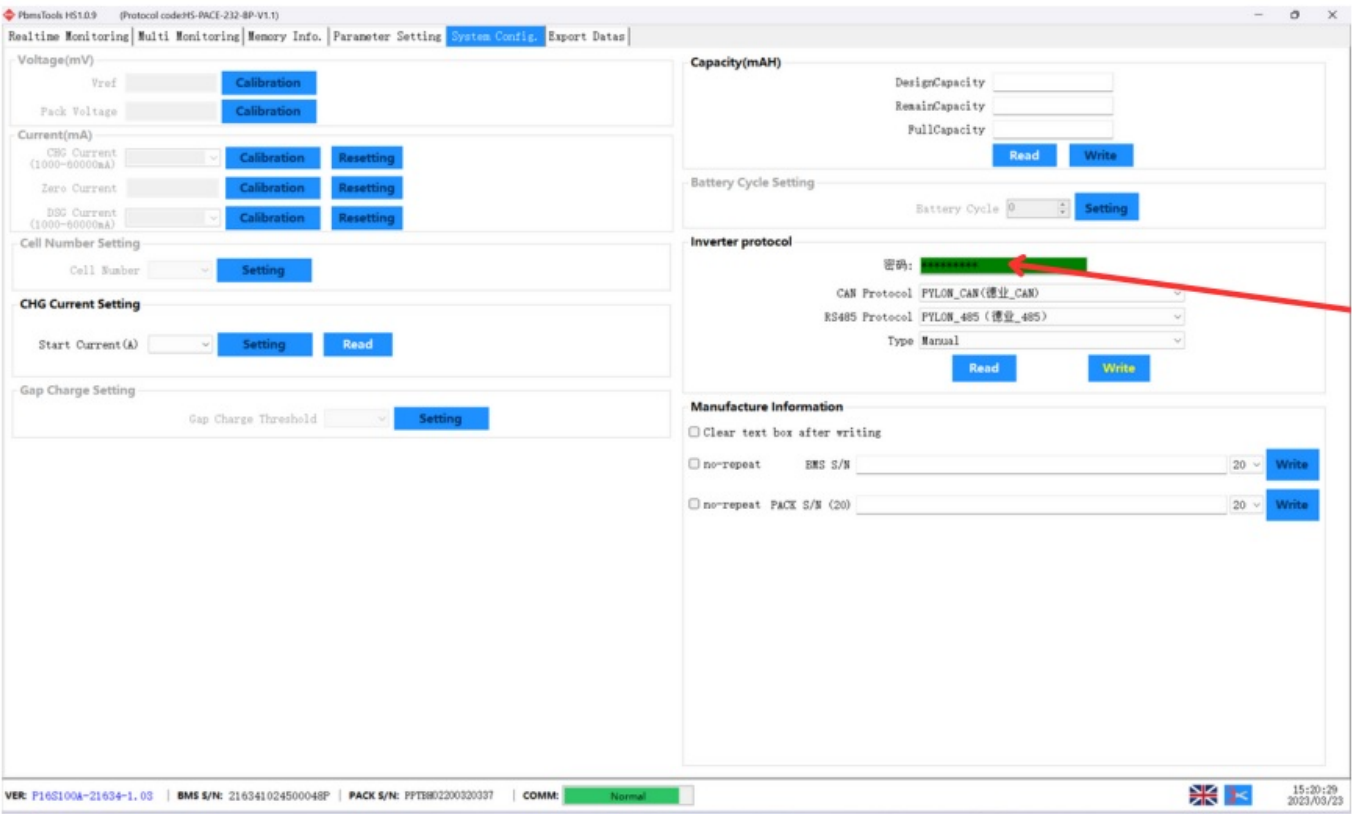

## Contents

- 1 Instruction for use
- 2 Documents / Resources
  - 2.1 References
- 3 Related Posts

## Instruction for use

- Open Pbms Tools
- Connect to battery
- Navigate to System Config
- Click Read
- Input Password Pz#168178
- Amend CAN Protocol
- Click Write
- Restart Battery

The screenshot shows the 'Pbms Tools' software interface with the 'System Config' tab selected. The interface is divided into two main panels. The left panel contains settings for Voltage (mV), Current (mA), Cell Number, CHG Current, and Gap Charge. The right panel contains Capacity (mAh), Battery Cycle, Inverter protocol, and Manufacture Information. A red arrow points to the 'Password' field in the 'Inverter protocol' section, which is currently empty. Below the arrow, text reads 'Input Password Pz#168178 here'.

## Documents / Resources



[Pbms Tools Changing The Inverter Protocol Software](#) [pdf] User Guide  
Changing The Inverter Protocol Software, Inverter Protocol Software, Protocol Software, Software

## References

- [User Manual](#)

## **Manuals+. Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.