



PCE Instruments PCE-BFT 2 Brake Fluid Tester User Manual

[Home](#) » [PCE Instruments](#) » PCE Instruments PCE-BFT 2 Brake Fluid Tester User Manual 

Contents

- [1 PCE Instruments PCE-BFT 2 Brake Fluid Tester](#)
- [2 Safety notes](#)
- [3 Technical specifications](#)
- [4 Device description](#)
- [5 Measurement preparation](#)
- [6 Disposal](#)
- [7 PCE Instruments' contact information](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



PCE Instruments PCE-BFT 2 Brake Fluid Tester



Safety notes

Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- The device must only be used as described in this instruction manual. If used otherwise, this can cause dangerous situations for the user and damage to the meter.
- The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture.
- Do not expose the device to shocks or strong vibrations.
- The case should only be opened by qualified PCE Instruments personnel.
- Never use the instrument when your hands are wet.
- You must not make any technical changes to the device.
- The appliance should only be cleaned with a damp cloth. Use only pH-neutral cleaner, no abrasives or solvents.
- The device must only be used with accessories from PCE Instruments or equivalent.
- Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- Do not use the instrument in explosive atmospheres.

- The measurement range as stated in the specifications must not be exceeded under any circumstances.
- Non-observance of the safety notes can cause damage to the device and injuries to the user.
- When handling chemicals, always wear protective gloves and goggles and any other prescribed protective equipment.

We do not assume liability for printing errors or any other mistakes in this manual.

We expressly point to our general guarantee terms which can be found in our general terms of business.

If you have any questions please contact PCE Instruments. The contact details can be found at the end of this manual.

Delivery scope

- 1 x brake fluid tester PCE-BFT 2
- 4 x 1.5 V AAA battery
- 1 x carrying case
- 1 x user manual

Technical specifications

Designation	Parameter
Testable brake fluids	DOT3 DOT4 DOT5.1
Display brake fluid quality	<0.1 % Excellent quality <1 % Good quality <2.5 % Acceptable quality >3 % Poor quality Fluid must be replaced
Display	LC display with backlight
Alarm	audible alarm tone
Automatic power off	after 6 minutes
Power supply	4 x 1.5 V AAA battery
Operating conditions	-10 ... 50 °C / 14 ... 122 °F
Dimensions	Sensor length: approx. 190 mm / 7.5 in Display unit: 160 x 37 x 34 mm / 6.3 x 1.5 x 1.3 in
Weight	approx. 155 g / <1 lb

Device description



Control panel



- MODE key
Changing the brake fluid type



- Speaker key
Press to enable or disable Beep tone



- Power key
Switching the meter on and off



- Backlight key
Switching the backlight on and off

Measurement preparation

- Open the battery compartment cover on the back of the meter and insert the 4 AAA batteries into the battery compartment, observing the correct polarity (+ / -).

Measurement

- Switch on the meter with the power key, and change the brake fluid to be measured with the MODE key.

 
(DOT3, DOT4, DOT5.1)

- Before measuring, make sure that the sensor is clean.
- Immerse the sensor in the brake fluid to start the measurement.
- The result of the measurement can be read on the display.


Note

Clean the electrodes with a cloth after each measurement and restart the meter before each measurement in order to zero it. The restart is mandatory for a correct measurement result.


Example measurements

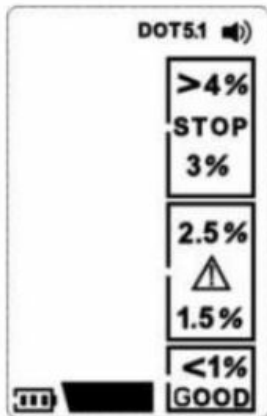


<0.1%
High purity

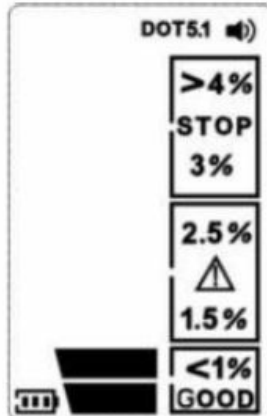 


<1%
Good condition

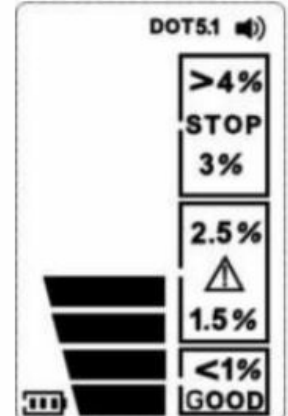 


<1.5%
Normal quality

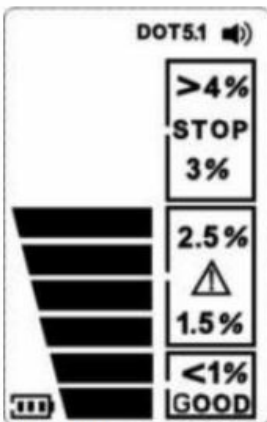 

<2.5%
Normal quality

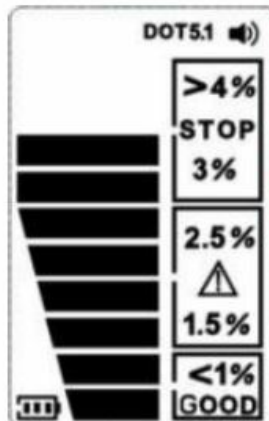 

>3%
Replace

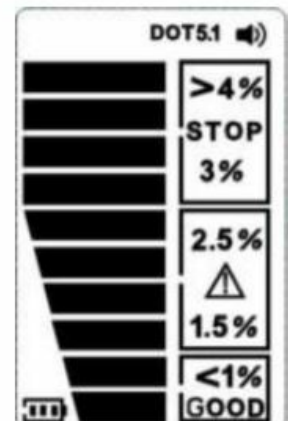 

>4%
Replace urgently

 
Contact

- If you have any questions, suggestions, or technical problems, please do not hesitate to contact us. You will find the relevant contact information at the end of this user manual.

Disposal

- For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose.

- In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company that disposes of the devices in line with the law.
- For countries outside the EU, batteries, and devices should be disposed of in accordance with your local waste regulations.
- If you have any questions, please contact PCE Instruments.

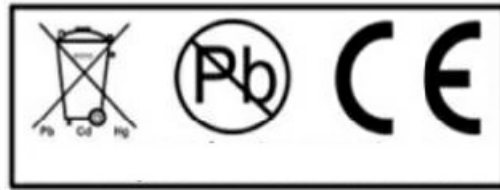

www.pce-instruments.com

PCE Instruments' contact information

Germany

- PCE Deutschland GmbH
- Im Langel 26
- D-59872 Meschede
- Deutschland
- Tel.: +49 (0) 2903 976 99 0
- Fax: +49 (0) 2903 976 99 29 info@pce-instruments.com www.pce-instruments.com/deutsch

United Kingdom

- PCE Instruments UK Ltd
- Unit 11 Southpoint Business Park Ensign Way, Southampton Hampshire
- United Kingdom, SO31 4RF
- Tel: +44 (0) 2380 98703 0
- Fax: +44 (0) 2380 98703 9 info@pce-instruments.co.uk www.pce-instruments.com/english

The Netherlands

- PCE Brookhuis B.V. Institutenweg 15
- 7521 PH Enschede
- Nederland
- Telefoon: +31 (0)53 737 01 92 info@pcebenelux.nl www.pce-instruments.com/dutch

France

- PCE Instruments France EURL
- 23, rue de Strasbourg
- 67250 Soultz-Sous-Forets

- France
- Téléphone: +33 (0) 972 3537 17 Numéro de fax: +33 (0) 972 3537 18 info@pce-france.fr www.pce-instruments.com/french

Italy

- PCE Italia s.r.l.
- Via Pesciatina 878 / B-Interno 6 55010 Loc. Gragnano
- Capannori (Lucca)
- Italia
- Telefono: +39 0583 975 114
- Fax: +39 0583 974 824 info@pce-italia.it www.pce-instruments.com/italiano

United States of America

- PCE Americas Inc.
- 1201 Jupiter Park Drive, Suite 8 Jupiter / Palm Beach
- 33458 FL
- USA
- Tel: +1 (561) 320-9162
- Fax: +1 (561) 320-9176 info@pce-americas.com www.pce-instruments.com/us

Spain

- PCE Ibérica S.L.
- Calle Mayor, 53
- 02500 Tobarra (Albacete) España
- Tel. : +34 967 543 548
- Fax: +34 967 543 542 info@pce-iberica.es www.pce-instruments.com/espanol

Turkey

- PCE Teknik Cihazları Ltd.Şti. Halkalı Merkez Mah.
- Pehlivan Sok. No.6/C
- 34303 Küçükçekmece – İstanbul Türkiye
- Tel: 0212 471 11 47
- Faks: 0212 705 53 93 info@pce-cihazlari.com.tr www.pce-instruments.com/turkish

product search on: www.pce-instruments.com



Documents / Resources

	PCE Instruments PCE-BFT 2 Brake Fluid Tester [pdf] User Manual PCE-BFT 2, PCE-BFT 2 Brake Fluid Tester, Brake Fluid Tester, Fluid Tester, Tester
---	---

References

- [France.fr : Actualités, destinations et infos du tourisme en France](#)
- [iberica.es](#)
- [Make an offer on the domain instruments.co.uk - Domains.co.uk](#)
- [Computer Instruments | Home](#)
- [Discover Italy: Official Tourism Website - Italia.it](#)
- [Industrial Measurement Products and Solutions | PCE Instruments](#)
- [PCE Deutschland GmbH Prüfgeräte vom Hersteller | PCE Instruments](#)
- [PCE Brookhuis B.V. | PCE Instruments](#)
- [PCE Americas Inc. : Test Instruments | PCE Instruments](#)
- [PCE Iberica S.L. Instrumentación | PCE Instruments](#)
- [PCE Instruments France | PCE Instruments](#)
- [PCE Italia s.r.l. / Strumenti di Misura | PCE Instruments](#)
- [PCE Teknik Cihazlar Paz. Tic. Ltd.Şti. | PCE Instruments](#)
- [PCE Americas Inc. : Test Instruments | PCE Instruments](#)
- [PCE Americas Inc. : Test Instruments | PCE Instruments](#)