



PCE Instruments PCE-DSX 20 Stroboscope User Manual

[Home](#) » [PCE Instruments](#) » PCE Instruments PCE-DSX 20 Stroboscope User Manual 

PCE Instruments PCE-DSX 20 Stroboscope User Manual



Contents

- [1 Safety notes](#)
- [2 Specifications](#)
- [3 Delivery scope](#)
- [4 System description](#)
- [5 Operation](#)
- [6 Notes](#)
- [7 Contact](#)
 - [7.1 Disposal](#)
- [8 PCE Instruments contact information](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Safety notes

Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- The device must only be used as described in this instruction manual. If used otherwise, this can cause dangerous situations for the user and damage to the meter.
- The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture.
- Do not expose the device to shocks or strong vibrations.
- Be careful with rotating objects! Even if they appear motionless in the stroboscopic light, the risk of injury is high.
- Do not look directly into the flash as this could injure your eyes.
- Do not point the stroboscope at other people. Light pulses of more than 5 Hz may cause people with photosensitive epilepsy to suffer a seizure.
- Do not touch the lamp with bare hands.
- The case should only be opened by qualified PCE Instruments personnel.
- Never use the instrument when your hands are wet.
- You must not make any technical changes to the device.
- The appliance should only be cleaned with a damp cloth. Use only pH-neutral cleaner, no abrasives or solvents.
- The device must only be used with accessories from PCE Instruments or equivalent.
- Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- Do not use the instrument in explosive atmospheres.
- The measurement range as stated in the specifications must not be exceeded under any circumstances.
- Non-observance of the safety notes can cause damage to the device and injuries to the user.

We do not assume liability for printing errors or any other mistakes in this manual.

We expressly point to our general guarantee terms which can be found in our general terms of business.

If you have any questions please contact PCE Instruments. The contact details can be found at the end of this manual

Specifications

Function	Range	Resolution	Accuracy
Flashes / speed	50 ... 35000RPM/FPM	<1000 PRM: 0.1 RPM	±(0.05 % of rdg.+ 2 dgt.)
		<9999 RPM: 1 RPM	
		<35000 RPM: 10 RPM	
		<599.9 RPM: 0.001 Hz	

Flash frequency	0.833.... 583.3 Hz	<5999 RPM: 0.01 Hz	±(0.05 % of rdg.+ 2 dgt.)
		<35000 RPM: 0.1 Hz	
Phase shift	0 ... 359°	1°	±(0.1% of rdg. + 2 dgt.)
Ext. trigger	0 ... 1200 ms	<1000 PRM: 0.1 RPM	±(0.1% of rdg. + 2 dgt.)
		<9999 RPM: 1 RPM	
		<35000 RPM: 10 RPM	
Level ext. trigger		High: 2.5 ... 12 V	
		Low: <0.8 V	
Lamp type		Xenon flash	
Flash response time		10 ... 30 µs	
Colour temperature		6500 K	
Flash output		8 joules	
Beam angle		80 °	
Power supply		PCE-DSX 20: 230 V AC 50/60 Hz	
		PCE-DSX 20-US: 110 V AC 50/60 Hz	
Power consumption		240 mA @ 3600 FPM	
Operating conditions		0 ... 50 °C / 32 ... 122 °F; max. 80 % RH	
Dimensions		230 x 110 x 150 mm / 9 x 4.3 x 5.9“	
Weight		approx. 1145 g / 2.5 lbs	


Delivery scope

1 x stroboscope PCE-DSX 20
1 x plug for trigger input / output

- 1 x power cable
- 1 x user manual



System description

Front and back

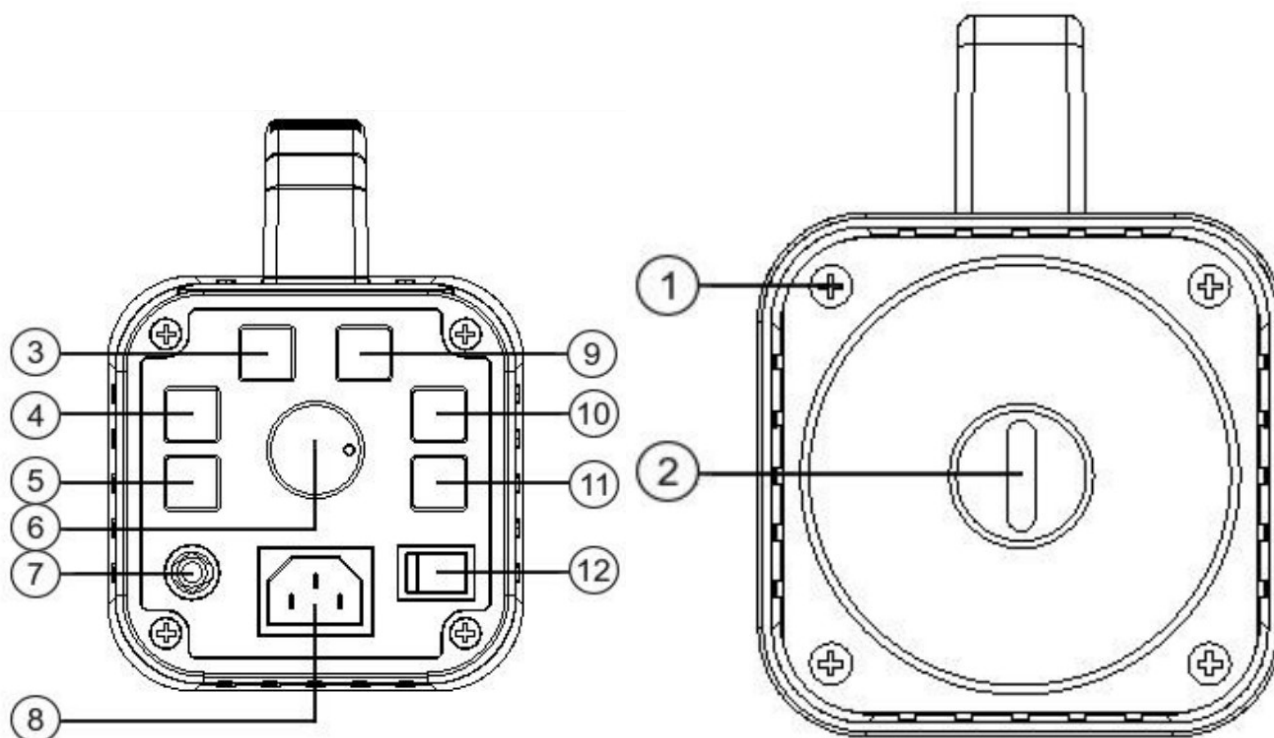

1. Screws protective glass
2. Ext. trigger input / signal output
3. Xenon flash lamp
4. 230 V AC input
5. Internal / external selection key
6. MODE key
7. Key X 2 (doubling)
8. Key +
9. Key $\div 2$ (halving)
10. Key –
11. + / – rotary switch
12. On / off switch

Top and bottom

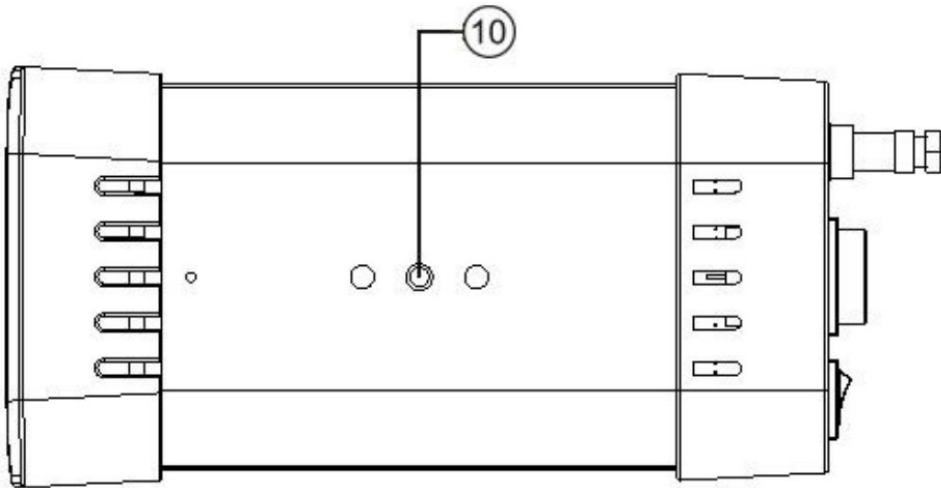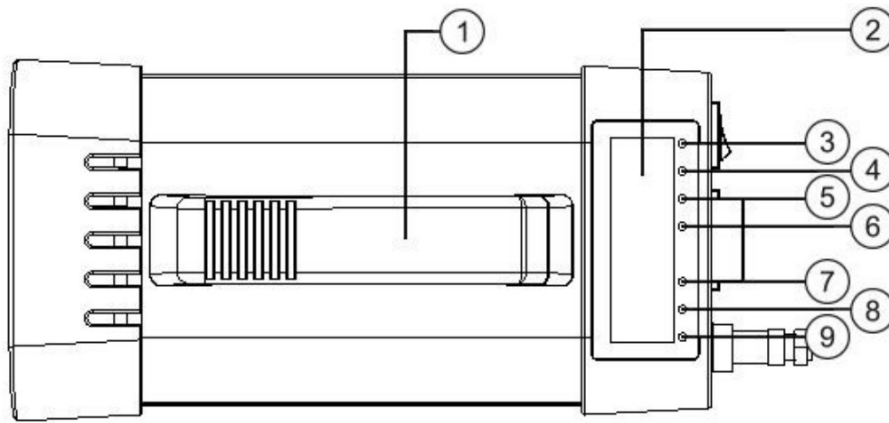

1. Handle
2. HZ mode LED
3. Display
4. Internal mode LED
5. RPM mode LED
6. External mode LED
7. DEG mode LED
8. Trigger mode LED
9. mSec mode LED
10. Tripod thread

Operation

1. Preparation

- Before first use, remove the film from the front protective glass and the display.
- Connect the stroboscope to the power supply using the power cable.
- Make sure that the voltage supply values indicated on the type plate correspond to your mains supply.

2. Set flash frequency

1. Quick adjustment

Use the X 2 and $\div 2$ keys to quickly change the flash frequency. "X 2" doubles the currently set flash frequency. Example based on flash frequency 100/min: 100 \rightarrow X 2 \rightarrow 200 \rightarrow X 2 \rightarrow 400 " $\div 2$ " halves the

currently set flash frequency. Example based on flash frequency 400/min: $400 \rightarrow \div 2 \rightarrow 200 \rightarrow \div 2 \rightarrow 100$

2. Moderate adjustment

Use the + / – rotary switch at the rear side for moderate flash frequency adjustment. Turning to the right increases the flash frequency and turning to the left decreases the flash frequency. When turning slowly, only the last digit of the flash frequency is changed. When turning faster, the tens or hundreds of the flash frequency are changed.

3. Fine-tuning


Use the “+” and “-” keys for fine adjustment. Per keystroke, the last digit of the flash frequency is changed by the value 1. Holding the key changes the tens or hundreds of the flash frequency.

3. Rotational speed measurement

- Place a unique mark on the object to be measured and switch on the machine.
- Switch on the stroboscope via the switch on the back.
- Use the “Int / Ext Signal” key to select the Internal option.
- Aim the light cone at the object to be measured.
- Set a flash frequency that is above the expected speed of the object to be measured.
- Change the flash frequency as described in chapter 5.2 until the mark shows a single standing image. If 2, 3 or more standing marks are visible, reduce the flash frequency until only one standing mark is visible.
- To check, double the flash frequency with the “X 2” key. Now you should see 2 opposite markings. Double the flash frequency again with the “X 2” key. Now you should see 4 standing marks in a cross arrangement.

4. External input

- Connect an external signal cable to the signal input on the rear side. (connector plug is included in the delivery scope)

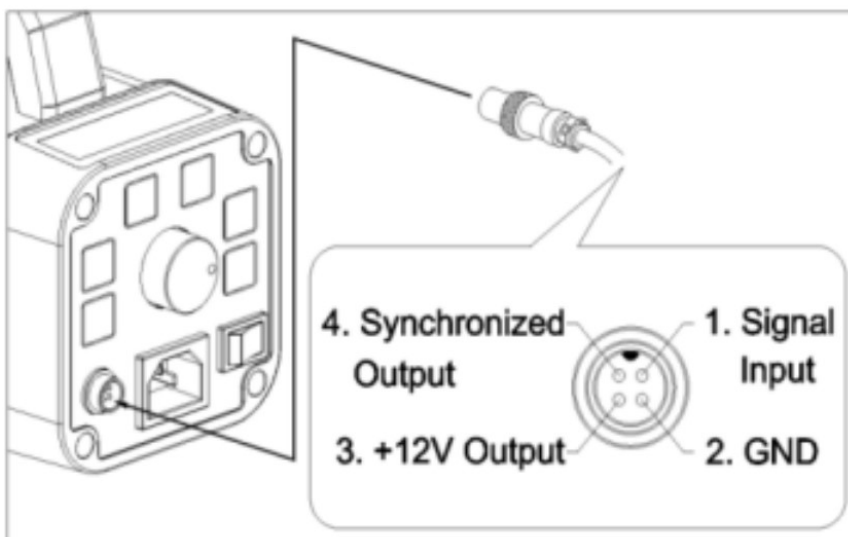

- Switch on the stroboscope via the switch on the back.
- Use the “Int / Ext Signal” key to select the External option.
- Within this setting, it is not possible to adjust the flash frequency on the device. An external trigger signal that is outside the controllable flash frequency of the stroboscope is by flashing of the display and the flash triggering is set


4.1 Rotational speed



- Select speed with the “MODE” key.
- As soon as an external signal is present, the stroboscope flashes in time with the external signal. The corresponding rotational speed is shown on the display.

4.2 Phase shift delay mode (ms/degree)

If the input signal is 360° (see sketch), you can delay the flash by up to 359° . A correct setting is only possible with a stable trigger signal.

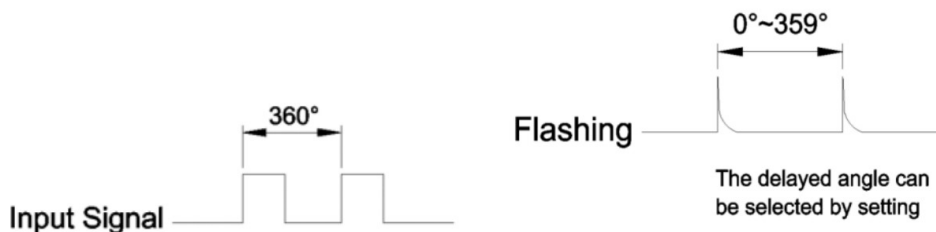


- Use the “MODE” key to select deg or mSec.
- The flash delay is changed with the “+ / – rotary switch”. The flash frequency is maintained but, depending on the setting, triggered with a delay.

4.2.1 Application example

You want to view a rotating object with external triggering. The viewing area or the mark of the rotating object is outside or not perfectly within your field of view. With the phase shift / delay of the flash triggering, you can let the field of view / the marking move optically around the axis of rotation to the ideal position.

Synchronised output / trigger output

The output signal is output via the “Ext. triggering / signal output” socket.

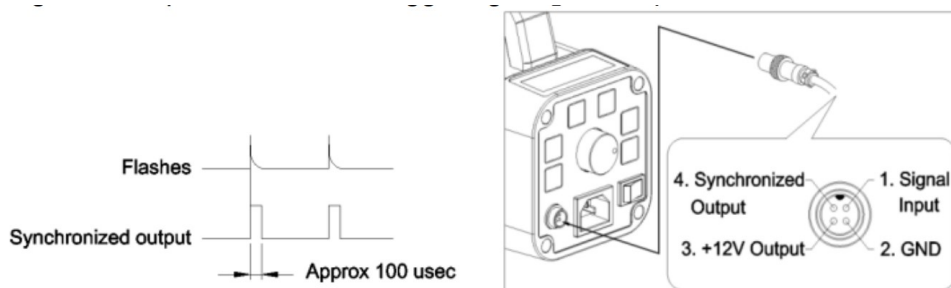

Movement analysis

- Set the stroboscope ideally as described in chapter 5.3.
- Now slowly press the “+ / – rotary switch”. This triggers a slow motion effect that allows you to view the movement more closely.

Notes

1. Duration of use

The maximum time of use of the stroboscope per measurement should not exceed the following times. The pause between measurements should be at least 10 minutes

Flash frequency	Duration
<2000 RPM	4 hours
2001 ... 3600 RPM	2 hours
3601 ... 8000 RPM	60 minutes
>8000 RPM	30 minutes

Replacing the flash lamp

The flash lamp must be replaced if the unit flashes erratically at a set flash frequency of more than 3600. The lamp should be replaced by a qualified technician.

- Switch off the instrument and disconnect it from the power supply.
- Wait 15 minutes to allow all electronic components to discharge.
- Loosen the four screws of the lamp cover on the front side.
- Remove the protective glass and the reflector.
- Detach the flash lamp from the base.
- Insert a new flash lamp.
- Mount the reflector and the protective glass.
- Fasten the screws of the front cover.

Attention!

Do not touch the flash lamp with your fingers. Use protective gloves.

Contact

If you have any questions, suggestions or technical problems, please do not hesitate to contact us. You will find the relevant contact information at the end of this user manual

Disposal

For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose. In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law. For

countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations. If you have any questions, please contact PCE Instruments.

PCE Instruments contact information

Germany

PCE Deutschland GmbH Im Langel 26 D-59872 Meschede Deutschland

Tel.: +49 (0) 2903 976 99 0

Fax: +49 (0) 2903 976 99 29

info@pce-instruments.com

www.pce-instruments.com/deutsch

France PCE Instruments France EURL 23, rue de Strasbourg 67250 Soultz-Sous-Forets France

Telephone: +33 (0) 972 3537 17 Numero de

fax: +33 (0) 972 3537 18

info@pce-france.fr

www.pce-instruments.com/french

Spain

PCE Iberica S.L.

Calle Mayor, 53 02500 Tobarra (Albacete) Espana

Tel. : +34 967 543 548

Fax: +34 967 543 542

info@pce-iberica.es

www.pce-instruments.com/espanol

United Kingdom

PCE Instruments UK Ltd Unit 11 South point Business Park Ensign Way, Southampton Hampshire **United Kingdom**, S031 4RF

Tel: +44 (0) 2380 98703 0

Fax: +44 (0) 2380 98703 9

info@pce-instruments.co.uk

www.pce-instruments.com/english

Italy

PCEItalia s.r.l. Via Pesciatina 878 / B-In terno 6 55010 Loc. Gragnano Capannori (Lucca) Italia

Telefono: +39 0583 975 114

Fax: +39 0583 974 824

info@pce-italia.it

www.pce-instruments.com/italiano

Turkey

PCE Teknik Cihazlan Ltd.Sti. Halkali Merkez Mah. Pehlivan Sok. No.6/C 34303 Kticakcekmece – Istanbul Tlirkiye

Tel: 0212 471 11 47

Faks: 0212 705 53 93

info@pce-cihazlari.com.tr

www.pce-instruments.com/turkish

The Netherlands

PCE Brookhuis B.V. Institutenweg 15 7521 PH Enschede Nederland

Telefoon: +31 (0)53 737 01 92

info@pcebenelux.nl

www.pce-instruments.com/nidutch

United States

of America PCE Americas Inc. 1201 Jupiter Park Drive, Suite 8 Jupiter / Palm Beach 33458 FL USA

Tel: +1 (561) 320-9162

Fax: +1 (561) 320-9176

info@pce-americas.com


www.pce-instruments.com/us



User manuals in various languages can be found by using our product search on: www.pce-instruments.com



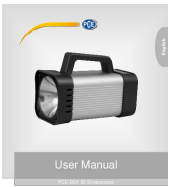


Documents / Resources

	<p>PCE Instruments PCE-DSX 20 Stroboscope [pdf] User Manual PCE-DSX 20, PCE-DSX 20 Stroboscope, Stroboscope</p>
---	---

References

- [France.fr : Actualités, destinations et infos du tourisme en France](#)
- [iberica.es](#)
- [Make an offer on the domain instruments.co.uk - Domains.co.uk](#)
- [Computer Instruments | Home](#)
- [Discover Italy: Official Tourism Website - Italia.it](#)
- [Industrial Measurement Products and Solutions | PCE Instruments](#)
- [PCE Deutschland GmbH Prüfgeräte vom Hersteller | PCE Instruments](#)
- [PCE Brookhuis B.V. | PCE Instruments](#)
- [PCE Americas Inc. : Test Instruments | PCE Instruments](#)
- [PCE Iberica S.L. Instrumentación | PCE Instruments](#)

-  [PCE Instruments France | PCE Instruments](#)
-  [PCE Italia s.r.l. / Strumenti di Misura | PCE Instruments](#)
-  [PCE Teknik Cihazlar Paz. Tic. Ltd.Şti. | PCE Instruments](#)
-  [PCE Americas Inc. : Test Instruments | PCE Instruments](#)
-  [PCE Americas Inc. : Test Instruments | PCE Instruments](#)