

PCE INSTRUMENTS PCE-T 394 Temperature Data Logger User Manual

[Home](#) » [PCE Instruments](#) » PCE INSTRUMENTS PCE-T 394 Temperature Data Logger User Manual 

Contents

- [1 PCE INSTRUMENTS PCE-T 394 Temperature Data Logger](#)
- [2 Product Usage Instructions](#)
- [3 Safety notes](#)
- [4 Specifications](#)
- [5 Device description](#)
- [6 Operating instructions](#)
- [7 Settings](#)
- [8 Calibration](#)
- [9 Maintenance and cleaning](#)
- [10 Contact](#)
- [11 Disposal](#)
- [12 PCE Instruments contact information](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)



PCE INSTRUMENTS PCE-T 394 Temperature Data Logger



Specifications

- K-type thermocouple measurement range
- J-type thermocouple measurement range
- Accuracy
- Resolution
- Data update rate
- Auto power off
- Battery level indicator
- Data logger Power supply
- Operating conditions
- Storage conditions
- Dimensions

Product Usage Instructions

Safety Notes

Please read the manual thoroughly before using the device. Only qualified personnel should operate and repair the device. Any damage or injuries resulting from not following the manual are not covered under warranty.

Delivery Scope

Check the package contents to ensure all listed items are included before using the device.

Device Description

Refer to the manual for detailed information on the keys and display of the device.

Operating Instructions

Follow the provided operating instructions for accurate and efficient use of the temperature data logger.

Settings

Adjust the settings as required for your specific monitoring needs. Refer to the manual for guidance.

Calibration

Perform calibration as outlined in the manual to ensure accurate temperature measurements.

Maintenance and Cleaning

Regularly clean and store the device properly. Ensure the battery is charged when needed.

Contact

If you have any questions or issues, contact our support team for assistance.

Disposal

Properly dispose of the device following local regulations when it reaches the end of its life cycle.

FAQ

• Q: How do I change the battery?

A: Refer to section 8.2 in the manual for instructions on charging the battery.

• Q: Can I calibrate the device myself?

A: Some calibration procedures can be carried out by users, while others require assistance from PCE Instruments. Refer to section 7 in the manual for details.

Safety notes


Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- The device must only be used as described in this instruction manual. If used otherwise, this can cause dangerous situations for the user and damage to the meter.
- The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture.
- Do not expose the device to shocks or strong vibrations.
- The case should only be opened by qualified PCE Instruments personnel.
- Never use the instrument when your hands are wet.
- You must not make any technical changes to the device.
- The appliance should only be cleaned with a damp cloth. Use only pH-neutral cleaner, no abrasives or solvents.
- The device must only be used with accessories from PCE Instruments or equivalent.
- Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- Do not use the instrument in explosive atmospheres.
- The measurement range as stated in the specifications must not be exceeded under any circumstances.
- Non-observance of the safety notes can cause damage to the device and injuries to the user.

We do not assume liability for printing errors or any other mistakes in this manual.

We expressly point to our general guarantee terms which can be found in our general terms of business.

Specifications

K-type thermocouple measurement range	-200 ... 1370 °C -328 ... 2498 °F
J-type thermocouple measurement range	-210 ... 1100 °C -346 ... 2012 °F
Accuracy	±(0.2 % of Rd+1 °C) above -100 °C ±(0.5 % of Rd +2 °C) below -100 °C
Resolution	0.1 °C/°F/K <1000, 1°C/°F/K >1000
Data update rate	500 ms
Auto power off	after 20 minutes of inactivity
Battery level indicator	 flashes when the battery voltage is too low
Data logger	32,000 sets of measured values
Power supply	3.7 V Li-Ion battery
Operating conditions	-10 ... 50 °C / <80 % RH
Storage conditions	-20 ... 50 °C / <80 % RH
Dimensions	Meter: 162 x 88 x 32 mm (6.38 x 3.46 x 1.26 ") Sensor: 102 x 60 x 25 mm (4.01 x 2.36 x 0.98")
Weight	approx. 246 g (0.542 lbs)

- The probe provided with the instrument is a K-type thermocouple and the applicable temperature range is -50 200°C
- To avoid interference with the instrument and causing wrong readings, please do not shake the thermocouple probes during temperature measurement.

Delivery scope


- 1 x temperature data logger PCE-T 394 1 x USB cable
- 1 x PC software
- 1 x service bag
- 1 x user manual

Device description

Key description

1. Thermocouple probes T1~T4
2. LC Display

3. Setup key
4. Enter (confirm) key
5. ON/OFF key
6. Temperature unit and arrow up key
7. Record key
8. MAX/MIN key
9. Channel T1/2 T3/4 & differential value switching key
10. Data hold & arrow down key

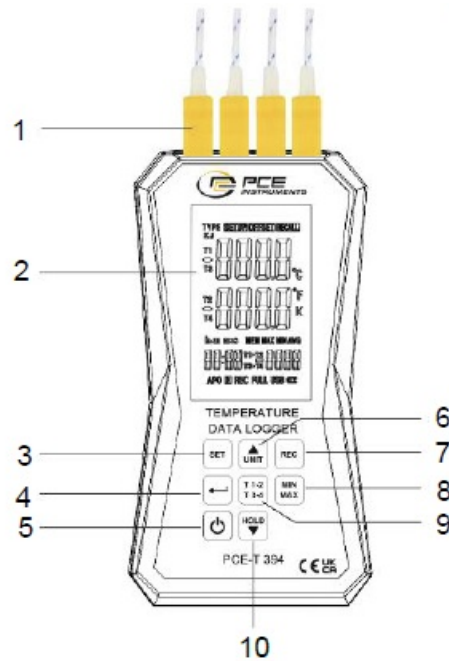


Note:

The micro-USB socket is located at the bottom of the meter.

Display


1. Type of thermocouple (K or J)
2. Enter setup menu
3. Offset indicator
4. Reading data from memory
5. Channel T1/T3 indicator
6. Digital display for channel T1/T3
7. Channel T2/T4 indicator
8. Digital display for channel T2/T4
9. Time setting indication
10. Auto ranging indicator
11. Automatic power off
12. Freeze data
13. Data recording icon
14. Memory-full indicator
15. USB icon

- 16. Battery icon
- 17. Temperature unit
- 18. MAX, MIN & AVG indicator
- 19. T1/T2/T3/T4 reading

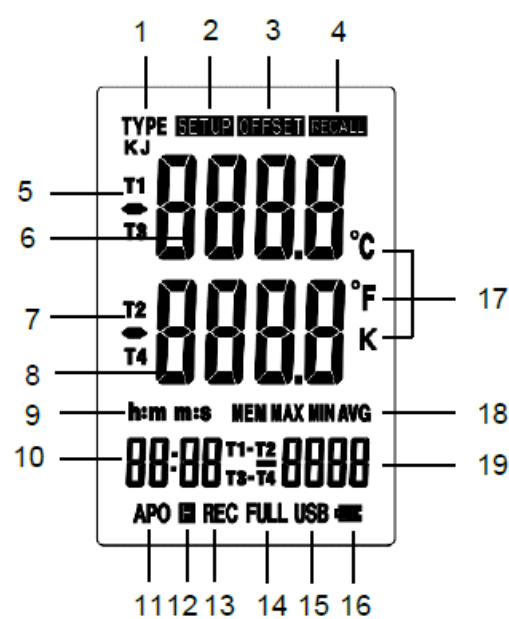






Operating instructions

Switch the meter on/off

Press and release the  key to turn on the temperature data logger and press and hold the same key for 3 seconds to turn it off.

Set the type of thermocouple

Set the type of thermocouple you want to use. As default, the K-type thermocouple is used.

- Press and hold the  key for 3 s to enter setup mode, then the selection window for the thermocouple types (K or J) appears.
- Press the  key, the type of thermocouple icon will flash on LCD.
- Press the  or  key to select the correct type of thermocouple and press the key to confirm .

Connect the probe to meter


Connect the correct thermocouple probe to the T1, T2, T3, T4 input jacks at the top of the temperature data logger.



The North American ANSI colour codes of the thermocouples are:

Type	K	J
Color	Yellow	Black


 

Measurement

The first reading will be displayed in about 1 second. It will display"—" if the thermocouple probe is not plugged into any one channel. Leave the temperature data logger in the environment to be tested for some time to get stable readings.

Press and release the  key to select the temperature unit you prefer.

Press the  key. The readings of the channels T3 & T4 will be displayed as the main reading and the DIF value (T3-T4) will be displayed as the sub-reading. When you press the  key again, the readings of the channels T1 & T2 will be displayed as the main reading and the DIF value (T1-T2) will be displayed as the sub-reading.


 

MAX, MIN & AVG value

- Press the  key once to enter MAX/MIN/AVG mode. The maximum value, minimum value (MIN) and average value (AVG) of T1 will appear successively.
- Press the  key to switch the MAX/MIN/AVG value of T1-T2 and T3-T4 successively.
- Press the  key for 3 seconds until the MAX & MIN icon disappears to exit MAX/MIN mode.

Note:

The functions of the  key and Auto Power Off will be disabled when MAX/MIN mode is active.


Hold data

- Press the  key. The digital reading is held and the HOLD icon appears on the LCD.
- Press the  key to switch between the readings of T1 & T2 or T3 & T4 at the main display and the values of T1-T2 or T3-T4 at the sub-display.
- Press the  key again to return to normal operation.

Recording mode

The PCE-T 394 has a data logger function. It records max. 32000 groups of data. The recorded data can be read out via a PC.

1. Start the recording: As default, recording is started by pressing a key. You can change the start mode setting via the software. Please refer to the PCE software manual for details.
2. Set the interval: Before starting to record, set the sampling interval of the PCE-T 394 as described under 6.5 Setting the interval for data .

Press the  key to start recording, press the key again for 3 seconds to stop recording.

4. When the set number of records is reached, a FULL icon will be displayed at the bottom of the LCD screen.
5. Data can be deleted automatically by re-setting the recording elements.
6. Read out the data: After recording, you can connect the data logger to a PC via the USB port and with the PCE software, you can read out and analyse the data accordingly. Please refer to the PCE software manual for details.

Note:

When the temperature data logger is at low battery, the recording function does not work and data cannot be deleted. If you need to record for a long time, fully charge the battery or use the AC/DC power adaptor for power supply.


Note:

When the instrument is in recording mode, unplug the probe and the LCD screen will display ERR.


Data recording and software installation

This temperature data logger is able to record data in its internal memory. Before you can record data, you need to install the PCE software on your PC. The latest version of this software and detailed instructions on how to install and use it can be found at <https://www.pce-instruments.com>. A CD with the software is included for your convenience but we recommend downloading the latest version at the PCE Instruments website. To set up the meter for recording, connect it to a PC via the micro USB port.




Auto Power Off


The APO function is set to ON by default. To turn off the APO function, press the  key lightly. To extend the battery life, the temperature data logger will automatically turn off after about 10 minutes when not in use. In recording mode or when the meter is connected via USB, the APO function is automatically disabled until the memory is full or the set number of records is reached.




Settings

With the  key, you can set the time and date, select the type of thermocouple and change the recording interval and compensation.

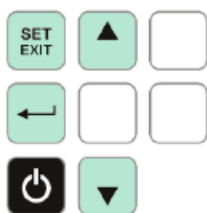

Enter and exit setup


- Press and hold the  key for about 3 s to enter the setup menu. The SETUP icon will appear
- on the LCD. Press and hold the  or  key for about 3 s to exit the setup menu. Under setup, the button functions are as below:
-




 
 

 
Press the  or  key to select the options and then press the  key to confirm. The setup function is not available in MAX/MIN/AVG mode.

Set the type of thermocouple probe


 
 

 
- Press and hold the  key for 3 s to enter setup mode, then the selection window for the type of thermocouple (K or J) appears.
- Press the  key. The type of thermocouple icon will flash on LCD.

- Press the ▲ or ▼ key to select the correct type of thermocouple and press  to confirm

Set the date



1. Enter setup mode and press ▲ or ▼ until DATE and P P P P until and are displayed.
2. Press  to set the year. “2018” will flash at the bottom, on the left.
3. Press ▲ or ▼ until the year display is correct, then press  to confirm.
4. Press ▼ again. DATE and M M are shown on the main display. Press the  key to select the month setting. The number will flash at the bottom, on the left.
5. Press ▲ or ▼ to change the month, then press to confirm.
6. Press the ▼ key again. D D will be shown on main display. Press  to select the date setting. The number will flash at the bottom, on the left.
7. Press ▲ or ▼ to change the date. Then press  to confirm.

Set the time

1. Enter setup mode and press the ▲ or ▼ key to display TIME and H H .
2. Press the  key to select the hour. The number will flash at the bottom, on the left.
3. Press ▲ or ▼ to change the hour and press  to confirm.
4. Press again. TIME and M M and are shown on the main display. Press  the button to select the minute. The number will flash at the bottom, on the left.
5. Press ▲ or ▼ to change the minute and then press the key to confirm.
6. Press the key again S S , will be shown on the main display. Press the  key to select second setting. The number will flash at the bottom, on the left.
7. Press ▲ or ▼ to change the second and then press  to confirm.






 
Setting the interval for data logging

The interval for data logging is the interval time for saving data. The following intervals are preset. You can select the most suitable interval for your application: 1 s, 2 s, 5 s, 10 s, 20 s, 30 s, 1 min, 2 min, 5 min, 10 min, 30 min, 1 h, 2 h, 6 h, 12 h

1. Press ▲ or ▼ key until Intv is displayed on the LCD.
2. Press  key. The interval selection window will appear on the LCD.
3. Press the ▲ or ▼ key until the correct interval you need is displayed. Then press  to confirm.

Setting the compensation

You can adjust the reading of the PCE-T 394 to compensate for some deviation of the thermocouple. The value you can set as offset is limited to a maximum value. You can set individual compensation values for T1, T2, T3 and T4.

1. Enter setup mode and press the  or  key until OFFSET appears on the LCD.
2. Press the  key to show the reading and compensation value (flashing). The compensated reading of T1 is displayed on the main display and the compensation value is displayed on the sub-display.
3. Press  and  to adjust the compensation value until the reading is correct and then press  to confirm.
4. Repeat step 2-3 to change the setting of the compensation value of T2, T3 & T4.
5. Remember to set the compensation value into 0.0 again if there is no need of the compensation value.

Note:

The OFFSET icon will disappear if there is no compensation on T1, T2, T3 or T4.

Calibration

To ensure the accuracy of measurement of the temperature data logger, it is suggested to calibrate it regularly (usually once a year). The calibration should be done by professionals, according to the procedure described in this manual.

Note:




 



The instrument has been calibrated before shipment.

Preparation for calibration

Before calibration, please prepare the test environment as below:

 1. The required temperature of the shielded calibration room is $+23\text{ }^{\circ}\text{C} \pm 0.3\text{ }^{\circ}\text{C}$ ($+73.4\text{ }^{\circ}\text{F} \pm 0.5\text{ }^{\circ}\text{F}$)
2. In order to achieve a stable reference room temperature point, the PCE-T 394 must be placed in the calibration room for more than one hour before the calibration.
3. In order to make a zero point calibration, two iron or copper thermocouple connectors are also required (short connect the positive and negative inputs).






Cold-junction compensation calibration

1. Enter setup mode and press the  and  keys until the  icon is displayed and at the same time, the inner NTC temperature value of the cold-junction compensation temperature is displayed.
2. Press the  key to enter calibration mode.
3. Press  and  until the inner NTC temperature value is the same as the room temperature and then press the  key to confirm.

AD value calibration (only to be carried out by PCE Instruments)

 1. Plug the thermocouple connectors into the T1 and T3 connections so that the positive and negative poles are

short circuited.

2. Press both the  and the  key at the same time. At this time, the **Ad** and **CAL** icons (flash) on the LCD.
3. Press the  key to calibrate the AD value. If you need to cancel, press and hold the  or  key.



Warning:

This calibration must only be carried out by PCE Instruments.

Maintenance and cleaning

Cleaning and storage

1. The white plastic sensor dome should be cleaned with a damp, soft cloth, if necessary.
2. Store the temperature data logger in an area with moderate temperature and relative humidity.

Charging the battery

When the battery power is insufficient, the battery icon appears on the LCD and flashes. Use the DC 5V power adaptor to connect to the micro USB charging port at the bottom of the meter. The battery icon on the LCD indicates that the battery is charging and will disappear when the battery is fully charged.

Contact

If you have any questions, suggestions or technical problems, please do not hesitate to contact us. You will find the relevant contact information at the end of this user manual.

Disposal

For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose.

In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law. For countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations. If you have any questions, please contact PCE Instruments.



www.pce-instruments.com

PCE Instruments contact information

Germany	France	Spain
PCE Deutschland GmbH	PCE Instruments France EURL	PCE Ibérica S.L.
Im Langel 26	23, rue de Strasbourg	Calle Mula, 8
D-59872 Meschede	67250 Soultz-Sous-Forets	02500 Tobarra (Albacete)
Deutschland	France	España
Tel.: +49 (0) 2903 976 99 0	Téléphone: +33 (0) 972 3537 17	Tel. : +34 967 543 548
Fax: +49 (0) 2903 976 99 29	Numéro de fax: +33 (0) 972 3537 18	Fax: +34 967 543 542
info@pce-instruments.com	info@pce-france.fr	info@pce-iberica.es
www.pce-instruments.com/deutsch	www.pce-instruments.com/french	www.pce-instruments.com/espanol
United Kingdom	Italy	Turkey
PCE Instruments UK Ltd	PCE Italia s.r.l.	PCE Teknik Cihazları Ltd.Şti.
Trafford House	Via Pesciatina 878 / B-Interno 6	Halkalı Merkez Mah.
Chester Rd, Old Trafford	55010 Loc. Gragnano	Pehlivan Sok. No.6/C
Manchester M32 0RS	Capannori (Lucca)	34303 Küçükçekmece – İstanbul
United Kingdom	Italia	Türkiye
Tel: +44 (0) 161 464902 0	Telefono: +39 0583 975 114	Tel: 0212 471 11 47
Fax: +44 (0) 161 464902 9	Fax: +39 0583 974 824	Faks: 0212 705 53 93
info@pce-instruments.co.uk	info@pce-italia.it	info@pce-cihazlari.com.tr
www.pce-instruments.com/english	www.pce-instruments.com/italiano	www.pce-instruments.com/turkish
The Netherlands	United States of America	Denmark
PCE Brookhuis B.V.	PCE Americas Inc.	PCE Instruments Denmark ApS
Institutenweg 15	1201 Jupiter Park Drive, Suite 8	Birk Centerpark 40
7521 PH Enschede	Jupiter / Palm Beach	7400 Herning
Nederland	33458 FL	Denmark
Telefoon: +31 (0)53 737 01 92	USA	Tel.: +45 70 30 53 08
info@pcebenelux.nl	Tel: +1 561-320-9162	kontakt@pce-instruments.com
www.pce-instruments.com/dutch	Fax: +1 561-320-9176 info@pce-americas.com www.pce-instruments.com/us	www.pce-instruments.com/dansk



[PCE INSTRUMENTS PCE-T 394 Temperature Data Logger](#) [pdf] User Manual PCE-T 394 Temperature Data Logger, PCE-T 394, Temperature Data Logger, Data Logger, Logger

References

- [🇹🇷 Anasayfa - Cihazları](#)
- [🇫🇷 France.fr : Explore France and its wonders - Explore France](#)
- [🌐 iberica.es](#)
- [🇬🇧 Make an offer on the domain instruments.co.uk - Domains.co.uk](#)
- [🇬🇧 Computer Instruments | Home](#)
- [🇮🇹 Discover Italy: Official Tourism Website - Italia.it](#)
- [🇬🇧 pce-instruments.com](#)
- [🇬🇧 pce-instruments.com](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.