



PCE Instruments PCE-VE Series Industrial Borescope User Manual

[Home](#) » [PCE Instruments](#) » PCE Instruments PCE-VE Series Industrial Borescope User Manual 

Contents

- [1 PCE Instruments PCE-VE Series Industrial Borescope](#)
- [2 Safety notes](#)
- [3 Specifications](#)
- [4 Delivery scope](#)
- [5 Device description](#)
- [6 Function modes](#)
- [7 Key assignment](#)
- [8 QR SCAN](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



PCE Instruments PCE-VE Series Industrial Borescope



Safety notes

Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- The device must only be used as described in this instruction manual. If used otherwise, this can cause dangerous situations for the user and damage to the meter.
- The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture.
- Do not expose the device to shocks or strong vibrations.
- The case should only be opened by qualified PCE Instruments personnel.
- Never use the instrument when your hands are wet.
- You must not make any technical changes to the device.
- The appliance should only be cleaned with a damp cloth. Use only pH-neutral cleaner, no abrasives or solvents.
- The device must only be used with accessories from PCE Instruments or equivalent.
- Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- Do not use the instrument in explosive atmospheres.
- The measurement range as stated in the specifications must not be exceeded under any circumstances.
- Non-observance of the safety notes can cause damage to the device and injuries to the user.

We do not assume liability for printing errors or any other mistakes in this manual. We expressly point to our general guarantee terms which can be found in our general terms of business. If you have any questions please contact PCE Instruments. The contact details can be found at the end of this manual.

Specifications


Technical data of the endoscope PCE-VE 800N4		PCE-VE 400N4	PCE-VE 900N4
Cable / head diameter	2.8 mm	4 mm	2 mm
Camera head movement direction	4-way		
Camera head length	8 mm	18 mm	7 mm
Bending radius	7 mm	8 mm	6 mm
Camera head material	Titanium alloy		
Camera lens material	Glass		
Viewing angle	80 °	90 °	80 °

Viewing direction	0 °		
Focus area	5 ... 50 mm	10 ... 100 mm	3 ... 30 mm
Image sensor	1/18" colour	1/9" colour	1/18" colour
Resolution	160000 pixels	1000000 pixels	160000 pixels
Frame rate	30 Hz		
Length borescope cable	1.5 m		1.2 m
Material borescope cable	Tungsten		
Protection class borescope cable	IP58	IP67	IP58
Operating conditions	Main unit: 0 ... 45 °C / 15 ... 90 % RH Cable: 0 ... 60 °C		
Display	5" 16:9 LCD		
Interface	Micro USB		
Video output	HDMI		
Memory	SDHC memory card up to 64 GB		
Power supply	Li-Ion battery 3350 mAh Mains adaptor 5 V		
Dimensions	33.5 x 14.5 x 8 cm		
Weight	approx. 700 g		

Delivery scope

- 1x borescope PCE-VE 800N4 / PCE-VE 400N4 / PCE-VE 900N4 1x mains adaptor incl. charger
- 1x card reader
- 1x memory card
- 2x Li-Ion battery set
- 1x HDMI cable 1x cleaning set
- 1x user manual
- 1x carrying case

Device description

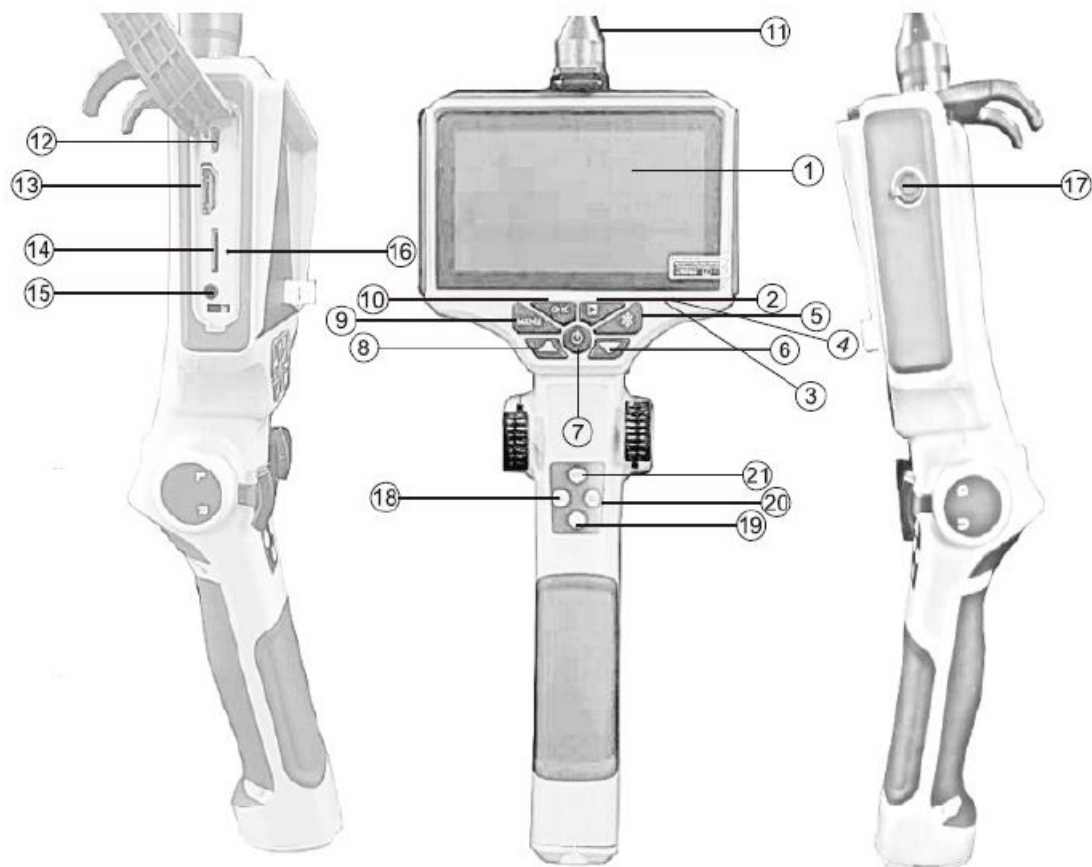











1. Display
2. Image memory
3. Charging indicator
4. Operating display
5. Freeze key (freeze image)
6. DOWN key
7. ON/OFF key
8. UP key
9. Menu key
10. OK key
11. Borescope cable
12. Micro USB socket (data transfer to PC)
13. HDMI socket (e. g. for external monitor)
14. SD card slot
15. Charging socket DC in
16. Reset key
17. Headphone jack
18. Video recording key
19. Illumination key
20. Image capture key
21. Display brightness

Function modes

- The keys have different functions depending on which mode you are in.
- These are the 4 different modes you can be in:











Mode	Function
Recording	Display shows camera image and optional setting options.
Playback	Images and videos on the microSD card are displayed.
Toolbar	The toolbar is visible at the top of the screen in recording mode. Settings such as brightness, zoom, etc. can be changed here.
Menu	Contains all system settings.

Key assignment

Key	Recording	Playback	Toolbar	Menu
 Up/Down	-	Switch to previous / next image	Change the setting or option	Previous / next menu item
 Menu	Open menu	Open menu	Open menu	-
 Ok	Move to the next setting in the toolbar	Confirm deletion	Change in the settings	Confirm selection
 Play	Open record memory	Back to recording mode	Open record memory	-
 Freeze	Freeze image	Delete record	Freeze image	Back to recording mode
 Off/On	Switch off the instrument	Switch off the instrument	Switch off the instrument	Switch off the instrument
 LED	Adjust the brightness of the LED	-	Adjust the brightness of the LED	
 Video	Start/stop video recording	-	Start/stop video recording	-
 Image	Image recording	-	Image recording	-
 Brightness	Image brightness	-	Image brightness	-

Note: “-” means no function of the key in the respective function mode.

Display icons

Icon	Description
	Brightness (5 levels)
	Exposure (-2, -1, 0, +1, +2)
	Image rotation 90
	Colour filter (black and white, negative)
	White balance
	Freeze image
	Full screen
	Zoom
	Borescope is ready for image recording
	Borescope records a video

Switch the instrument on/off

Press and hold the off/on key for about 2 seconds to switch the instrument on or off.

Menu

- In recording mode, press the menu key once to open the menu. Use the up/down keys to select the desired setting parameter.
- You can close the menu with the freeze key.
- The menu contains the following system settings:

Language

- Here you can choose between German, English, Chinese and Japanese. Confirm your setting with the OK key.

Date/time

- Setting the date and time and the display format
- Press the freeze key to go to the next setting option. Confirm your entry with the Ok key.

Save power

- Here you can set when the instrument should switch off automatically.
- You can select Off, 1 min, 3 min and 5 min. Confirm your setting with the OK key.

Print date

- You can set whether only the date, date and time or nothing is saved on the image.
- Confirm your setting with the OK key.

Format

- Here you can format the microSD card in the borescope.
- All data on the card will be irrevocably deleted. Confirm your setting with the OK key.

Reset everything

To reset the instruments to factory settings, select “Yes” in this menu item. Selecting “No” takes you back to the menu. If the instrument can no longer be operated, you can also use the reset key on the side of the instrument.

FW update

If a firmware update is available for the instrument, it can be installed via this menu item.

Rechargeable batteries

The batteries can be charged within the unit with the supplied mains adaptor, as well as with the external charger when removed.

Remove batteries

To remove the batteries, proceed as follows:

1. Loosen the screw of the bottom cover of the instrument.
2. Pull the battery unit out of the borescope.
3. Open the battery compartment by pulling off the cover.
4. Replace the batteries and reassemble the unit in reverse order. Make sure that the polarity is correct!



External charging

After removing the batteries from the instrument, place them in the charger. Make sure that the polarity is correct! As soon as the batteries are fully charged, you can re-insert them into the instrument.

Note: The batteries need approx. 8 hours to fully charge.

Contact

If you have any questions, suggestions or technical problems, please do not hesitate to contact us. You will find the relevant contact information at the end of this user manual.

Disposal

- For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose.
- In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law.
- For countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations.
- If you have any questions, please contact PCE Instruments.

QR SCAN



User manuals in various languages can be found by using our product search on: www.pce-instruments.com

PCE Instruments' contact information

Germany

- **Address:** PCE Deutschland GmbH Im Langel 4 D-59872 Meschede Deutschland
- **Tel.:** +49 (0) 2903 976 99 0
- **Fax:** +49 (0) 2903 976 99 29
- info@pce-instruments.com
- www.pce-instruments.com/deutsch

United Kingdom

PCE Instruments UK Ltd

- **Address:** Unit 11 Southpoint Business Park Ensign Way, Southampton Hampshire United Kingdom, SO31 4RF
- **Tel:** +44 (0) 2380 98703 0
- **Fax:** +44 (0) 2380 98703 9
- info@pce-instruments.co.uk

- www.pce-instruments.com/english

The Netherlands


PCE Brookhuis B.V.

- **Address:** Institutenweg 15 7521 PH Enschede Nederland
- **Telefoon:** +31 (0)53 737 01 92
- info@pcebenelux.nl
- www.pce-instruments.com/dutch

United States of America




- **ADDRESS:** PCE Americas Inc.1201 Jupiter Park Drive, Suite 8 Jupiter / Palm Beach 33458 FL
- **USA**
- **Tel:** +1 (561) 320-9162
- **Fax:** +1 (561) 320-9176
- info@pce-americas.com
- www.pce-instruments.com/us

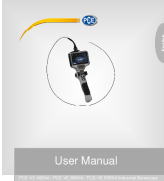Documents / Resources

	<p>PCE Instruments PCE-VE Series Industrial Borescope [pdf] User Manual PCE-VE 400N4, PCE-VE 800N4, PCE-VE 900N4, PCE-VE Series Industrial Borescope, PCE-V E Series Borescope, Industrial Borescope, Borescope</p>
---	---

References

- [France.fr : Actualités, destinations et infos du tourisme en France](http://france.fr)
- iberica.es
- [instruments.cn - The domain is available for purchase](http://instruments.cn)
- [Make an offer on the domain instruments.co.uk - Domains.co.uk](http://domains.co.uk)
- [Computer Instruments | Home](http://computerinstruments.com)
- [Discover Italy: Official Tourism Website - Italia.it](http://italia.it)
- pce-instruments.cn
- [Industrial Measurement Products and Solutions | PCE Instruments](#)
- [PCE Deutschland GmbH Prüfgeräte vom Hersteller | PCE Instruments](#)
- [PCE Brookhuis B.V. | PCE Instruments](#)
- [PCE Americas Inc. : Test Instruments | PCE Instruments](#)
- [PCE Iberica S.L. Instrumentación | PCE Instruments](#)
- [PCE Instruments France | PCE Instruments](#)
- [PCE Italia s.r.l. / Strumenti di Misura | PCE Instruments](#)

-  [PCE Teknik Cihazlar Paz. Tic. Ltd.Şti. | PCE Instruments](#)
-  [PCE Americas Inc. : Test Instruments | PCE Instruments](#)
-  [PCE Americas Inc. : Test Instruments | PCE Instruments](#)

Manuals+.