



[Home](#) » [PDi Communication](#) » **PDi Communication PD108-420 TV Programming Remote Control**
Instruction Manual 

Contents [[hide](#)]

- [1 PDi Communication PD108-420 TV Programming Remote Control](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 INTRODUCTION](#)
- [5 ARROW KEYS](#)
- [6 Troubleshooting](#)
- [7 OVERVIEW](#)
- [8 CUSTOMER SERVICE](#)
- [9 Frequently Asked Questions](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



PDi Communication PD108-420 TV Programming Remote Control



Specifications

- **Model Number:** PD108-420
- **Type:** TV Programming Remote Control
- **Manufacturer:** PDi Communication Systems, Inc.
- **Compatibility:** Works with PDI's smart television models
- **Features:** IR control, setup functionalities, key mapping for newer TV models

Product Usage Instructions

Power On/Off

- Press the POWER button to turn the TV on or off.

Volume Control

- Use the VOL buttons to raise or lower the volume. These buttons can also be used to navigate through programming menus.

Channel Selection

- Press the CH buttons to select the next channel. The number buttons can be used to directly enter channels. The DASH button is used for the second part of a digital channel.

INTRODUCTION

- The PD108-420 programming remote provides IR control and setup of PDI's smart television models.
- It will operate any PDI TV regardless of the TV's Bed A/B/C/D setting. Because this remote has the SETUP button to gain full access to the TV's menus, it should not be given to patients.
- PDI offers other remotes designed for patient use.

ARROW KEYS

- Newer model TVs (after 2018) may not respond to the arrow keys. If that happens, use the following key mapping.
- **UPDATE** to move right
- **MODE** to move left
- **INDEX** to move up
- **MIX** to move down
- PDI offers an overlay for the PD108-420 remote that indicates the key mapping used by newer model TVs. The overlay part number is PD227-298.
- For newer TVs, PDI recommends using the PD108-520 remote, which contains separate arrow, volume and channel keys.



Troubleshooting

- Install two high-quality 1.5V “AAA” alkaline batteries. Don’t mix old batteries with new batteries.
- Remove batteries when you won’t use the remote for a long time. Liquid leakage from old batteries may cause remote failure.
- Make sure there are no objects between the remote control and the TV’s sensor that might block the signal.
- Don’t place the remote control near a heater or in a damp place. A strong impact on the remote control may cause operational failure.
- The signal from the remote control may be disturbed by sunlight or other bright lights. In this case, darken the room or move the TV.

OVERVIEW

1. POWER button

- Turns the TV on or off

2. **MUTE button**
 - Turns the sound on or off
3. **SETUP button**
 - Access programming menus
4. **TV/AV button**
 - Selects enabled external inputs or TV
5. **CH LIST button**
 - Display a list of channels programmed into the TV
6. **TV/FM button**
 - Switch between TV and FM Radio sources
7. **SLEEP button**
 - Sets the sleep timer
8. **LAST button**
 - Return to the previously viewed channel
9. **VOL ◀ ▶ buttons**
 - Raises or lowers volume. Also used to navigate programming menus.
10. **OK button**
 - Confirms the current channel selection
11. **CH ▲ ▼ buttons**
 - Selects the next channel. Also used to navigate programming menus.
12. **ARC button**
 - Changes the aspect ratio.
13. **CC button**
 - Cycles through Closed caption choices
14. **PSM button**
 - Adjust the sound setting for the content type
15. **SAP button**
 - Adjust audio mode
16. **SSM button**
 - Adjust sound settings for the content type
17. **Number buttons**
 - Use to directly enter channels
18. **DASH button**
 - Use to enter the second part of a digital channel

19. Teletext buttons

- Navigates teletext displays.
- Teletext is not actively used in the USA



CUSTOMER SERVICE

- **PDi Communication Systems, Inc. 40 Greenwood Lane Springboro, Ohio 45066
USA PH 18006289870**
- **FX 9377435664**

Frequently Asked Questions


Can this remote control be used with all PDI TV models?

Yes, the PD108-420 remote can operate any PDI TV regardless of the TV's Bed A/B/C/D setting.

What should I do if the arrow keys do not respond on newer model TVs?

In case the arrow keys do not work on newer model TVs, use the key mapping provided in the user manual. You can also consider using the overlay part number PD227-298 for assistance.

Documents / Resources

	<p>PDi Communication PD108-420 TV Programming Remote Control [pdf] In struction Manual</p> <p>PD108-420, PD108-520, PD108-420 TV Programming Remote Control, T V Programming Remote Control, Programming Remote Control, Remote Control</p>
---	---

References

- [User Manual](#)

■ PDi Communication

◆ PD108-420, PD108-420 TV Programming Remote Control, PD108-520, PDi Communication, Programming Remote Control, Remote Control, TV Programming Remote Control

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.