



## PDP 049-023 Rematch Wired Controller User Guide

[Home](#) » [PDP](#) » PDP 049-023 Rematch Wired Controller User Guide 



**REMATCH™ Wired Controller for Xbox**  
**Quick Start Guide**

### Contents

- [1 049-023 Rematch Wired Controller](#)
- [2 Documents / Resources](#)
  - [2.1 References](#)

### 049-023 Rematch Wired Controller



For:

Xbox Series X|S

Xbox One

Windows 10/11

Xbox is a trademark of Microsoft. © 2024 Microsoft

#### 1. Initial Setup

Plug the USB-C end of the cable into the top of the controller, and the USB side into your console or PC. The light above the Xbox logo will appear to indicate it is connected.



 
## 2. Mute Microphone

Press the function button twice to mute your microphone.




## 3. Control Volume

While holding down the function button, press D-Pad +Up/-Down to adjust game volume.

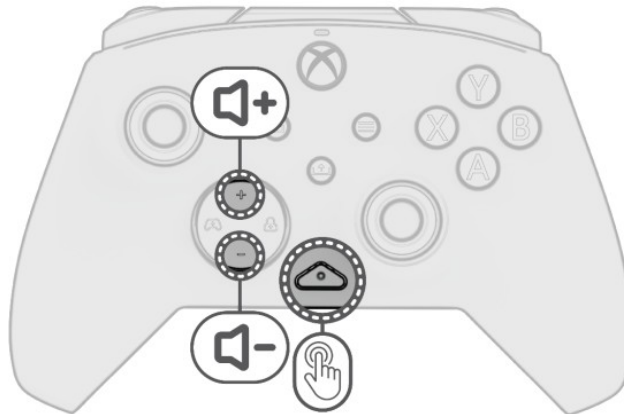


## 4. Game/Chat Balance

 While holding down the function button, press D-Pad Left/Right to adjust game/chat balance.

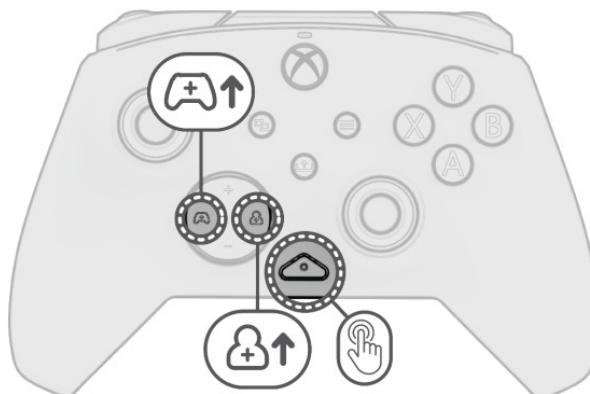

## 5. Program Back Buttons

 - A. While holding down the function button, press the back button you would like to map a function to, and the function button LED will start flashing.
- B. Press any button you would like mapped, and the function button LED will flash 3 times indicating a successfully mapped function.

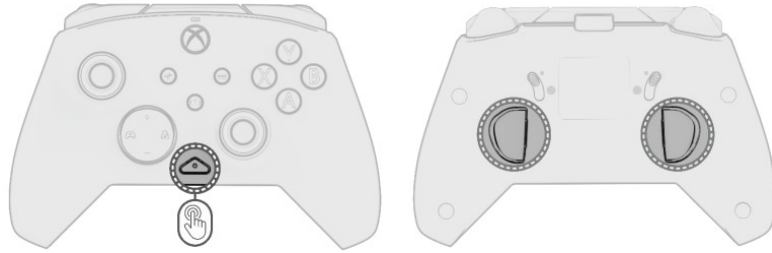

## 6. Hair reas Mode

Hair trigger feature is a highly sought-after feature that allows faster trigger pulls and adds advantages to your gaming experience. PDP uses Hall switch true digital hair triggers for a rapid and precise trigger response.



To enable hair trigger mode:


- A. Toggle the slider buttons on the back of the controller upward to set the trigger buttons to hair-trigger mode.
- B. Toggle the slider buttons on the back of the controller downward to set the trigger buttons back to full-distance mode.

\*REAL hair triggers: digital Hall effect hair triggers

## 7. PDP Control Hub

To customize your controller further, download the free PDP Control Hub App from the Windows Store on your PC or Xbox. You can use it to re-map buttons, run diagnostics, recalibrate analog sticks and triggers, and much more.



	<p><a href="#">PDP 049-023 Rematch Wired Controller</a> [pdf] User Guide</p> <p>049-023, 049-023 Rematch Wired Controller, Rematch Wired Controller, Wired Controller, Controller</p>
--	---

## References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.