



PDP 500-202 Rematch Wireless Controller For Nintendo Switch User Guide

[Home](#) » [PDP](#) » PDP 500-202 Rematch Wireless Controller For Nintendo Switch User Guide 

PDP 500-202 Rematch Wireless Controller For Nintendo Switch User Guide




NOTICE: Before using the controller, we recommend fully charging it as it will only have an hour or two of battery life out of the box.

Contents

- [1 Pairing the Controller](#)
- [2 Re-connecting the Controller](#)
- [3 Charging the Controller](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)


Pairing the Controller

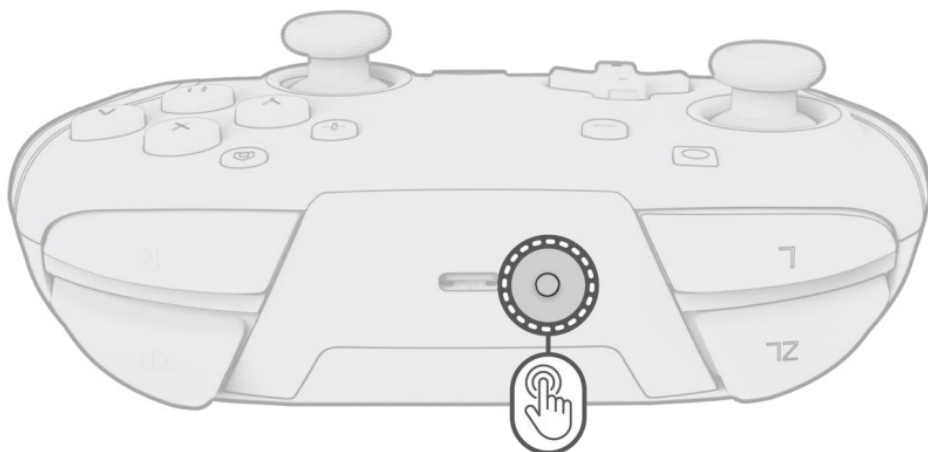

- A.** Turn on your Nintendo Switch™ device and press any button on the controller.
- B.** If your controller does not automatically connect, it will need to be paired with the device.
- C.** Using the Joy-Con™ controllers, navigate to Controllers > Change Grip/Order.
- D.** Now, using your controller, press and hold the sync button (at the top of the controller by the charging port) for 3 seconds until it pairs and the player indicator light at the bottom is solid.

Tip: To unpair the controller from the Nintendo Switch, hold down the sync button (located at the top of the controller) for at least 1 second.

Re-connecting the Controller

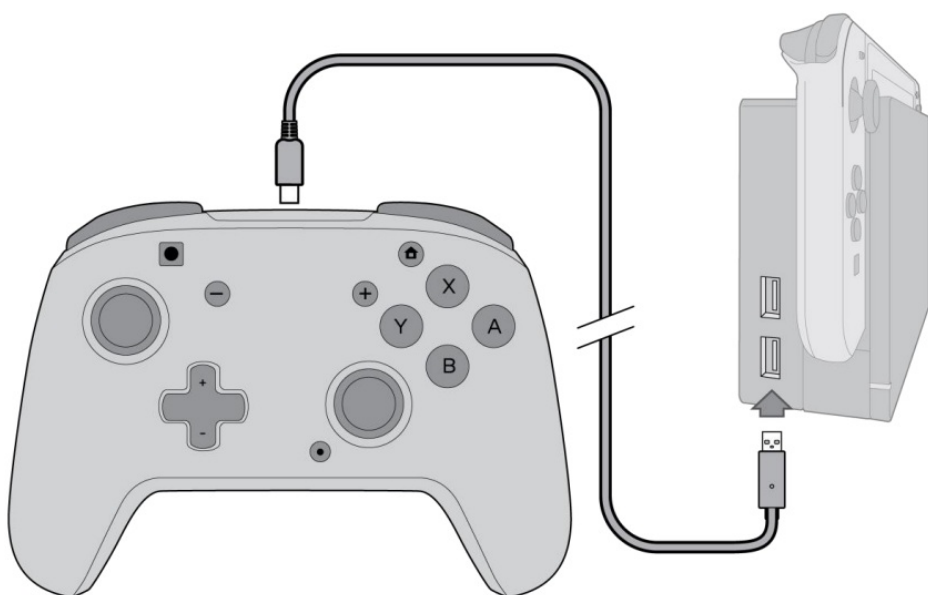

- A.** If the controller is not connecting with the device, but has already been paired, simply go into Controllers > Change Grip/Order.
 - B.** When prompted, press L and R on your controller to connect.
- Tip:** You can also press and hold the “Home” button to wake up the controller and Nintendo Switch™ device.

Charging the Controller



- A. To program, hold the “function” button and press the back button you’d like to map a control to.
- B. Once the “function” button LED is flashing, press any button on the controller to map that button’s function to the back. The LED will blink quickly 3 times, indicating successful programming.
- C. To clear a mapped function or disable the back buttons completely, hold down the “function” button and double press any back button.

For:
Nintendo Switch
Nintendo Switch – OLED Model
Nintendo Switch is a trademark of Nintendo. © 2023 Nintendo



Documents / Resources

	<p>PDP 500-202 Rematch Wireless Controller For Nintendo Switch [pdf] User Guide 500-202, 500-202 Rematch Wireless Controller For Nintendo Switch, Rematch Wireless Control ler For Nintendo Switch, Wireless Controller For Nintendo Switch, Controller For Nintendo Switc h, Nintendo Switch, Switch</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.