



PDP REALMz Wireless Plus Controller User Guide

[Home](#) » [PDP](#) » PDP REALMz Wireless Plus Controller User Guide 



**REALMz™ Wireless Plus Controller
Quick Start Guide**

Contents

- [1 REALMz Wireless Plus Controller](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

REALMz Wireless Plus Controller



For:


Nintendo Switch

Nintendo Switch – OLED Model

Nintendo Switch is a trademark of Nintendo. © 2023 Nintendo

NOTICE: Before using the controller, we recommend fully charging it as it will only have an hour or two of battery life out of the box.

1. Pairing the Controller

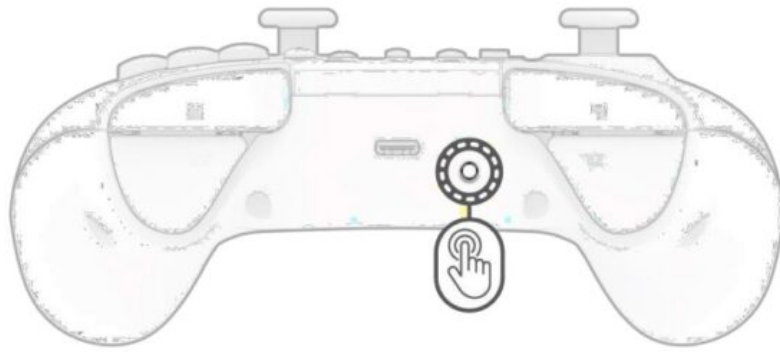

- A. Turn on your Nintendo Switch™ device and press any button on the controller.
- B. If your controller does not automatically connect, it will need to be paired with the device.
- C. Using the Joy-Con™ controllers, navigate to Controllers > Change Grip/Order.
- D. Now, using your controller, press and hold the sync button (at the top of the controller by the charging port) for 3 seconds until it pairs and the player indicator light at the bottom is solid.


Tip: To unpair the controller from the Nintendo Switch, hold down the sync button (located at the top of the controller) for at least 1 second.

2. Re-connecting the Controller

- A. If the controller is not connecting with the device, but has already been paired, simply go into Controllers >Change Grip/Order.
- B. When prompted, press L and R on your controller to connect.

Tip: You can also press and hold the “Home” button to wake up the controller and Nintendo Switch™ device.

3. Charging the Controller

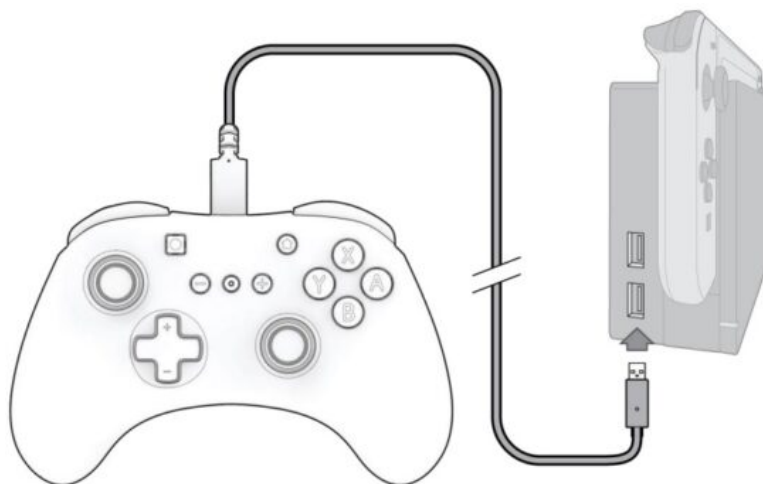

- A. When the controller is low on battery, the “function” button’s LED (located at the center of the controller between the + and – buttons) will blink RED every 30 seconds.
- B. Using the included USB-C cable, connect the controller to one of the USB ports on the Nintendo Switch dock.
- C. While charging, the “function” button’s LED will pulse RED. When the controller is fully charged, the LED will turn WHITE.

Note: To prevent the controller battery from completely draining out, please charge the controller every 3 months even if it’s not in use.

- D. The REALMz Wireless Controller comes with a 1 ft. USB-C charging cable. To play while charging, longer USB-C cables are available for purchase on [pdp.com](https://www.pdp.com).

4. Change LED Lighting Modes



A. The REALMz™ Wireless Controller comes with four different lighting effects pre-programmed to the controller's A, B, X, and Y buttons.

B. To explore these effects and cycle through them, hold the "function" button and press either A, B, X, or Y.

C. The REALMz Wireless Controller also comes with a "Collector Mode" light setting that allows you to keep the controller's LEDs lit while the controller is connected to the Nintendo Switch dock via a USB-C cable. To enable these settings, follow the instructions below:

a. Plug the USB side of the cable into the Nintendo Switch dock. Then, while the controller is unplugged, hold the "function" button and D-pad right, and plug in the USB-C cable into the controller.

D. To keep the controller paired and lit for extended periods of time, you can disable the auto-sleep settings on the Nintendo Switch. On your device, navigate to System Settings > Sleep Mode > Auto Sleep (Connected to TV) > select "Never."

Note: When the controller and system turn off, the lighting modes reset to the default mode (the mode for the A button).

5. Adjusting LED Light Settings



a. To adjust the LED brightness, hold the "function" button and press either ZL or the D-pad down button to decrease brightness, or either ZR or the D-pad up button to increase brightness.

6. Programming the Back Buttons





- A. To program, hold the “function” button and press the back button you’d like to map a control to.
- B. Once the “function” button LED is flashing, press any button on the controller to map that button’s function to the back. The LED will blink quickly 3 times, indicating successful programming.
- C. To clear a mapped function or disable the back buttons completely, hold down the “function” button and double press any back button.

WARNING: DO NOT DISASSEMBLE THE CONTROLLER!

Disassembling the controller to remove the figurine or any other components will void the 2-year manufacturer's warranty. The figurine is securely fixed inside the controller and is not designed for removal by users.



Documents / Resources

<div data-bbox="127 887 231 902"> REALMz™ Wireless Plus Controller rwl Quick Start Guide</div> <div data-bbox="127 913 185 925"> PDF 500-246, REALMz Wireless Plus Controller, REALMz, Wireless Plus Controller, Controller</div> <div data-bbox="127 934 158 999">English Spanish Català Português Français Deutsch Italiano Polski Português</div>	<div data-bbox="316 1034 1396 1090"><p>PDP REALMz Wireless Plus Controller [pdf] User Guide</p><p>500-246, REALMz Wireless Plus Controller, REALMz, Wireless Plus Controller, Controller</p></div>
--	--

References

- [!\[\]\(13dd0e1ab3baa23f7c1ed52b3eec2756_img.jpg\) PDP - Licensed Xbox, Switch, PlayStation and PC Controllers & Headsets](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.