



PDP Rematch Wired Controller for Nintendo Switch User Guide

[Home](#) » [PDP](#) » PDP Rematch Wired Controller for Nintendo Switch User Guide 



NINTENDO SWITCH™
Wired Controller
Manette avec fil REMATCH™
Quick Start Guide

2-Year Manufacturer's Warranty:
For product issues, contact us instead of returning to the store.
Further Warranty Information Inside

Contents


- [1 Rematch Wired Controller for Nintendo Switch](#)
- [2 Initial Setup](#)
- [3 Programming the Back Buttons](#)
- [4 LIMITED WARRANTY](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Rematch Wired Controller for Nintendo Switch



SMALL PARTS Not for children under 3 years.

Initial Setup

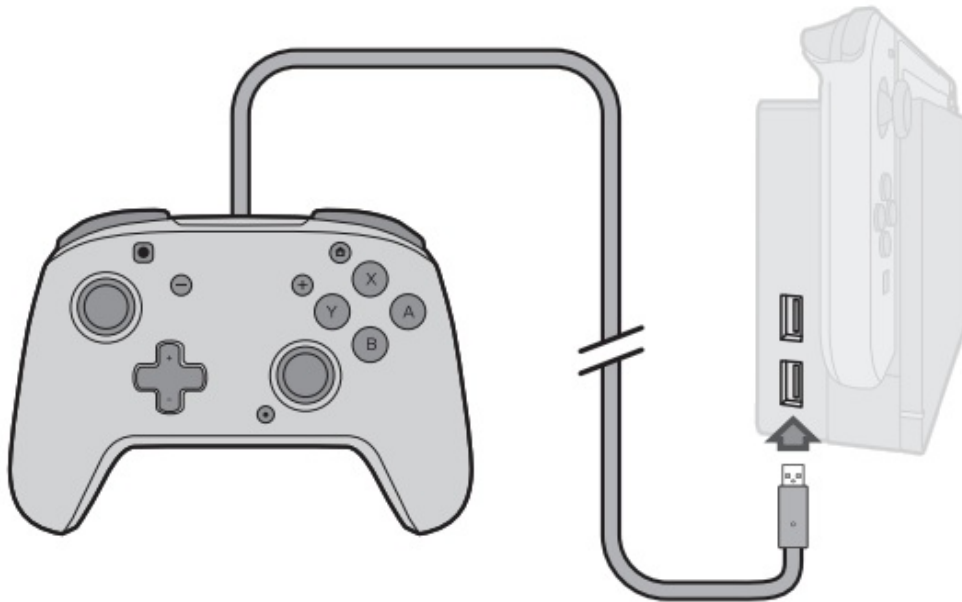

A. To use the controller, plug the USB cable into the Nintendo Switch dock. The controller should automatically pair with the device.

B. If the controller does not pair automatically, go into System Settings > Controller and Sensors > Change Grip/Order.

C. When prompted, press L and R on your controller to connect.

Note: You can also pair the controller directly from the Controllers Menu found on the Nintendo Switch Home Screen and select Change Grip/Order.



A. Plug the 3.5mm jack of your headset or headphones directly into the 3.5mm port on the controller.

Note: The Nintendo Switch only supports one audio output at a time. When connecting your headset/headphones into the controller, audio via HDMI connected devices (i.e. TV, amp, etc.) will be disabled.

When connecting more than one USB audio device, only the First device will have audio output.

B. You will be prompted by the Nintendo Switch to reconnect the controller. Press L and R to connect and then

audio will start playing through the headset/headphones.

C. If you do not hear sound after reconnecting your controller, please go to the Nintendo Switch OS settings to make sure the volume is above 0%.

Note: Under the System Settings, there's an audio setting called "Mute when Headphones are Disconnected" that can be enabled. When activated, this option will shut off the system speakers when unplugging or disconnecting a headset until the volume buttons are pressed, or until this setting is manually turned off. To disable this setting manually, select System Settings > System > Mute when Headphones are Disconnected (turn to off).



A. To adjust the controller's volume, hold down the "function" button and press the Up/Down on the D-pad.

B. You can easily mute your connected headset/headphone's mic by pressing the "function" button twice. To unmute, press the "function" button twice again.

Note: The volume controls only adjust the volume output by the controller, and not the volume level of the Nintendo Switch OS. Adjust the Nintendo Switch OS volume in the device settings.

Programming the Back Buttons



A. To program the back buttons, hold the "function" button and press the button you'd like to map a control to. Once the LED is Flashing, press any button on the controller to map that button's function to the back. The LED will blink quickly 3 times, indicating successful programming.

B. To clear a mapped function or disable the back buttons completely, hold down the "function" button and double press any back button.

LIMITED WARRANTY

- **Coverage and Term** • PDP warrants that this product will be free from manufacturing defects for two years from the original date of purchase. Manufacturing defects are those defects in materials and/or workmanship, subject to final determination by PDP's customer service department. This warranty applies only to original purchasers with a valid proof of purchase from an authorized PDP retailer that clearly shows the date of purchase.
- **Exclusive Remedy and Exclusions** • The exclusive remedy for valid claims will be the replacement, or refund of the product. This warranty does not cover defects caused by accidents, improper or abusive use of the product, unauthorized or improper modifications, repairs, or handling.
- **How to Get Service** • Purchasers with product issues should not return the product to the store, but instead contact PDP's customer service department first. You can contact PDP customer service by phone at 1-800-331-3844 (US and Canada only), Monday to Friday from 8 AM to 6 PM PST. International customers can contact us by phone at +442036957905. You can always reach us, 24/7, by visiting support.pdp.com and clicking the "Submit a Request" button top right of the page to open a support ticket. Inquiries are typically answered within 24 business hours.
- **Your Rights Under Applicable Law** • This warranty does not affect the legal rights of customers under applicable state, provincial, or national laws governing the sale of consumer goods.
- **Additional Information for Australian Consumers** • PDP products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits given to you under our express warranty are in addition to other rights and remedies you have under the Australian Consumer Law and other laws.

Need Help? Visit support.pdp.com or talk to us at (800) 331-3844 (USA and Canada only) or +442036957905 (UK only).

555 South 65th Avenue, Suite 200, Phoenix, AZ 85043 Herikerbergweg 88, 1101 CM Amsterdam, Netherlands
GPO Box 457 Brisbane QLD 4001, Australia

Tower 42, 25 Old Broad Street, London, EC2N 1HQ

US Patents/Brevets aux É.-U.: www.pdp.com/patents

This product is manufactured and imported by Performance Designed Products LLC.

Designed in the U.S.A. by PDP.

Made in China

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:



1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.



pdp.com

CAN ICES-3 (B)/ NMB-3 (B)



	<p>PDP Rematch Wired Controller for Nintendo Switch [pdf] User Guide Rematch Wired Controller for Nintendo Switch, Rematch Wired, Controller for Nintendo Switch, Nintendo Switch</p>
	<p>PDP Rematch Wired Controller for Nintendo Switch [pdf] User Guide Rematch Wired Controller for Nintendo Switch, Controller for Nintendo Switch</p>

References

-  [PDP - Licensed Xbox, Switch, PlayStation and PC Controllers & Headsets](#)
-  [Patents](#)