



PDQ 6400C and 6400CF CVR Exit Instruction Manual

[Home](#) » [PDQ](#) » PDQ 6400C and 6400CF CVR Exit Instruction Manual 

Contents

- [1 PDQ 6400C and 6400CF CVR Exit](#)
- [2 DEVICE](#)
- [3 INSTALLATION](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



PDQ 6400C and 6400CF CVR Exit



DEVICE

MACHINE SCREWS:

USE #7 OR 13/64" DRILL AND 1/4-20 TAP


NOTES:


1. VERIFY PRINTED TO SCALE
2. SEE TRIM TEMPLATE (IF APPLICABLE) FOR RELATED MACHINING DETAILS
3. DIMENSION "X" SIZED FOR DOOR. REFER TO DEVICE INSTRUCTIONS WHEN CUTTING DOWN FOR A NARROWER OPENING
4. CHECK PDQ WEBSITE FOR THE MOST RECENT REVISION WWW.PDQLOCKS.COM
5. MINIMUM STILE WIDTH: 3-1/2"


INSTALLATION

	BACKSET
MOD	1-7/16"
ONT	1-5/16"

FINISHED FLOOR

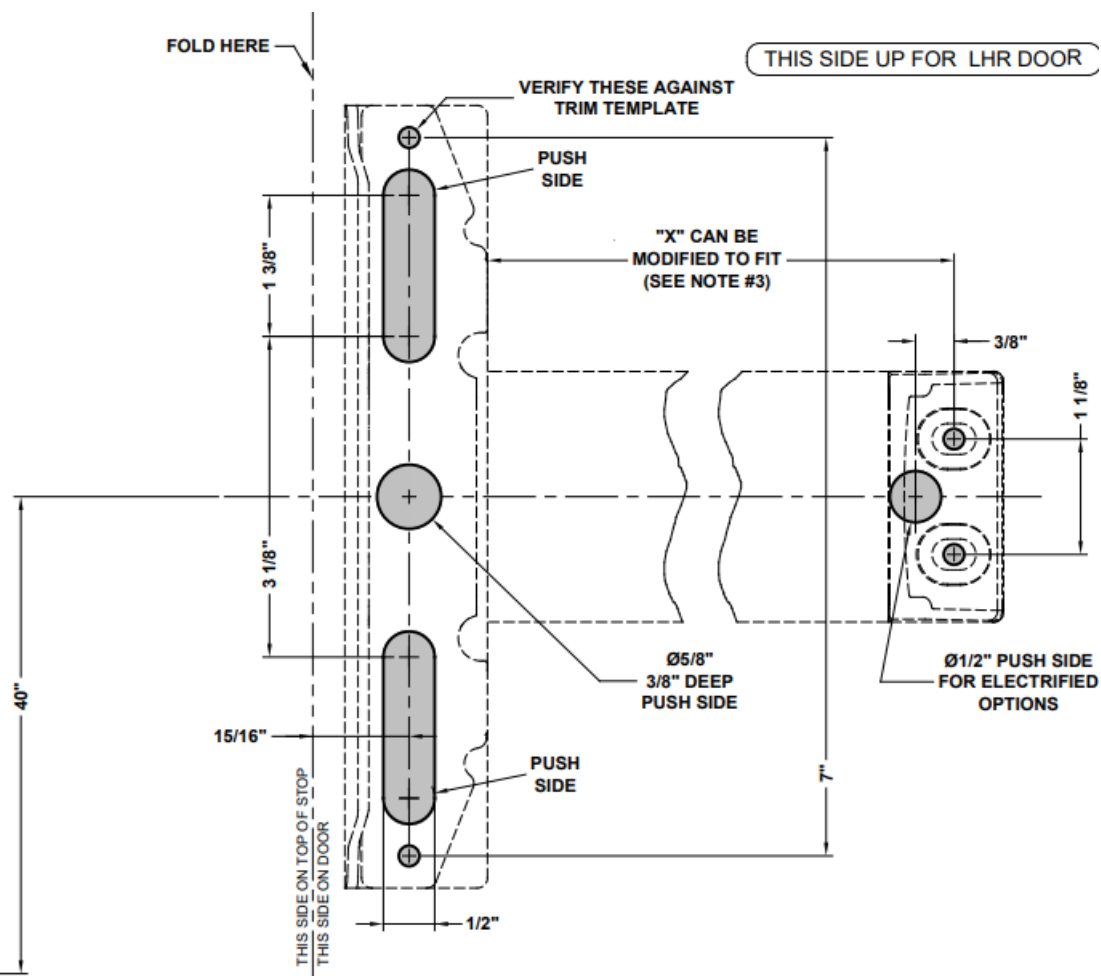

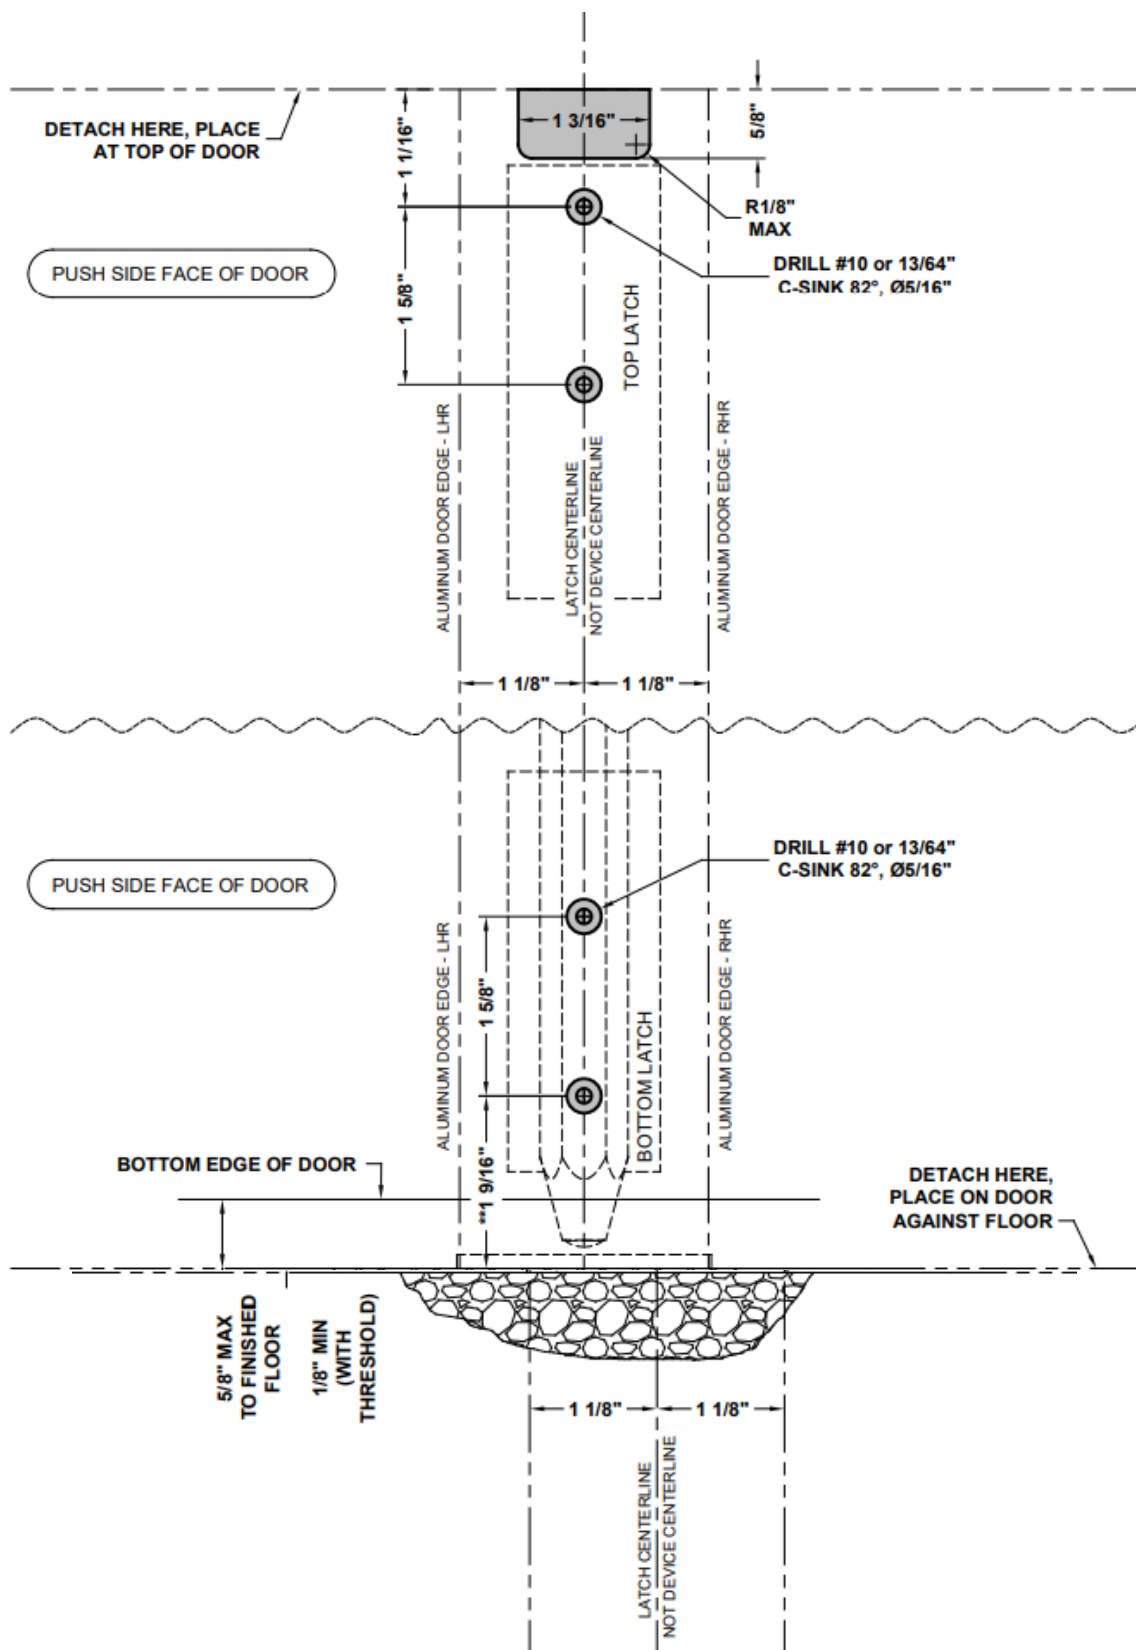


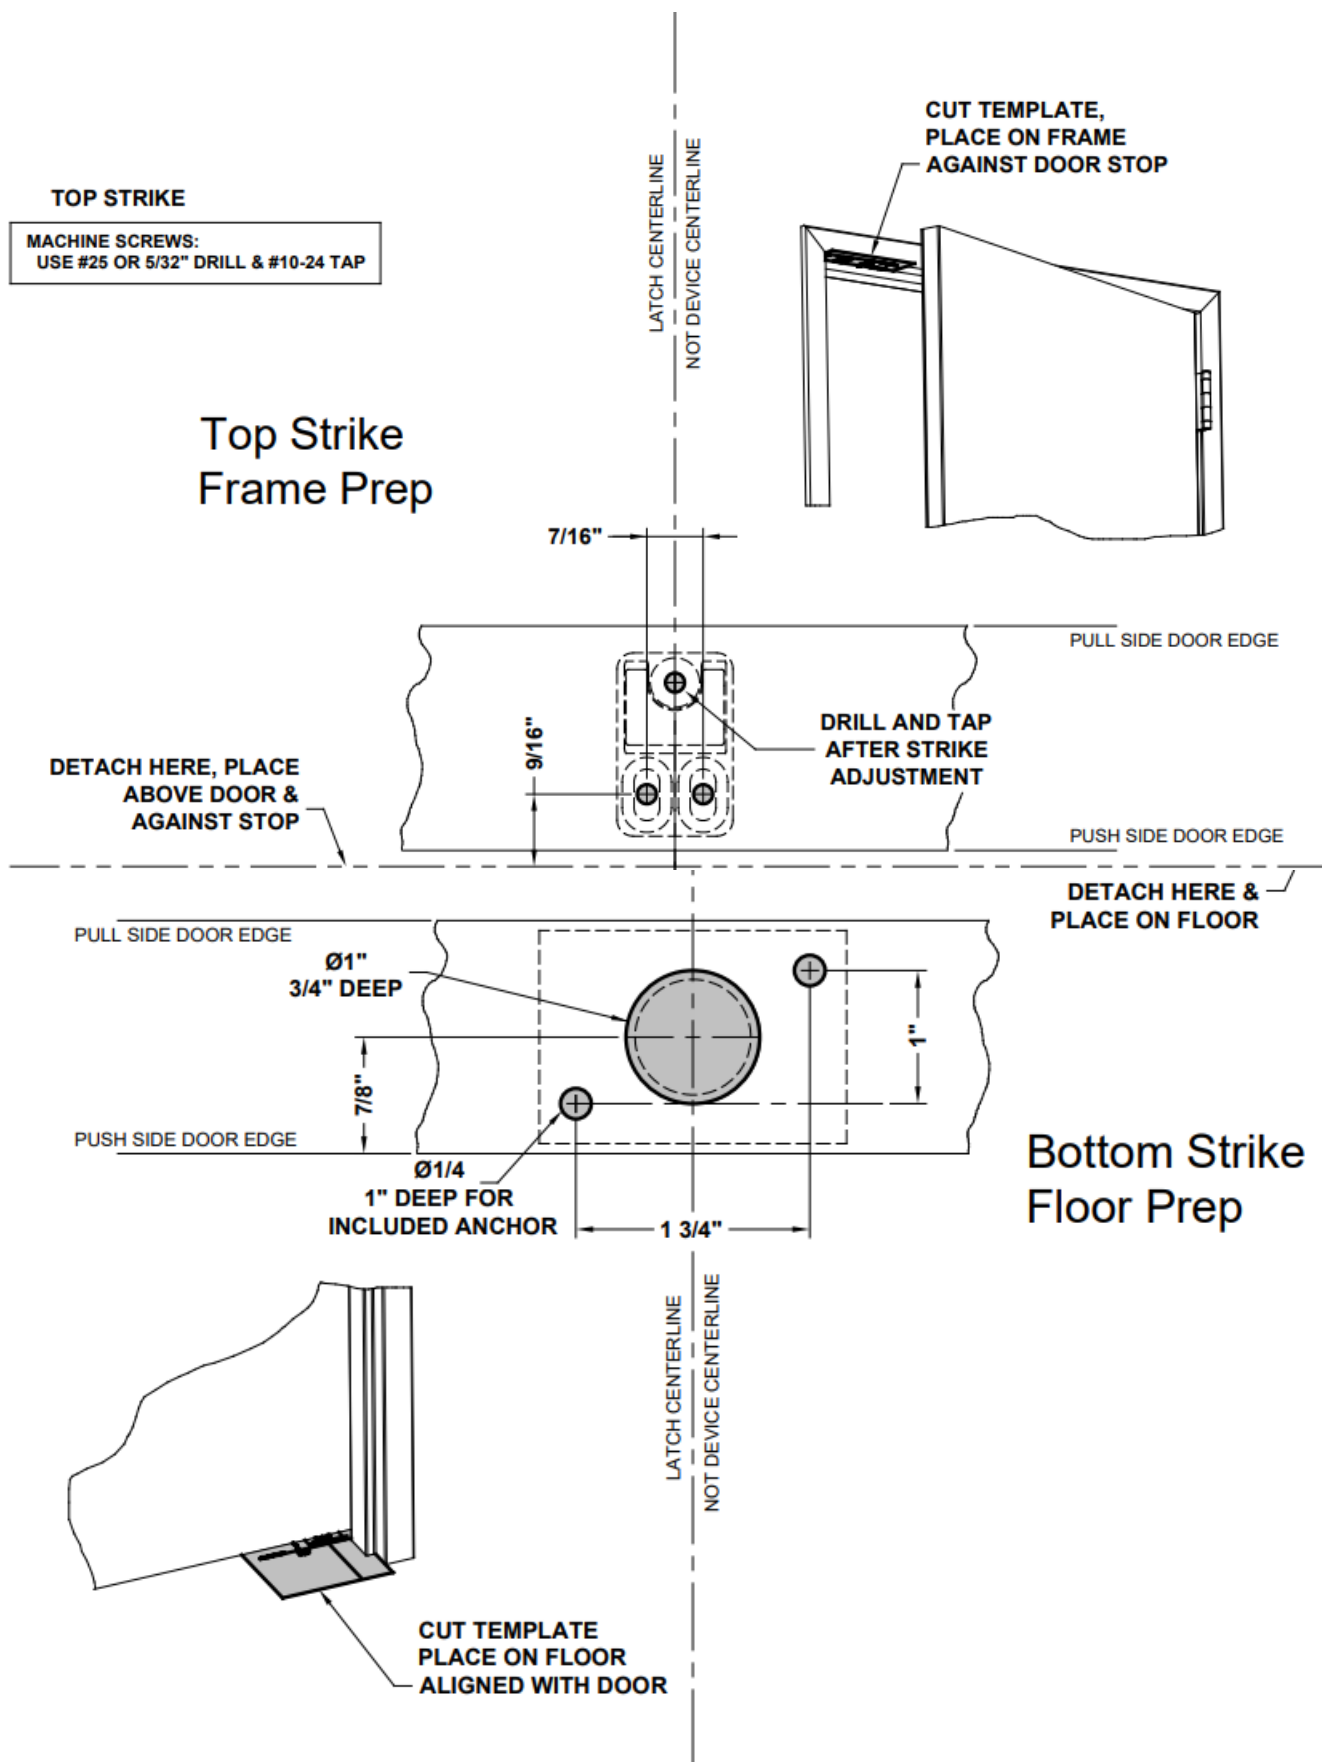

FOR DOORS WITH 1/2" THRESHOLD, MEASURE 1-9/16" TO LOWER THE STRIKE MOUNTING HOLE FROM TOP OF THE THRESHOLD, USE THE UPPER PINHOLE FOR THE BOTTOM LATCH

PDQ Manufacturing 2230 Embassy Dr. Lancaster, PA 17603 833-273-7832 833-2 PDQTECH www.pdqlocks.com

Documents / Resources

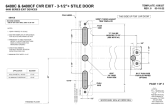

[PDQ 6400C and 6400CF CVR Exit](#) [pdf] Instruction Manual

6400C and 6400CF CVR Exit, 6400C CVR Exit, 6400C, 6400CF CVR Exit, 6400CF, CVR Exit

References

- [★ PDQLOCKS.COM](#)

Manuals+.