



PDQ 6WM Exit Device Trim Instruction Manual

[Home](#) » [PDQ](#) » PDQ 6WM Exit Device Trim Instruction Manual 




6WM/6NM Exit Device Trim INSTALLATION INSTRUCTIONS

Contents


- [1 HAND TRIM](#)
- [2 INSTALL MORTISE DRIVE SPINDLE](#)
- [3 INSTALL TRIM](#)
- [4 CONVERSION KIT INSTRUCTIONS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

HAND TRIM

*6WM SHOWN THROUGHOUT

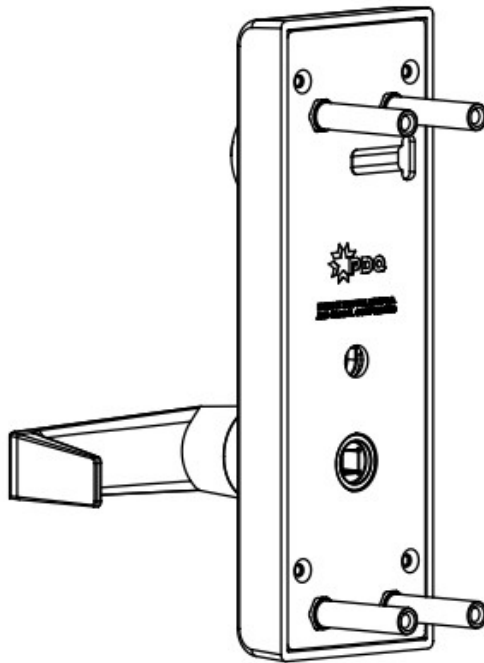


- Adjust lever for proper handing

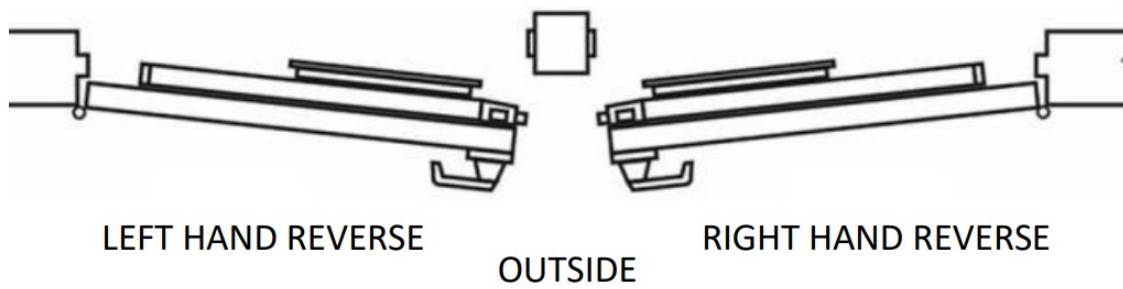


INSTALL MORTISE DRIVE SPINDLE

- Install drive spindle in orientation shown
- Place spring over installed drive spindle

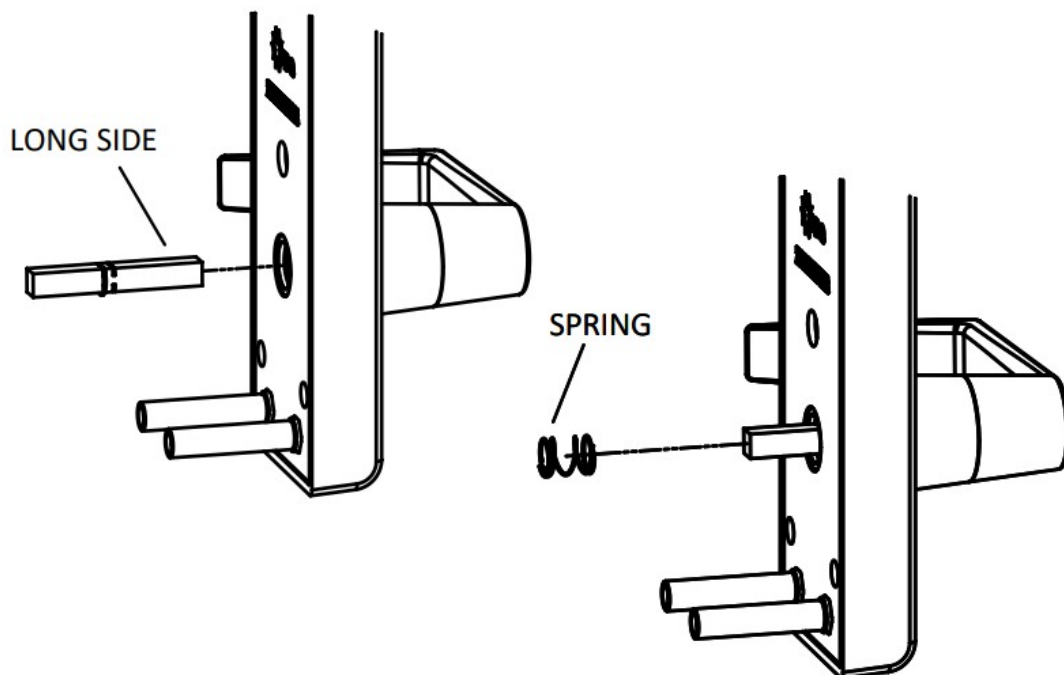

INSTALL TRIM

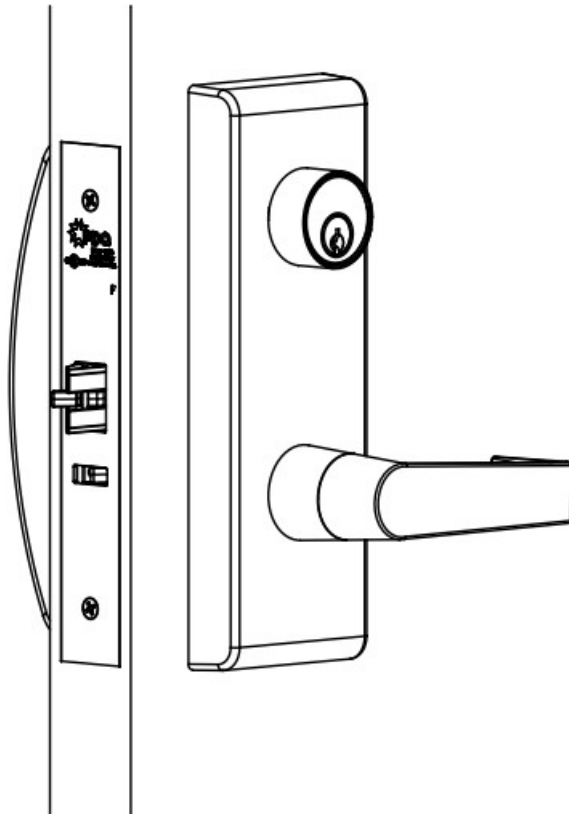


- Secure trim and exit device to door
- Trim will always thru bolt to exit device
- Verify operation of both the trim and the exit device

CONVERSION KIT INSTRUCTIONS


1. REMOVE BACKPLATE

- Remove (4) screws
- Remove backplate

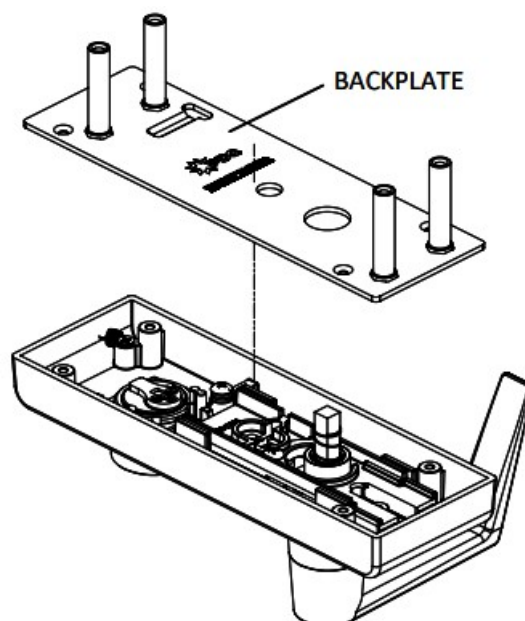

2. DETERMINE FUNCTION

- Standard 6WM includes conversion kit within escutcheon
- 6NM conversion kit can be ordered separately

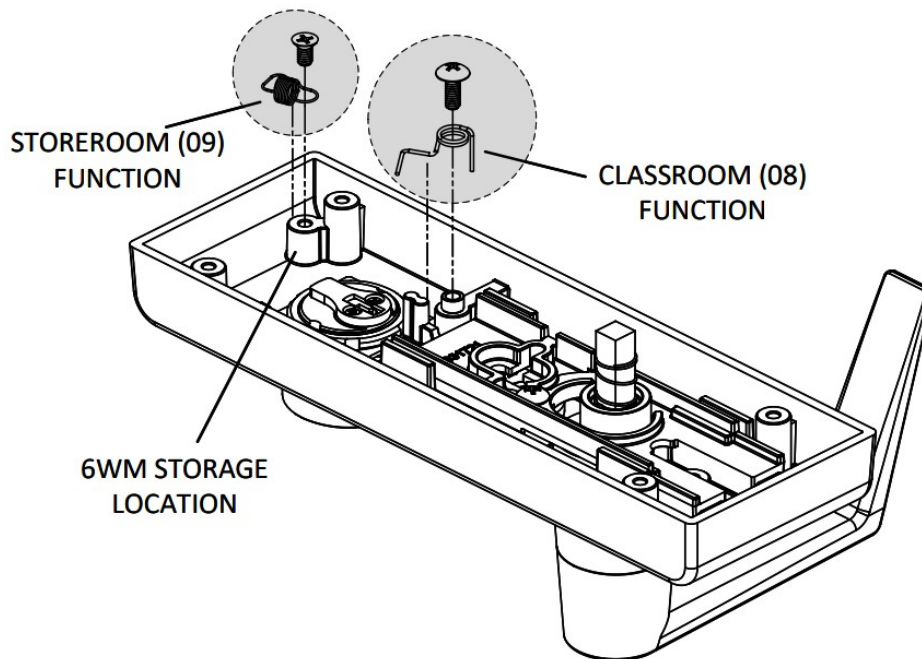


3. INSTALL NEW FUNCTION

- Install desired function
- 08 Function: Spring engages beneath boss on locking mechanism. Spring spacer must be installed on inside of spring before tightening screw
- 09 Function: Extension spring to go around boss on locking mechanism
- For 6WM Only: Install unneeded function into storage location
- Reinstall backplate

08 FUNCTION




09 FUNCTION

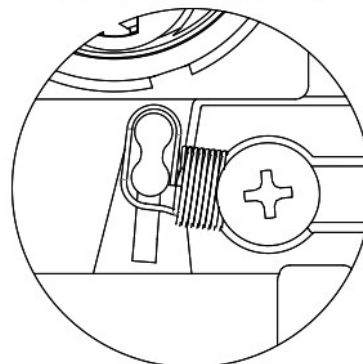

639432 Rev0 – 7-7-22
Phone: 833-2-PDQTEC
www.pdqlocks.com

Documents / Resources

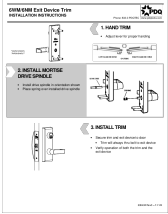

[PDQ 6WM Exit Device Trim](#) [pdf] Instruction Manual
6WM Exit Device Trim, 6WM, Exit Device Trim, Device Trim, Trim

References

- [🌟 Home Page | PDQ](#)

[Manuals+.](#)