



## PDW Cloud Cap CO2 Inflator Instructions

[Home](#) » [PDW](#) » PDW Cloud Cap CO2 Inflator Instructions 

### Contents

- [1 PDW Cloud Cap CO2 Inflator](#)
- [2 Tip](#)
- [3 Operation](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



### PDW Cloud Cap CO2 Inflator




## Tip

Go slow. Only release a short burst of CO2 at first to make sure it is flowing properly into the tire before fully inflating.

## Operation

1. Open Presta valve and tap the tip to make sure air can move freely.
2. Thread CO2 cartridge into the bottom of the inflator until it punctures.
3. Flip the Control Lever around into the inflation position.
4. Thread the nozzle onto the Presta valve.
5. Press the Control Lever to release CO2 into the tube.
6. When finished inflating, unthread the nozzle from the Presta valve.

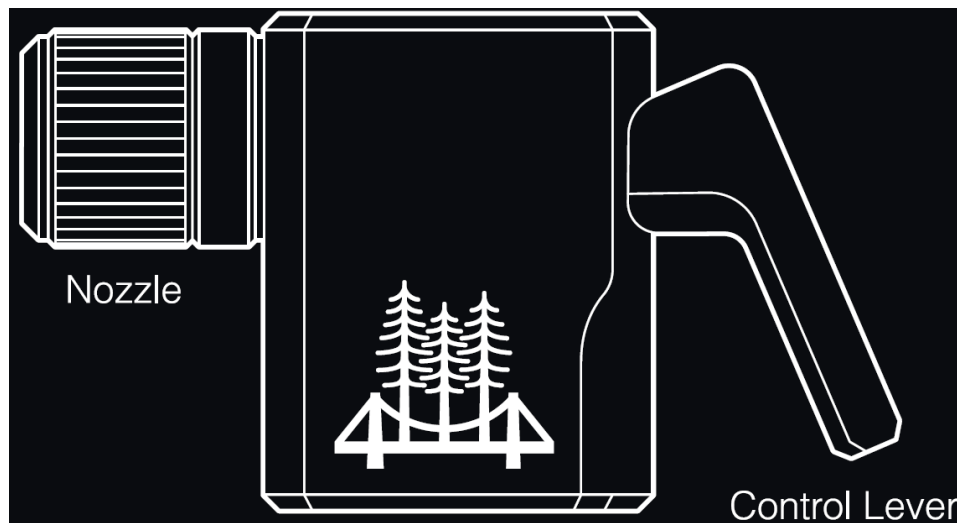

[ridepdw.com/collections/timber-to-town](https://ridepdw.com/collections/timber-to-town)

## Documents / Resources



[PDW Cloud Cap CO2 Inflator](#) [pdf] Instructions  
Cloud Cap CO2 Inflator, CO2 Inflator, Cloud Cap Inflator, Inflator

[Manuals+](#)