




PEAK SOLICE MACH-815 Modular Wireless Machine User Guide

 
[Home](#) » [PEAK SOLICE](#) » PEAK SOLICE MACH-815 Modular Wireless Machine User Guide 

PEAK SOLICE

MODULAR WIRELESS
MACHINE MANUAL




EXPERIENCE ULTIMATE FREEDOM
WITH PEAK'S FIRST-EVER MODULAR MACHINE
Switch effortlessly between a wireless or wired setup

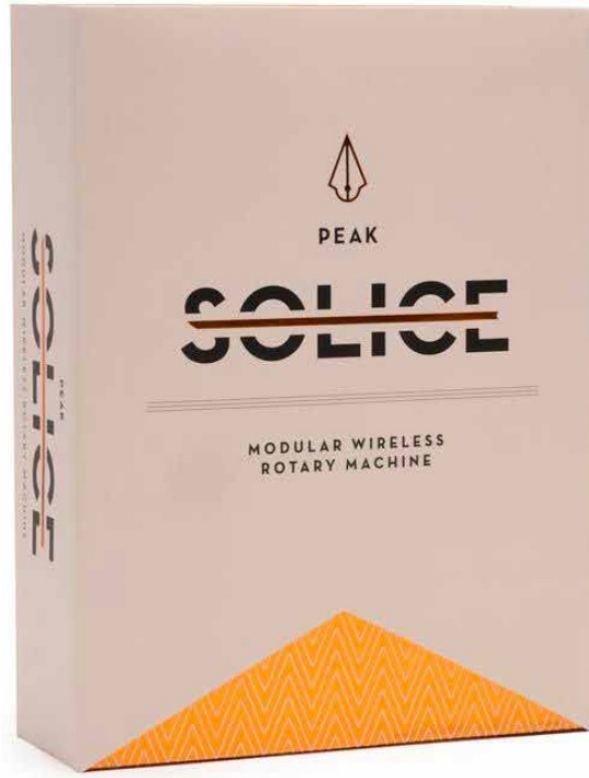

Contents

- [1 PEAK SOLACE DIAGRAM](#)
- [2 TECHNICAL SPECIFICATIONS](#)
- [3 KEY FEATURES](#)
- [4 GET STARTED WITH SOLACE](#)
- [5 WARRANTY INFORMATION](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

 PEAK SOLACE DIAGRAM

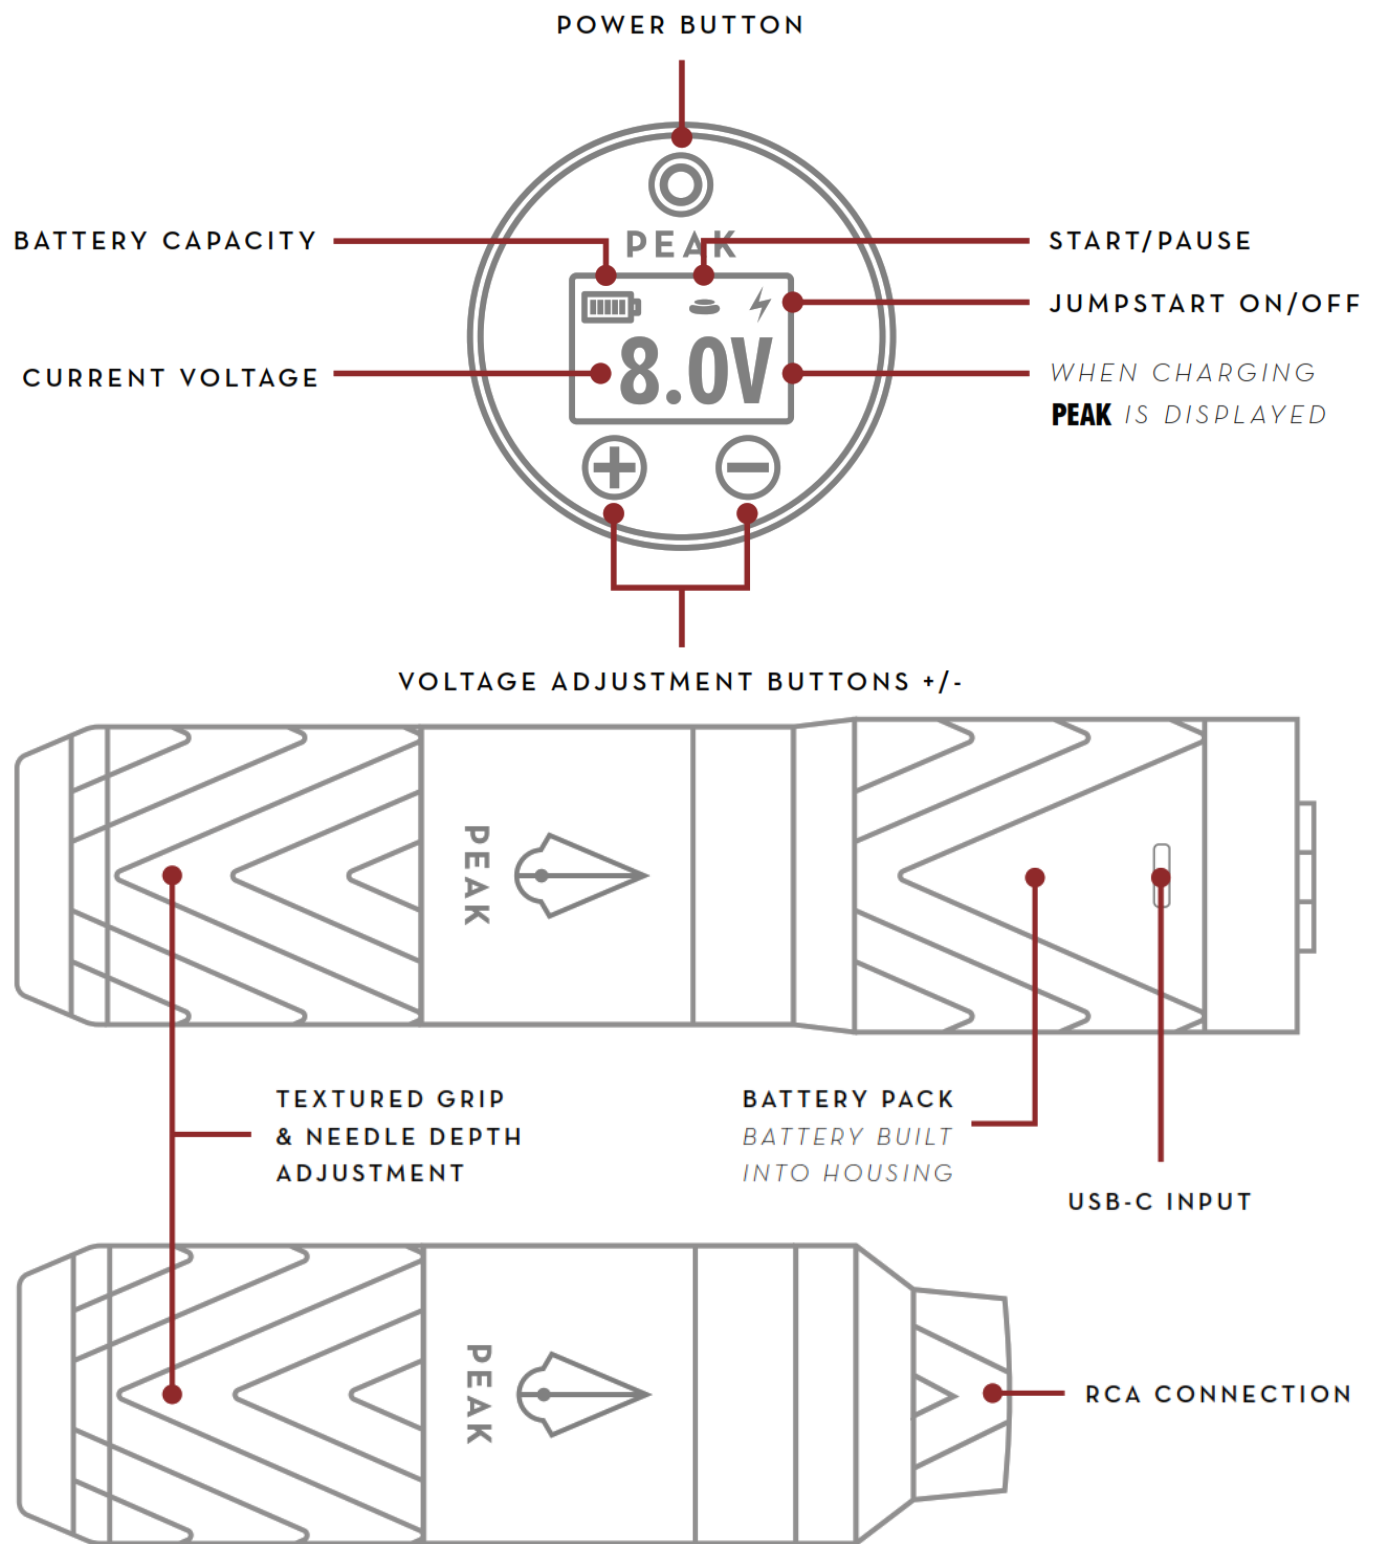

TECHNICAL SPECIFICATIONS

Net Weight: 158g (~5.6oz)

Machine Length: 4.5"

Stroke Length: 3.5mm; 4mm cam available separately

Machine Body: Constructed from durable aluminum featuring the Peak logo on the machine body

Battery: USB-C chargeable; offers 10+ hours of tattooing power; Microchip battery controller prevents short-circuit, overcharge, and drain

Motor: 6v 6800rpm r

Maximum voltage: 1

Jumpstart voltage: 1

Connection: Remov

Package Includes: 2

KEY FEATURES

Ultra-lightweight pen-style modular machine

Can be used wirelessly or with a standard RCA connection

Let's you plug into power and continue tattooing even if your battery is close to dying


Offers a close grip and interchangeable design

Can be used for all tattooing styles

Comes in Black, Pink, or Red


GET STARTED WITH SOLACE


FOR WIRELESS TATTOOING

1. **To turn on the Solice without the jumpstart feature**, long-press the power button  on the attached PowerPack battery. Your machine will start with previously adjusted voltage.

2. **To turn on the Solice with the jumpstart feature**, quickly double press the power button .

A lightning bolt icon  will appear on your display.

3. **To start or pause your machine**, press the power button  whenever you want.

A pedal icon  will appear on your display when your machine is working.

Tattoo for 10+ hours on a single charge; the PowerPack battery will automatically shut off after 5 minutes of inactivity.

4. **When you're ready to recharge**, connect your PowerPack to a USB-C charging cable. You will also see your battery capacity.

FOR TATTOOING WITH AN RCA CONNECTION

1. **Remove the PowerPack battery**.

2. **Attach the magnetic RCA module** (included with your Solace machine).

3. **Plug your Solice Pen** into your favorite power supply with the included RCA cable.

WARRANTY INFORMATION

If you experience any technical issues or your Solice Modular Machine requires repairs, please contact our customer service team at 410-712-0145. After our customer service team provides you with a return authorization, you can download and fill out our **Peak Repair Order Form**:



 
<https://bit.ly/3rxhFlm>

Mail your completed repair order form, machine, and invoice as proof of purchase to 7410 Coca-Cola Dr. STE 108, Hanover, MD 21076. You can also direct any questions or concerns regarding issues with your Solice Modular Machine to info@peakneedles.com.

If you purchased your Solice Modular Machine less than a year ago, we will replace it with a brand new model. If your machine is older than a year, it is unfortunately no longer protected under our one-year warranty.

PEAK SOLICE

Documents / Resources

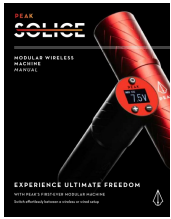

[PEAK SOLICE MACH-815 Modular Wireless Machine](#) [pdf] User Guide
MACH-815 Modular Wireless Machine, MACH-815, Modular Wireless Machine