

PEAKEEP MHP-3129 ANALOG ALARM CLOCK



Peakeep MHP-3129 Analog Alarm Clock Instruction Manual

[Home](#) » [PEAKEEP](#) » Peakeep MHP-3129 Analog Alarm Clock Instruction Manual 

Contents

- [1 Peakeep MHP-3129 Analog Alarm Clock](#)
- [2 Specifications](#)
- [3 Features](#)
- [4 PRODUCT OVERVIEW](#)
- [5 Setting](#)
- [6 Troubleshooting](#)
- [7 Customer Service](#)
- [8 FREQUENTLY ASKED QUESTIONS](#)
- [9 References](#)
- [10 Related Posts](#)

PEAKEEP

Peakeep MHP-3129 Analog Alarm Clock



Specifications


- **Operating Temperature:** 14°F to 122°F.
- **Operating Voltage:** 4.0V to 4.50V DC
- **Accuracy:** -0.8 to 1.2 sec /day at 4.50V DC at 78.8°F.
- **Average Current Consumption:** 190uA at 4.50V DC at 78.8°F
- **Alarm Setting Accuracy:** ±5min against setting time
- **Alarm sounds:**
 - Brook
 - Farewell Song
 - Waltz of the Flowers
 - The Blue Danube
 - Rockabye Baby
 - Birdsong
 - Beep

Features

- Adjustable Alarm Volume

- Selectable Alarm Sounds
- Snooze
- Light
- Ease of use
- Battery operated

PRODUCT OVERVIEW

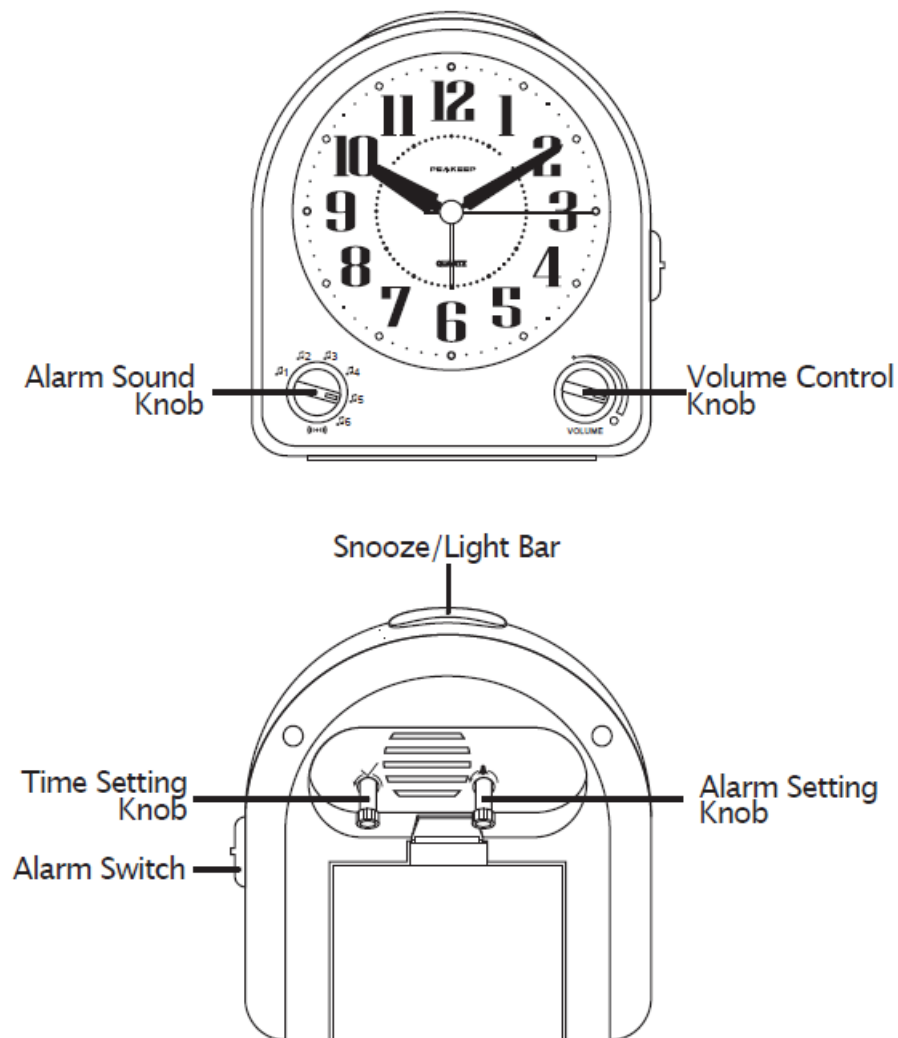


Tips


- Please follow the arrow to turn the knob for settings, or the quartz movement will be damaged or inaccurate.
- Rechargeable and used batteries are not recommended. Generally, the voltage of one rechargeable battery is 1.0V-1.42v, and the normal operating voltage of this item is ≥ 4.30 V. Therefore if a rechargeable battery or used batteries are inserted, the clock will not run correctly a few days later due to the low voltage.
- Do not pull the knobs out, which may cause damage to this unit.
- Dropping may cause damage, use with caution!

Setting

Setting the Clock Time

- Turn the time setting knob following the arrow  to get the correct clock time.

Setting the Alarm

- The smaller scale ring is for the alarm, it indicates 10 minutes per scale for the alarm minute.
- Turn the alarm setting knob following the arrow  to set the desired alarm time.

Turning Alarm On

- Toggle the alarm switch to “ON”, the alarm will go off at the time you set and last for nearly 60 minutes.

Turning Alarm Off

- Toggle the alarm switch to “OFF”, the alarm stops and will no longer work.

Snooze Function/Suspend Alarm

- When the alarm goes off, press the top button to temporarily suspend the alarm for 5 minutes. The snooze function can be repeated for approximately 1 hour

Backlight Function

- Press the top button, clock face will be lightened for 5 seconds.
- Backlight lights when the alarm is working.

Replacing Batteries

3 brand-new AAA 1.5V batteries are included in the box. Generally, they will power this unit for more than 6 months. For optimal performance, please replace batteries every 6 months or when

- Clock time runs slowly.
- Light becomes dim.

Troubleshooting

The clock does not keep time

- Please try to turn the time and alarm knobs following the arrows several times to see if the clock will work fine or not. One possible case is that the hands were just stiff and getting stuck.

Alarm accuracy

- There is not going to be digital precision on all these types of analog alarm clocks. Generally, the alarm is ± 5 minutes against the setting time.

Clock does not work

- Remove the film covered on the battery, and re-insert the battery to start the clock.
- Change another 3 brand new AA batteries to try.

Melody does not sound

- This is most likely due to the sound knob not being in the right position, please try turning the sound knob several times to align the symbol of sound.
- Turn the volume up to the max level.

Customer Service

If you encounter any problems using this unit, contact Amazon customer service for a refund or replacement before the return/replacement window closes. Or request service at sales@us-myehome.com with your Amazon order ID, will be committed to making things right for you without any delay. Thank you for your support.

FREQUENTLY ASKED QUESTIONS

What type of display does the Peakeep MHP-3129 Alarm Clock have?

The Peakeep MHP-3129 Alarm Clock features an analog display.

What are the dimensions of the Peakeep MHP-3129 Alarm Clock?

The dimensions of the Peakeep MHP-3129 Alarm Clock are 4.5 inches in width and 5 inches in height.

How is the Peakeep MHP-3129 Alarm Clock powered?

The Peakeep MHP-3129 Alarm Clock is powered by DC and requires 3 AA batteries.

What type of movement does the Peakeep MHP-3129 Alarm Clock use?

The Peakeep MHP-3129 Alarm Clock uses quartz movement.

What special features does the Peakeep MHP-3129 Alarm Clock offer?

The Peakeep MHP-3129 Alarm Clock offers optional alarm sounds, allowing users to select their preferred wake-up sound.

How much does the Peakeep MHP-3129 Alarm Clock weigh?

The Peakeep MHP-3129 Alarm Clock weighs 8.98 grams.

What is the model number of the Peakeep MHP-3129 Alarm Clock?

The model number of the Peakeep MHP-3129 Alarm Clock is MHP-3129.

What is the warranty type for the Peakeep MHP-3129 Alarm Clock?

The Peakeep MHP-3129 Alarm Clock comes with a limited warranty.

What is the price of the Peakeep MHP-3129 Alarm Clock?

The price of the Peakeep MHP-3129 Alarm Clock is \$19.99.

Why is the Peakeep MHP-3129 Alarm Clock not turning on?

Ensure that the 3 AA batteries are properly installed and have sufficient charge. If the batteries are old or depleted, replace them with new ones to power the Peakeep MHP-3129 Alarm Clock.

How can I fix the inaccurate time on my Peakeep MHP-3129 Alarm Clock?

To correct the time, adjust the time-setting dial on the back of the Peakeep MHP-3129 Alarm Clock. Make sure the quartz movement is functioning correctly and replace the batteries if needed.

What should I do if the alarm on my Peakeep MHP-3129 Alarm Clock is not sounding?

Verify that the alarm is set correctly and the alarm switch is turned on. Check the volume setting and ensure the batteries are not depleted. Replace the batteries if necessary.

Why is the Peakeep MHP-3129 Alarm Clock draining batteries quickly?

Rapid battery drain could be due to a short circuit or continuous alarm operation. Ensure the alarm is not left on continuously and replace the batteries with high-quality ones. If the issue persists, contact the manufacturer for further assistance.

How do I stop my Peakeep MHP-3129 Alarm Clock from making ticking noises?

The ticking noise is a common characteristic of analog clocks with quartz movement. If the noise is disruptive, consider placing the clock further away from your sleeping area or in a different room.

What should I do if the Peakeep MHP-3129 Alarm Clock's light is not working?

The Peakeep MHP-3129 Alarm Clock does not typically have a built-in light. If your model includes a light feature, ensure the batteries are properly installed and have sufficient charge. Replace the batteries if needed.

DOWNLOAD THE PDF LINK: [Peakeep MHP-3129 Analog Alarm Clock Instruction Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.