



[Home](#) » [PEANUTS](#) » **PEANUTS SC20250521B Wireless Mouse User Manual** 

Contents [[hide](#)]

[1 PEANUTS SC20250521B Wireless Mouse](#)

[2 PRODUCT KEY](#)

[3 Specifications](#)

[4 INSTALLATION](#)

[5 OPERATION](#)

[6 TROUBLESHOOTING](#)

[7 WARRANTY](#)

[8 FCC WARNING](#)

[9 FAQ](#)

[10 Documents / Resources](#)

[10.1 References](#)

PEANUTS™

PEANUTS SC20250521B Wireless Mouse



PEANUTS. WIRELESS MOUSE


USER MANUAL

Thank you for purchasing the SOAR Wireless Mouse. This manual will familiarize you with the product and its use. Please retain for warranty information and reference.

Includes: Wireless Mouse, USB Fob, and Use Manual

PRODUCT KEY

1. Left Click
2. Right Click
3. Scroll Wheel
4. Battery Compartment
5. Wireless USB Fob
6. Optical Lens

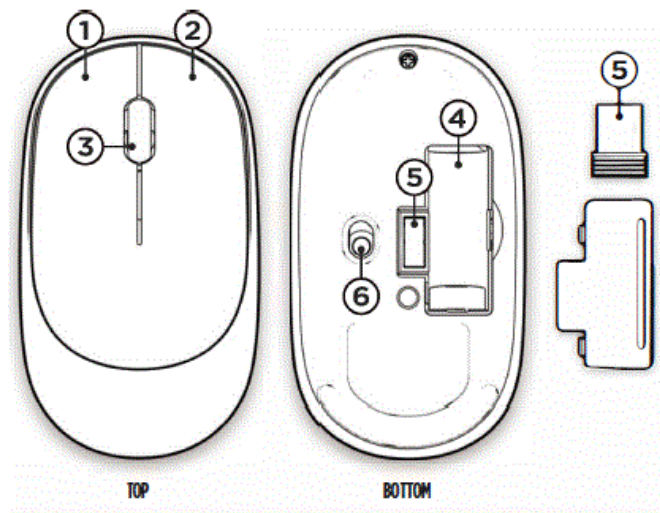

Specifications

- **Model:** B650
- **Material:** ABS
- **Product Size:** 4.25 x 2.4 x 1.45 inches (108 x 60 x 36 mm)
- **DPI:** 1200
- **Connection:** 2.4 GHz

INSTALLATION

1. Open the Battery Compartment (4) and remove the Wireless USB Fob (5).
2. Place a single M battery into the Battery Compartment (4). AA battery not included.
Replace the battery compartment cover.
3. Plug the Wireless USB Fob (5) into your computer or device.
4. Click or move the mouse to pairing.
5. The wireless mouse should begin to work automatically. If it does not, open the Bluetooth menu in your device and select it from the list of pairable devices to connect. Once paired successfully it will automatically connect for future use. just move the mouse to wake up your computer.

OPERATION

Once paired with your device place your mouse on the mouse pad or a clean flat surface for best results. Use the left click to select right click for options , and the scroll wheel to navigate web pages and programs. Adjust the cursor speed in your devices mouse settings menu.

WARNING

This device is not a toy and should away from children. The product rn16t not be dropped or subjected to impact. Do not use the devte in humid environment's extremely hot / cold not use chemicals or abrasive device to clean the product Please return for repairs if the product is defective. The warranty is invalid if the product has metal rust, or other natural oxidation,

TROUBLESHOOTING

If the cursor doesn't move when you move the mouse.

- Make sure the Wireless USB Fob (5) receiver is properly connected. Try inserting it into another USB port on your computer or device.
- Take the battery out and reinstall it. Ensure the positive and negative sides are in the correct direction based on the markings in the battery compartment (4). Replace the battery with one that has a full charge.

WARRANTY

- This product has a 1 year warranty against affects in manufacturing under regular customer use. For instructions about how to obtain warranty service for your product, please contact customer service: info@primebrandsgroup.com,
- The Bluetooth wordmark and logos are registered trade risk by Bluetooth SIG, Inc. This product is compatible with Bluetooth.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate this device.

This device complies with part15 of the KC Rules. Operation is to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must any interference including in reference that may cause undesired operation.

NOTE: This equipment has tested and found to comply with the limit for a Case B digital service ,pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential insolation. This generates, uses, and can radiate radio frequency no/ energy and, if not installed and in accordance the instructions , may cause harmful interference to radio communications. , the is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be by turning the equipment off and on, the user is encouraged to try to correct the into reference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation the equipment and receive
- Connect the equipment into an outlet on a circuit different from that to which the receiver itter is connected.
- Consult the dealer or an expert me d radio/TV technician for help

WARNING: Cancer and Reproductive Harm –


- www.P65Warnins.ca.gov
- @2025 Peanuts Worldwide LLC
- www.Peanuts.com
- 02025 Prime Brands Group. All rights reserved. All trade names are registered trademarks of the respective manufactures listed. Made in China. Prime Brands Group
- Brooklyn, NY11232
- SHOPSOAR.COM

FAQ

- **Q: Is the wireless mouse compatible with Bluetooth?**
 - **A:** Yes, the wireless mouse is compatible with Bluetooth. Follow the pairing instructions in the manual to connect it to your device.
- **Q: What should I do if the mouse is not working after pairing?**
 - **A:** If the mouse is not working after pairing, open the Bluetooth menu on your device and select the mouse from the list of pairable devices to connect manually.
- **Q: Can I adjust the cursor speed of the mouse?**

- **A:** Yes, you can adjust the cursor speed in your device's mouse settings menu to suit your preferences.

Documents / Resources

	PEANUTS SC20250521B Wireless Mouse [pdf] User Manual 2A2WN-SC20250521B, 2A2WNSC20250521B, SC20250521B Wireless Mouse, SC20250521B, Wireless Mouse, Mouse
---	---

References

- [User Manual](#)

PEANUTS

2A2WN-SC20250521B, 2A2WNSC20250521B, mouse, PEANUTS, SC20250521B, SC20250521B Wireless Mouse, Wireless Mouse

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.