




PECO CONTROL SYSTEMS T8168B-2 BACnet IP Connection Thermostat Instructions

[Home](#) » [PECO CONTROL SYSTEMS](#) » PECO CONTROL SYSTEMS T8168B-2 BACnet IP Connection Thermostat Instructions 

PECO CONTROL SYSTEMS T8168B-2 BACnet IP Connection Thermostat Instructions



Contents

- [1 Connecting to the Thermostat](#)
- [2 BACnet™ Configuration Page Sign In](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)

Connecting to the Thermostat

Congratulations on your selection of the PECO T8168B-2 Thermostat. These instructions describe the process for BACnet™ IP Connection.

Connect the T8168B-2 thermostat to power. The display will turn on and the unit will automatically become

accessible on Wi-Fi.

Open the internet settings on the phone or device and look for the T8168 network. Actual screen images vary for IOS and Android.


- Select “T8168 xxxxx” (xxxxx can be any 4-5 digits)
- Enter password “12345678”
- Press “Connect”
- Sign into open BACnet™ Configuration Page at IP Address 10.10.0.1 on the T8168#### network
 - Select T8168 XXXX Network




- Enter Password 12345678



- Select Sign In to T8168 Network

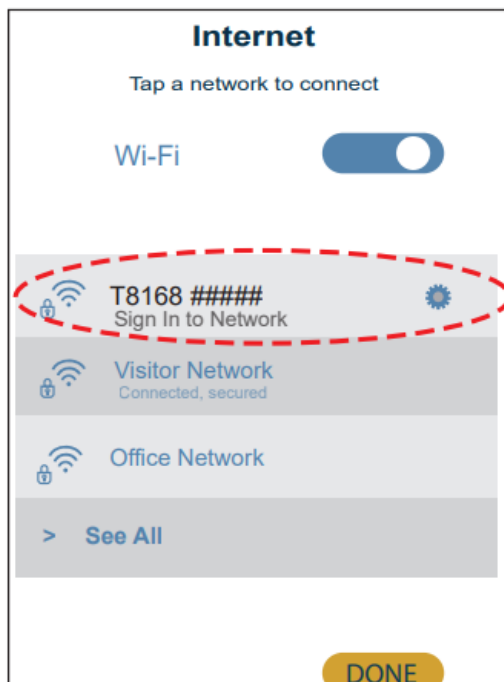

- Sign-In to open BACnet Configuration Page

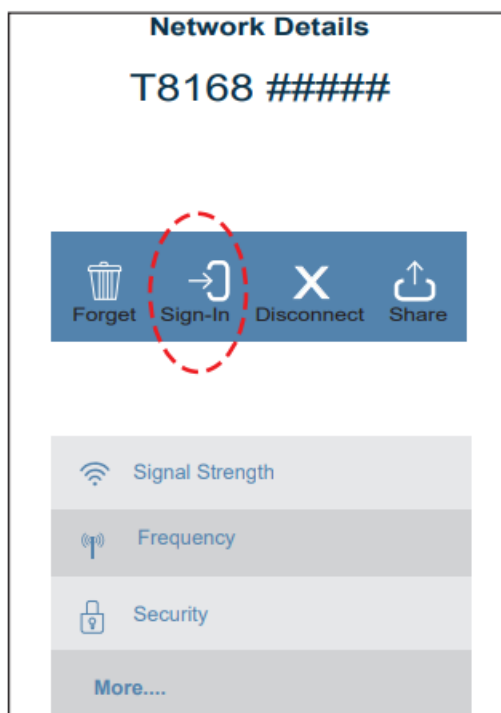





BACnet™ Configuration Page Sign In

- Select your available local network, or enter your manual SSID

MANUAL CONNECT

Add (Hidden) SSID


OR CHOOSE A NETWORK...

Building Network	
Office Network	
Visitor Network	
Facilities Network	

MS / TP connection parameters

MSTP ADDRESS

BAUDRATE

9600 

- Enter your local network password and press “Join”


PASSWORD FOR FACILITIES NETWORK

Password

MS / TP connection parameters

MSTP ADDRESS

BAUDRATE

9600 

- Wait for network configuration to be saved and connect to the local network.

CONNECT TO INTERNET

Password

Cancel

Join



You may lose Wi-Fi access while the PECOSat recalibrates its radio. Please wait until your device automatically reconnects. This can take up to 30 seconds.

MS / TP connection parameters

MSTP ADDRESS

- After successful connection, select OK

CONNECTING TO NETWORK

Success!

OK

MS / TP connection parameters

MSTP ADDRESS

BAUDRATE

9600



Connect MS/TP

- To see your assigned IP Address, select the connected network. Press OK to return to the network screen

Disconnect

IP ADDRESS	
IP Address:	192.168.68.52
Subnet Mask:	255.255.252.0
Default Gateway:	192.168.68.1

OK

MS / TP connection parameters

MSTP ADDRESS

BAUDRATE

9600 ▼

Connect MS/TP

- To change networks, select Disconnect on the Connected Network screen.

Disconnect

Are you sure you would like to disconnect from Wi-Fi?

No Yes

OK

MS / TP connection parameters

MSTP ADDRESS


BAUDRATE

9600 ▼

Connect MS/TP

- After disconnecting from WiFi, the thermostat must be removed from power and power reapplied for the connection to be available again.

Documents / Resources

	<p>PECO CONTROL SYSTEMS T8168B-2 BACnet IP Connection Thermostat [pdf] Instructions T8168B-2 BACnet IP Connection Thermostat, T8168B-2, BACnet IP Connection Thermostat, IP Connection Thermostat, Connection Thermostat, Thermostat</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.