



PENTAIR OMNIFILTER Standard Filter Housing Instructions

[Home](#) » [Pentair](#) » PENTAIR OMNIFILTER Standard Filter Housing Instructions 



Contents

- [1 HOUSING O-RING](#)
- [2 Replacement Instructions](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

HOUSING O-RING

FITS PENTAIR UNDERSINK AND STANDARD HOUSINGS

- Fits Pentair® Omni filter® WHH10-VIH-SG-1 and USH-FF-SG-SP-4
- Replace at time of filter replacements to help prevent leaks

Replacement Instructions

1. Remove old o-ring. Clean out groove with clean cloth.
2. Lubricate new o-ring with clean silicone grease.
3. Press o-ring into groove, making sure it is completely level.



WARNING: Cancer and Reproductive Harm.



13845 Bishops Dr. | Suite 200

Brookfield, WI 53005 | United States

P: 262.238.4400 | Customer Service: 800.279.9404

tech-support@pentair.com | pentair.com

All indicated Pentair trademarks and logos are property of Pentair. Third party registered and unregistered trademarks and logos are the property of their respective owners. Use of these trademarks and/or brands does not imply endorsement or affiliation of their respective owners with Pentair.

© 2022 Pentair. All rights reserved. Assembled in Mexico.



Documents / Resources



[PENTAIR OMNIFILTER Standard Filter Housing](#) [pdf] Instructions

WHO-HD-SG-6, USACC-OR-6, OMNIFILTER, OMNIFILTER Standard Filter Housing, Standard Filter Housing, Filter Housing, Housing

References

-  [Pentair](#)