

PEREL® CFANAM7 Table Winder Collapsible Fan



PEREL CFANAM7 Table Winder Collapsible Fan User Manual

[Home](#) » [PEREL](#) » PEREL CFANAM7 Table Winder Collapsible Fan User Manual 

Contents

- [1 PEREL CFANAM7 Table Winder Collapsible Fan](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Models](#)
- [5 Introduction](#)
- [6 Safety Instructions](#)
- [7 General Guidelines](#)
- [8 Technical Specifications](#)
- [9 Operation](#)
- [10 Cleaning and Maintenance](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

PEREL®

PEREL CFANAM7 Table Winder Collapsible Fan



Product Usage Instructions

Introduction

Thank you for choosing Perel! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

Safety Instructions

Read and understand this manual and all safety signs before using this appliance. Class 2. Indoor use only.

FAQ

Q: What should I do if the device was damaged in transit?

A: If the device was damaged during transit, do not install or use it. Contact your dealer for assistance.

Models

CFANAM7/CFANAM9



CFANAM7


 




CFANAM9

Introduction

To all residents of the European Union Important environmental information about this product This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules. If in doubt, contact your local waste disposal authorities. Thank you for choosing Perel! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

Safety Instructions

-  Read and understand this manual and all safety signs before using this appliance.
-  Class 2.
-  Indoor use only.
-  The letter “T” on this model indicates this fan may be used in tropical climates (higher humidity levels and ambient temperature).
- This device can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play

with the device. Cleaning and user maintenance shall not be made by children without supervision.

- If the external flexible cable or cord of this device is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- Always connect the device to a grounded circuit to avoid risk of electrocution.
- Always disconnect mains power when the device is not in use or when servicing or maintenance activities are performed. Handle the power cord by the plug only.
- All cords and cables should be routed so that they will not be walked on or pinched by items placed upon or against them. Pay particular attention to the point where they exit the unit.
- Do not operate a visibly damaged device. Do not attempt to operate this device if the power cord has been frayed or broken.
- Always make sure to connect the device to an alternating current matching the value stated on the device.
- Never connect the device to a dimmer or rheostat.
- In the event of an operating problem, stop using the device immediately.
- This device should only be serviced by qualified service personnel.
- This device is for household use only.
- Protect this device from water and moisture. Never immerse the device in any liquid.

General Guidelines

- Refer to the Velleman® Service and Quality Warranty on the last pages of this manual.
- All modifications of the device are forbidden for safety reasons. Damage caused by user modifications to the device is not covered by the warranty.
- Only use the device for its intended purpose. Using the device in an unauthorised way will void the warranty.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.
- Nor Velleman Group nv nor its dealers can be held responsible for any damage (extraordinary, incidental or indirect) of any nature (financial, physical&) arising from the possession, use or failure of this product.
- Keep this manual for future reference.

Technical Specifications

CFANAM7

- power supply 220-240 V~, 50 Hz
- power consumption 55 W
- IP-numberIPX0
- dimensions 460 x 460 mm
- diameter 40 cm
- adjustable height [740-980-1280](tel:740-980-1280) mm
- weight 3.8 kg
- cable H03VVH2-F 2 x 0.5 mm², 1.5 m

Information requirements

Information to identify the model to which the information relates:

Description	Symbol	Value	Unit
Maximum fan flow rate	F	22.00	m ³ /min
Power input	P	42.53	W
Service value	SV	0.52	(m ³ /min)/W
Standby power consumption	PSB	0.0	W
Fan sound power level	LWA	63	dB(A)
Maximum air velocity	C	3.47	m/sec
Measurement standard for service value	IEC 60879:1996+ (corr. 1992)		
Contact	Velleman Group nv Legen Heirweg 33, 9890 Gavere, Belgium		

CFANAM9

- power supply 220-240 V~, 50 Hz
- power consumption 35 W
- IP-number IPX0
- dimensions 260 x 260 mm
- diameter 20 cm
- adjustable height 400-600-800 mm
- weight 2.0 kg
- cable H03VVH2-F 2 x 0.5 mm², 1.5 m

Information requirements

Information to identify the model to which the information relates:

Description		Symb ol	Value	Unit
Maximum fan flow rate		F	11.39	m³/min
Power input		P	29.0	W
Service value		SV	0.39	(m³/min)/ W
Standby power consumption		PSB	0	W
Fan sound power r level		LWA	61.4	dB(A)
Maximum air velocity		C	4.18	m/sec
Measurement standard for service value		IEC 60879:1996+ (corr. 1992)		
Contact	Velleman Group nv Legen Heirweg 33, 9890 Gavere, Belgium			

Operation

1. Install the fan on a dry, level and non-slippery surface.
2. Connect the fan to the mains.
3. Rotate the speed switch to the desired setting. (0 = off, 1 = low, 2 = medium, 3 = high)
4. Adjust the fan to the desired angle.
5. Switch off the fan and disconnect from the mains after use.

Cleaning and Maintenance

Before starting any cleaning activities:

1. Switch off the device.
2. Unplug the device's power cord from the outlet.

Cleaning

1. Switch off the appliance.
2. Unplug the appliance from the mains.
3. Clean the inlet and outlet ribs with a vacuum cleaner.

Do not disassemble the appliance.

Do not immerse the appliance in water or any other liquid. Do not clean the appliance with water and never allow water to enter the motor and housing.

Do not use harsh chemicals, cleaning solvents or strong detergents.

Storing

Store the device in its original package in a dry and clean place. Use this device with original accessories only.

Velleman Group nv cannot be held responsible in the event of damage or injury resulting from (incorrect) use of this device. For more info concerning this product and the latest version of this manual, please visit our website www.perel.eu. The information in this manual is subject to change without prior notice.

© COPYRIGHT NOTICE

The copyright to this manual is owned by Velleman Group nv. All worldwide rights reserved. No part of this manual may be copied, reproduced, translated or reduced to any electronic medium or otherwise without the prior written consent of the copyright holder.

Velleman® Service and Quality Warranty


Since its foundation in 1972, Velleman® acquired extensive experience in the electronics world and currently distributes its products in over 85 countries. All our products fulfil strict quality requirements and legal stipulations in the EU. In order to ensure quality, our products regularly go through an extra quality check, both by an internal quality department and by specialized external organizations. If, all precautionary measures notwithstanding, problems should occur, please make appeal to our warranty (see guarantee conditions). General Warranty Conditions Concerning Consumer Products (for EU):

- All consumer products are subject to a 24-month warranty on production flaws and defective material as from the original date of purchase.
- Velleman® can decide to replace an article with an equivalent article or to refund the retail value totally or partially when the complaint is valid and a free repair or replacement of the article is impossible, or if the expenses are out of proportion. You will be delivered a replacement article or a refund at the value of 100% of the purchase price in case of a flaw occurs in the first year after the date of purchase and delivery, or a replacement article at 50% of the purchase price or a refund at the value of 50% of the retail value in case of a flaw occurred in the second year after the date of purchase and delivery.
- Not covered by warranty:
 - all direct or indirect damage caused after delivery to the article (e.g. by oxidation, shocks, falls, dust, dirt, humidity...), and by the article, as well as its contents (e.g. data loss), compensation for loss of profits;
 - consumable goods, parts or accessories that are subject to an aging process during normal use, such as batteries (rechargeable, nonrechargeable, built-in or replaceable), lamps, rubber parts, drive belts... (unlimited list);
 - flaws resulting from fire, water damage, lightning, accident, natural disaster, etc.;
 - flaws caused deliberately, negligently or resulting from improper handling, negligent maintenance, abusive use or use contrary to the manufacturer's instructions;
 - damage caused by commercial, professional or collective use of the article (the warranty validity will be reduced to six (6) months when the article is used professionally);
 - damage resulting from inappropriate packing and shipping of the article;
 - all damage caused by modification, repair or alteration performed by a third party without written permission by Velleman®.
- Articles to be repaired must be delivered to your Velleman® dealer, solidly packed (preferably in the original packaging), and be completed with the original receipt of purchase and a clear flaw description.
- Hint: In order to save on cost and time, please reread the manual and check if the flaw is caused by obvious causes prior to presenting the article for repair. Note that returning a non-defective article can also involve handling costs.
- Repairs occurring after warranty expiration are subject to shipping costs.

- The above conditions are without prejudice to all commercial warranties.

The above enumeration is subject to modification according to the article (see article manual).

Documents / Resources

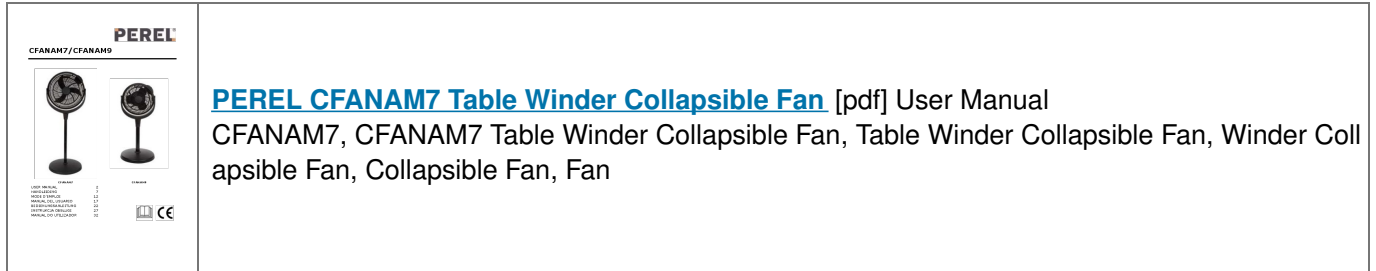

References

- [!\[\]\(448bd415caa8b52d2aeb4d58499267b2_img.jpg\) Details â€œ Own brands â€œ Velleman â€œ Wholesaler and developer of electronics](#)
- [!\[\]\(23be4c52910c50d5908bb101588c4f4e_img.jpg\) Velleman â€œ Wholesaler and developer of electronics](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.