



## PEREL E305D3 24 Hour Timer User Manual

[Home](#) » [PEREL](#) » PEREL E305D3 24 Hour Timer User Manual 

# PEREL<sup>®</sup>

E305D3 – E305D3-G  
24 HOUR TIMER



USER MANUAL

## Contents

- [1 Introduction](#)
- [2 Safety Instructions](#)
- [3 Operation](#)
- [4 Cleaning and Maintenance](#)
- [5 Technical Specifications](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

## Introduction

### To all residents of the European Union

#### Important environmental information about this product



This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules.

If in doubt, contact your local waste disposal authorities.

Thank you for choosing Perel! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

## Safety Instructions

- Indoor use only.
- Keep the device away from children and unauthorised users.
- Do not connect to an appliance with a load exceeding the capacity of the timer (see Technical Specifications).
- Do not use a timer to control an appliance containing a heating element (cooking appliance, heater, iron...).
- Never leave the appliance unattended while in use.
- Always make sure the plug of the connected appliance is fully inserted into the timer.
- Never plug a timer into another timer.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.

## Operation

**Note:** use the timer only between 0 °C and 55°C

### Setting the Time

1. Rotate the dial in a clockwise direction and set the dial corresponding the time.
2. Example: At 2 pm, set the dial at 14. Each dash between the numbers represents 15 minutes.

### Setting the Timer

1. The timer delay is determined by the black push segments around the dial. Each segment represents 15

minutes. Push down all the segments for the time you want the connected appliance to be switched on.

Example: The connected appliance must be switched on at 9 am and switched off at 6 pm. Push down all the segments between 9 and 18 in ascending order.

2. Next, connect the timer to the mains. Make sure the timer is switched off.
3. Connect the appliance to the timer and switch on the appliance. Finally, switch on the timer.

## Cleaning and Maintenance

- Remove the timer from the mains before cleaning.
- Wipe with a dry cloth. Do not immerse in water or any liquid.

## Technical Specifications

power supply ..... 230 V  
max. power ..... 3680 W / 16 A  
dimensions ..... 121.5 x 75.5 x 76 mm

Use this device with original accessories only. Velleman nv cannot be held responsible in the event of damage or injury resulting from (incorrect) use of this device. For more info concerning this product and the latest version of this manual, please visit our website [www.perel.eu](http://www.perel.eu). The information in this manual is subject to change without prior notice.

### © COPYRIGHT NOTICE

The copyright to this manual is owned by Velleman nv. All worldwide rights reserved. No part of this manual may be copied, reproduced, translated or reduced to any electronic medium or otherwise without the prior written consent of the copyright holder.

### Velleman® Service and Quality Warranty

Since its foundation in 1972, Velleman® acquired extensive experience in the electronics world and currently distributes its products in over 85 countries.

All our products fulfil strict quality requirements and legal stipulations in the EU. In order to ensure the quality, our products regularly go through an extra quality check, both by an internal quality department and by specialized external organisations. If, all precautionary measures notwithstanding, problems should occur, please make appeal to our warranty (see guarantee conditions).

### General Warranty Conditions Concerning Consumer Products (for EU):

- All consumer products are subject to a 24-month warranty on production flaws and defective material as from the original date of purchase.
- Velleman® can decide to replace an article with an equivalent article, or to refund the retail value totally or partially when the complaint is valid and a free repair or replacement of the article is impossible, or if the expenses are out of proportion.


You will be delivered a replacing article or a refund at the value of 100% of the purchase price in case of a flaw occurred in the first year after the date of purchase and delivery, or a replacing article at 50% of the purchase price or a refund at the value of 50% of the retail value in case of a flaw occurred in the second year after the date of purchase and delivery.

- Not covered by warranty:
  - all direct or indirect damage caused after delivery to the article (e.g. by oxidation, shocks, falls, dust, dirt, humidity...), and by the article, as well as its contents (e.g. data loss), compensation for loss of profits;
  - consumable goods, parts or accessories that are subject to an aging process during normal use, such as batteries (rechargeable, nonrechargeable, built-in or replaceable), lamps, rubber parts, drive belts... (unlimited list);
  - flaws resulting from fire, water damage, lightning, accident, natural disaster, etc....;

- flaws caused deliberately, negligently or resulting from improper handling, negligent maintenance, abusive use or use contrary to the manufacturer's instructions;
  - damage caused by a commercial, professional or collective use of the article (the warranty validity will be reduced to six (6) months when the article is used professionally);
  - damage resulting from an inappropriate packing and shipping of the article;
  - all damage caused by modification, repair or alteration performed by a third party without written permission by Velleman®.
- Articles to be repaired must be delivered to your Velleman® dealer, solidly packed (preferably in the original packaging), and be completed with the original receipt of purchase and a clear flaw description.
  - Hint: In order to save on cost and time, please reread the manual and check if the flaw is caused by obvious causes prior to presenting the article for repair. Note that returning a non-defective article can also involve handling costs.
  - Repairs occurring after warranty expiration are subject to shipping costs.
  - The above conditions are without prejudice to all commercial warranties.

**Made in PRC**  
**Imported for PEREL by Velleman nv**  
**Legen Heirweg 33, 9890 Gavere, Belgium**  
[www.perel.eu](http://www.perel.eu)

## Documents / Resources

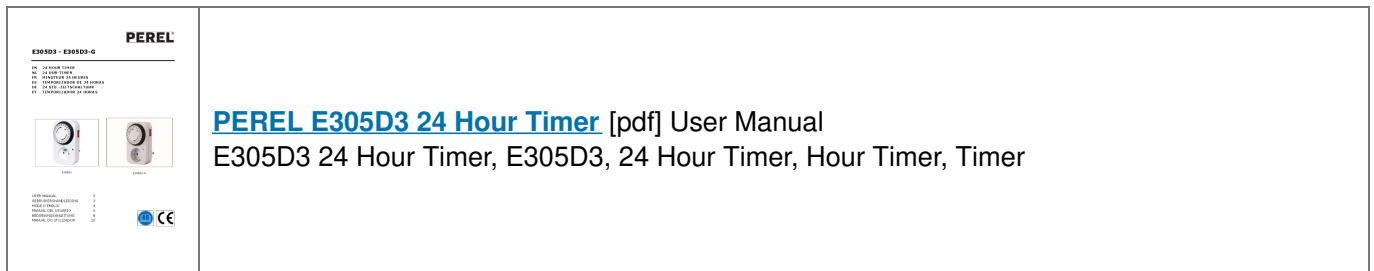

## References

- Details “Own brands” Velleman “Wholesaler and developer of electronics