




# PEREL E305DM-1 Mini 24 Hour Timer User Manual

[Home](#) » [PEREL](#) » PEREL E305DM-1 Mini 24 Hour Timer User Manual 



 
 
E305DM-1  
E305DM-G(-1)



E305DM-1



E305DM-G(-1)



USER MANUAL



## Contents

- 1 Introduction
- 2 Symbols
- 3 Safety Instructions
- 4 Operation
- 5 Cleaning and Maintenance
- 6 Technical Specifications
- 7 Documents / Resources
  - 7.1 References
- 8 Related Posts

## Introduction

To all residents of the European Union Important environmental information about this product



This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service.

Respect the local environmental rules.

If in doubt, contact your local waste disposal authorities.

Thank you for choosing Perel! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

## Symbols

1. CE marking.
2. Read and understand this manual and all safety signs before using this appliance.
3. Indoor use only.
4. Triman.
5. Green dot.

## Safety Instructions

- This device can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
- Do not connect to an appliance with a load exceeding the capacity of the timer (see Technical Specifications).
- Do not use a timer to control an appliance containing a heating element (cooking appliance, heater, iron...).
- Never leave the appliance unattended while in use.
- Always make sure the plug of the connected appliance is fully inserted into the timer.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.

## Operation

**Note:** use the timer only between 0 °C and 55 °C.

### Setting the Time

1. Rotate the dial in a clockwise direction and set the dial corresponding the time.
2. Example: At 2 pm, set the dial at 14. Each dash between the numbers represents 30 minutes.

### Setting the Timer

1. The timer delay is determined by the black push segments around the dial. Each segment represents 30 minutes. Push down all the segments for the time you want the connected appliance to be switched on.

**Example:** The connected appliance must be switched on at 9 am and switched off at 6 pm. Push down all the segments between 9 and 18 in ascending order.

2. Next, connect the timer to the mains. Make sure the timer is switched off.
3. Connect the appliance to the timer and switch on the appliance. Finally, switch on the timer.

### Manual On/Off

The pre-set On/Off commands can be interrupted by using the manual override switch located on the side of the unit. When switched to the position "I", the connected appliance is switched on permanently.

### Cleaning and Maintenance

- Remove the timer from the mains before cleaning.
- Wipe with a dry cloth. Do not immerse in water or any liquid.

### Technical Specifications

power supply ..... 230 V  
max. power..... 3680 W/16 A  
dimensions ..... 54 x 103 x 70 mm  
IP rating ..... IP20

Use this device with original accessories only.

Velleman Group nv cannot be held responsible in the event of damage or injury resulting from (incorrect) use of this device. For more info concerning this product and the latest version of this manual, please visit our website

[www.velleman.eu](http://www.velleman.eu). The information

in this manual is subject to change without prior notice.

#### © COPYRIGHT NOTICE

The copyright to this manual is owned by Velleman Group nv. All worldwide rights reserved. No part of this manual may be copied, reproduced, translated or reduced to any electronic medium or otherwise without the prior written consent of the copyright holder.

The logo for PEREL, featuring the word "PEREL" in a bold, dark blue, sans-serif font. A small registered trademark symbol (®) is located to the upper right of the "L". There are two small orange squares: one at the top left of the "P" and one at the bottom right of the "L".

### Documents / Resources



## [PEREL E305DM-1 Mini 24 Hour Timer](#) [pdf] User Manual

E305DM-1, E305DM-G, E305DM-G-1, E305DM-1 Mini 24 Hour Timer, Mini 24 Hour Timer, 24 Hour Timer, Timer

## References

- [🌐 Que Faire de mes Déchets ? Découvrez les solutions pour tous vos déchets et nos conseils pour en produire moins.](#)
- [🇳🇱 Velleman â€“ Wholesaler and developer of electronics](#)