

PEREL®

PEREL WC202 Stand for
Scoreboard



PEREL WC202 Stand for Scoreboard User Manual

[Home](#) » [PEREL](#) » PEREL WC202 Stand for Scoreboard User Manual 

Contents

- 1 PEREL WC202 Stand for Scoreboard
- 2 Product Information
- 3 Product Usage Instructions
- 4 Introduction
- 5 Safety Instructions
- 6 General Guidelines
- 7 Overview
- 8 Installation
- 9 Care and Maintenance
- 10 Technical Specifications
- 11 Velleman® Service and Quality
Warranty
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

PEREL®

PEREL WC202 Stand for Scoreboard



Specifications

- **Dimensions:** 108 x 18.5 x 12 cm
- **Weight:** 10 kg

Product Information

The WC202 is a versatile stand designed for mounting scoreboards. It comes with various components including long and short bars, base, wheel bolts, locknuts, washers, knobs, plastic plugs, and more. The stand should be assembled following the provided illustrations in the manual.

Product Usage Instructions

Installation

1. Disconnect the scoreboard power supply before installing.
2. Assemble the stand according to the illustrations provided in the manual.
3. Place the assembled stand upright and mount the scoreboard (not included) as shown in the illustrations.
4. Tighten all nuts and bolts to ensure a solid and safe assembly.

Important Notes

Use original accessories only with this device.

Velleman nv is not liable for any damage or injury resulting from incorrect use of the device.

For More Information

For additional details about this product and the most up-to-date version of the manual, please visit our website at www.velleman.eu.


FAQ

Q: Can I use this stand outdoors?

A: No, this stand is designed for indoor use only.

Introduction



-  To all residents of the European Union
- Important environmental information about this product
- This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules.
- If in doubt, contact your local waste disposal authorities.
- Thank you for choosing Perel! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

Safety Instructions



Read and understand this manual and all safety signs before using this appliance.



Indoor use only.


This device can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.

General Guidelines

- Refer to the Velleman® Service and Quality Warranty on the last pages of this manual.
- All modifications of the device are forbidden for safety reasons. Damage caused by user modifications to the device is not covered by the warranty.
- Only use the device for its intended purpose. Using the device in an unauthorised way will void the warranty.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.
- Nor Velleman nv nor its dealers can be held responsible for any damage (extraordinary, incidental or indirect) – of any nature (financial, physical...) arising from the possession, use or failure of this product.
- Keep this manual for future reference.

Overview

Refer to the illustrations on page 2 of this manual.

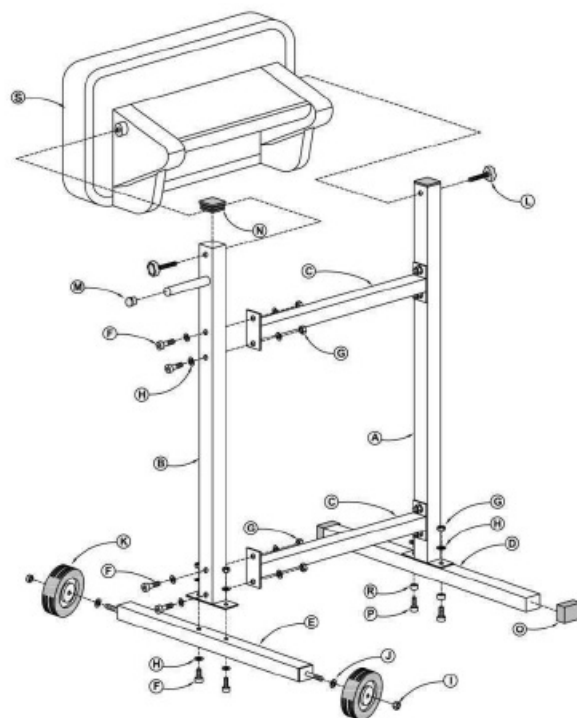

A	long bar	1 x
B	long bar with handle	1 x
C	short bar	2 x
D	base	1 x
E	base with wheel bolts	1 x
F	socket head bolt 8M, long	10 x
G	locknut 8M	12 x
H	flat washer 8M	22 x
I	locknut	2 x
J	wheel washer	2 x
K	wheel	2 x
L	knob bolt	2 x
M	plastic plug, round	1 x
N	plastic plug, square	2 x
O	plastic cap, square	2 x
P	socket head bolt 8M, short	2 x
R	spacer	2 x
S	scoreboard	not incl.

Installation

Disconnect the scoreboard power supply before installing.

1. Assemble the stand as indicated in the illustration.
2. Place the assembled stand upright and mount the scoreboard (not included) as indicated in the illustration.
3. Tighten all nuts and bolts once more to make sure that the assembly is solid and safe.

Care and Maintenance

- All screws should be tightened and free of corrosion.
- The parts should not be deformed, modified or tampered with e.g. do not drill extra holes, do not change the location of the connections...
- Mechanically moving parts must not show any signs of wear and tear.
- Wipe the device regularly with a moist, lint-free cloth. Do not use alcohol or solvents.
- Do not immerse the device in any liquid.
- There are no user-serviceable parts. Contact your dealer for spare parts if necessary.

Technical Specifications

dimensions 108 x 18.5 x 12 cm
weight 10 kg

Use this device with original accessories only. Velleman nv cannot be held responsible in the event of damage or injury resulting from (incorrect) use of this device. For more info concerning this product and the latest version of this manual, please visit our website www.velleman.eu. The information in this manual is subject to change without prior notice.

© COPYRIGHT NOTICE

The copyright to this manual is owned by Velleman nv. All worldwide rights reserved. No part of this manual may be copied, reproduced, translated or reduced to any electronic medium or otherwise without the prior written consent of the copyright holder.

Velleman® Service and Quality Warranty

Since its foundation in 1972, Velleman® acquired extensive experience in the electronics world and currently distributes its products in over 85 countries.

- All our products fulfil strict quality requirements and legal stipulations in the EU. In order to ensure the quality, our products regularly go through an extra quality check, both by an internal quality department and by specialized external organisations. If, all precautionary measures notwithstanding, problems should occur, please make appeal to our warranty (see guarantee conditions). General Warranty Conditions Concerning Consumer Products (for EU):

- All consumer products are subject to a 24-month warranty on production flaws and defective material as from the original date of purchase.

Velleman® can decide to replace an article with an equivalent article, or to refund the retail value totally or partially when the complaint is valid and a free repair or replacement of the article is impossible, or if the expenses are out of proportion.

- You will be delivered a replacing article or a refund at the value of 100% of the purchase price in case of a flaw

occurred in the first year after the date of purchase and delivery, or a replacing article at 50% of the purchase price or a refund at the value of 50% of the retail value in case of a flaw occurred in the second year after the date of purchase and delivery.

Not covered by warranty

- all direct or indirect damage caused after delivery to the article (e.g. by oxidation, shocks, falls, dust, dirt, humidity...), and by the article, as well as its contents (e.g. data loss), compensation for loss of profits;
- consumable goods, parts or accessories that are subject to an aging process during normal use, such as batteries (rechargeable, non-rechargeable, built-in or replaceable), lamps, rubber parts, drive belts... (unlimited list);
- flaws resulting from fire, water damage, lightning, accident, natural – flaws caused deliberately, negligently or resulting from improper handling, negligent maintenance, abusive use or use contrary to the manufacturer's instructions; manufacturer's instructions;
- damage caused by a commercial, professional or collective use of the article (the warranty validity will be reduced to six (6) months
- when the article is used professionally);
- damage resulting from an inappropriate packing and shipping of the article;
- all damage caused by modification, repair or alteration performed by a third party without written permission by Velleman®.
- Articles to be repaired must be delivered to your Velleman® dealer, solidly packed (preferably in the original packaging), and be completed with the original receipt of purchase and a clear flaw description.
- Hint: In order to save on cost and time, please reread the manual and check if the flaw is caused by obvious causes prior to presenting the article for repair. Note that returning a non-defective article can also involve handling costs.
- Repairs occurring after warranty expiration are subject to shipping costs.
- The above conditions are without prejudice to all commercial warranties.
- The above enumeration is subject to modification according to the article (see article's manual).


Made in PRC

Imported for PEREL by Velleman nv



Legen Heirweg 33, 9890 Gavere, Belgium

www.perel.eu

Documents / Resources

	<p>PEREL WC202 Stand for Scoreboard [pdf] User Manual WC202, WC202 Stand for Scoreboard, Stand for Scoreboard, Scoreboard</p>
---	---

References

-  [Details â€“ Own brands â€“ Velleman â€“ Wholesaler and developer of electronics](#)
-  [Velleman â€“ Wholesaler and developer of electronics](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.